



# Spin Master Hatchimal Draggie Fur Replacement

Removing the fur from the Spin Master Hatchimal Draggie for cleaning or replacement.

Written By: Kimberly Searles



---

## INTRODUCTION

Toys go through a lot, and many times they get dirty. This guide will show you how to remove the fur for further cleaning or full replacement.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Utility Scissors](#) (1)
  - [Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Plastic Wing Replacement



- lay the Hatchimal on its side.

## Step 2




- Using the plastic opening tool, push in on the purple clip.

### Step 3



- Pull the wing off of the hatchimal.
- ⓘ The wing should come off with little resistance.

### Step 4 — Fur Replacement

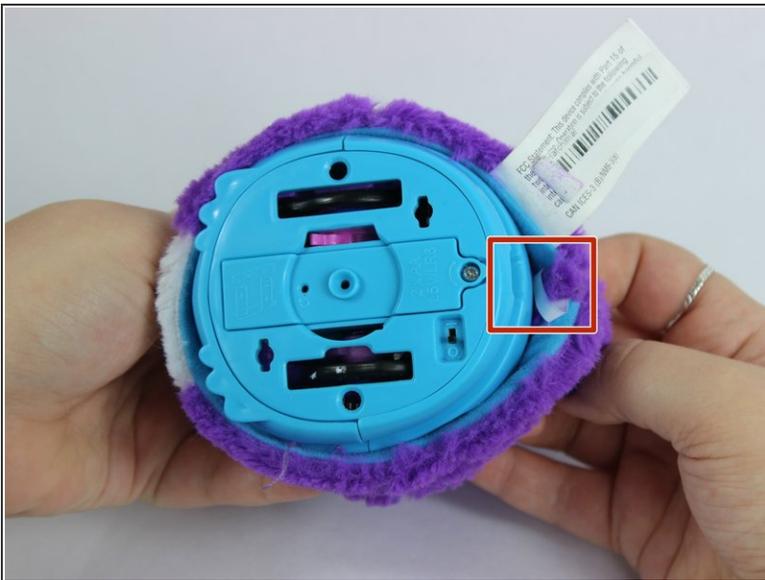

- Cut the fur retaining zip-tie with a pair of scissors.

## Step 5



- Lift the fur up until it can't go further.

## Step 6




- Use the spudger tool to push up on the black clip to free it.
- Pull the clip out.

## Step 7





- Lift fur up to reveal the next set of clips.
- Insert a spudger to push up on the black clip to free it.
- Pull out the clip.

## Step 8

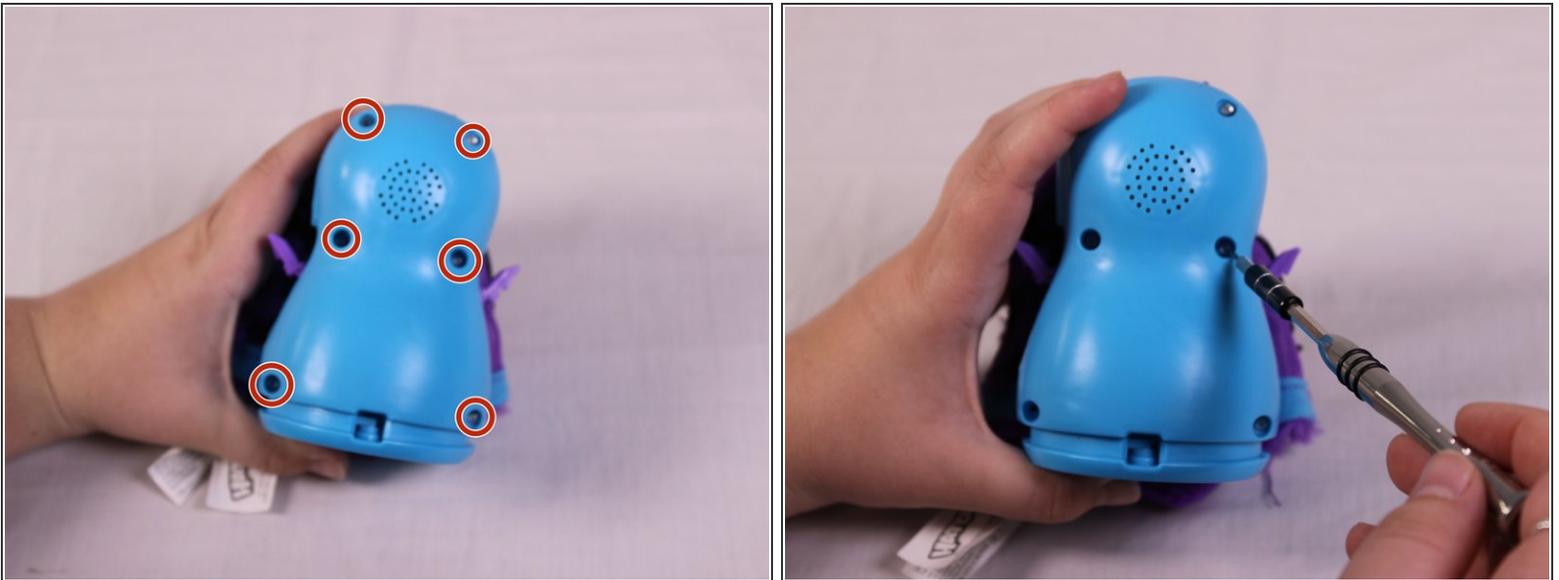




- Lift the fur up and over the Hatchimals Head.
- Remove the six 12mm Phillips #00 screws from then body.

## Step 9

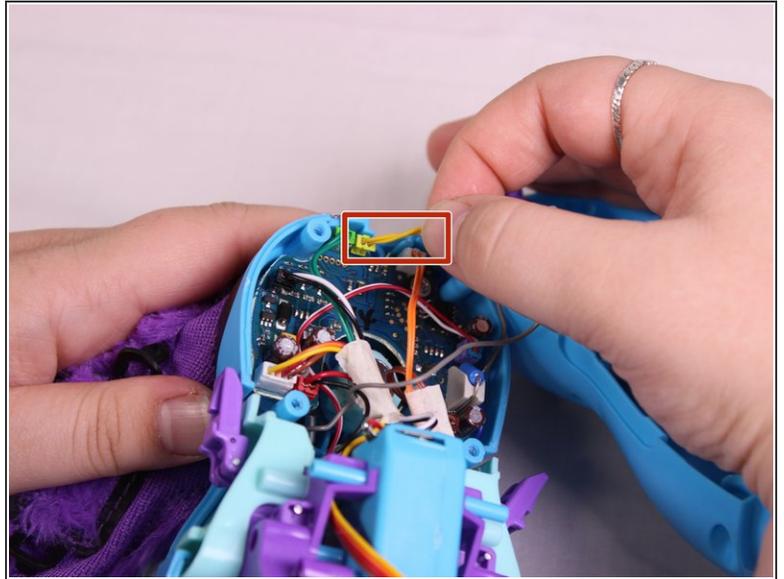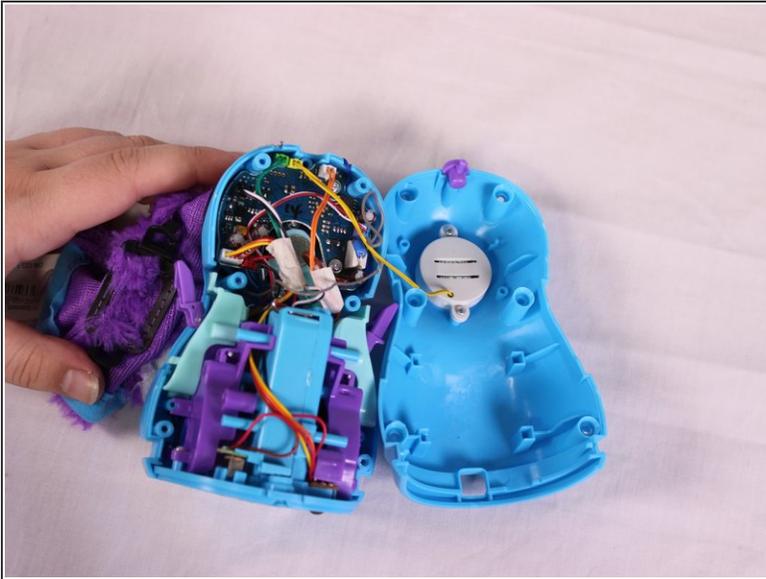



- Pull the casing apart.
- Remove the yellow speaker cable.

## Step 10

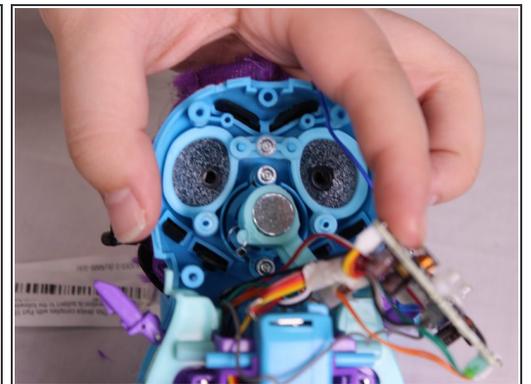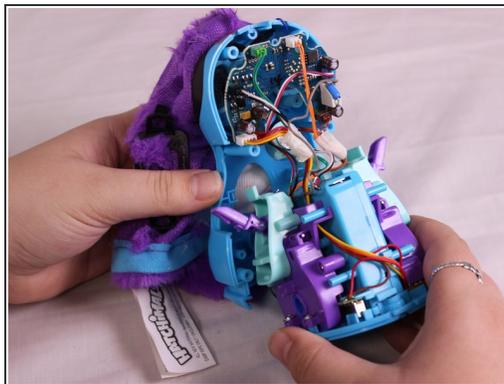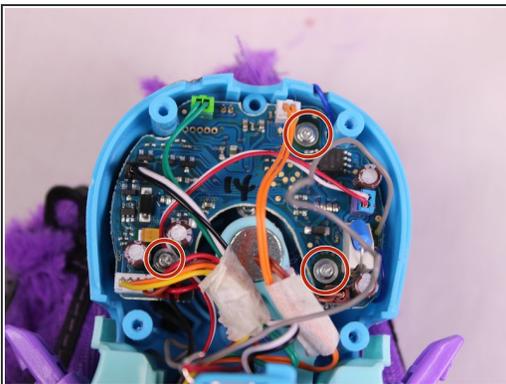

- Remove the three 7mm Phillips #00 screws from the head.
- Remove the wheel base and the circuit board carefully not to damage the spring.

## Step 11

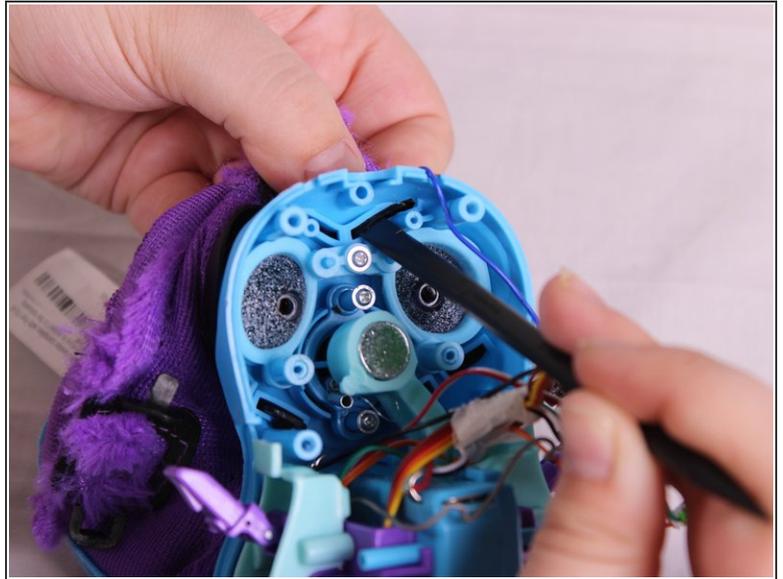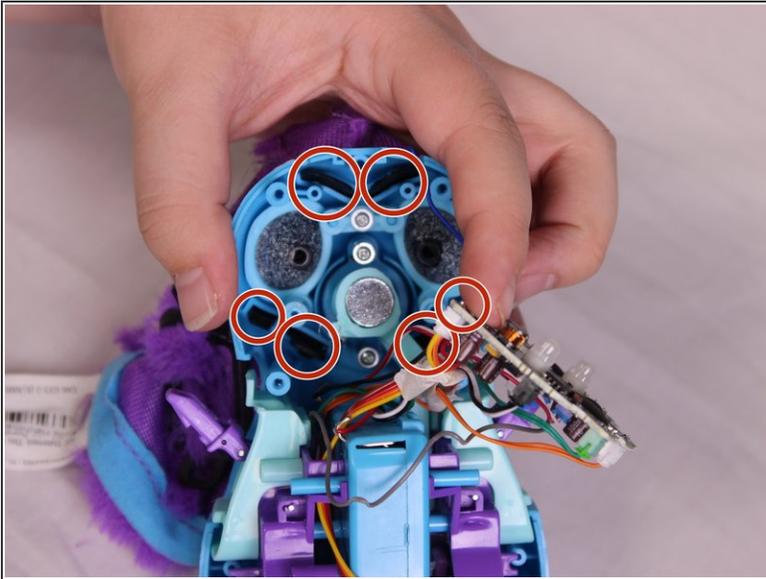

- Push the six black fur clips out using the spudger.
- Remove the fur completely.

To reassemble your device, follow these instructions in reverse order.