



HP Stream 13-c010nr Charging Port Replacement

This guide will teach you how to replace the Charging Ports on the HP Stream 13-c010nr.

Written By: Keegan Lapham



INTRODUCTION

This guide will teach you how to replace the Charging Ports on the HP Stream 13-c010nr.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Precision Tweezers Set](#) (1)
-

Step 1 — HP Stream 13-c010nr Disassembly



- Remove the five rubber feet from the bottom of the laptop with a plastic opening tool.

Step 2




- Remove the thirteen 5mm Phillips #0 screws from the bottom case.

Step 3




- Flip the laptop over and open it up.
- Wedge a plastic opening tool between the keyboard and bottom case, pry upwards to separate the two pieces.
- Lift up the keyboard.
- ⓘ Ribbon cables still connect the two pieces.

Step 4

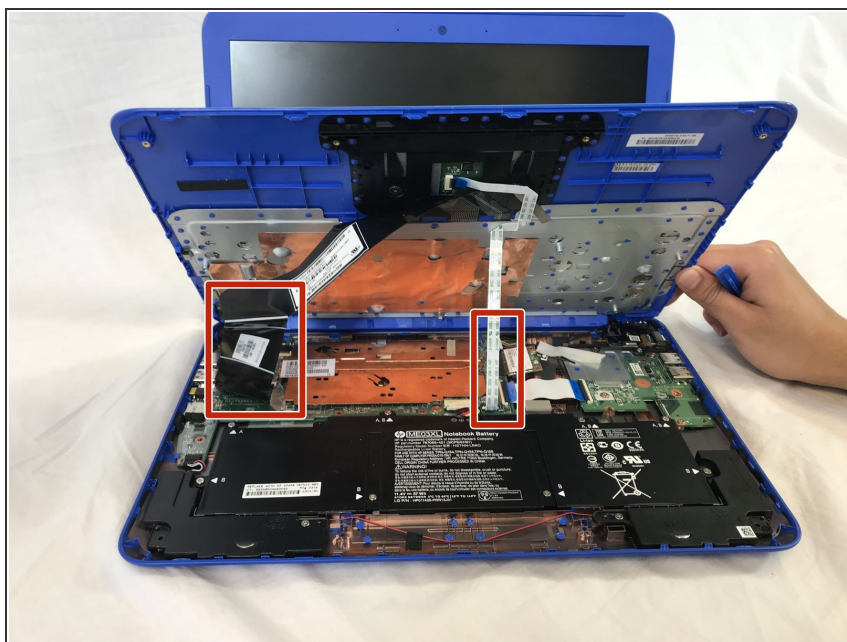



- Use a spudger to flip up the retaining flaps on the keyboard ribbon cable [ZIF](#) sockets.
- Pull up the ribbon cables from their sockets.

Step 5 — Charging Port

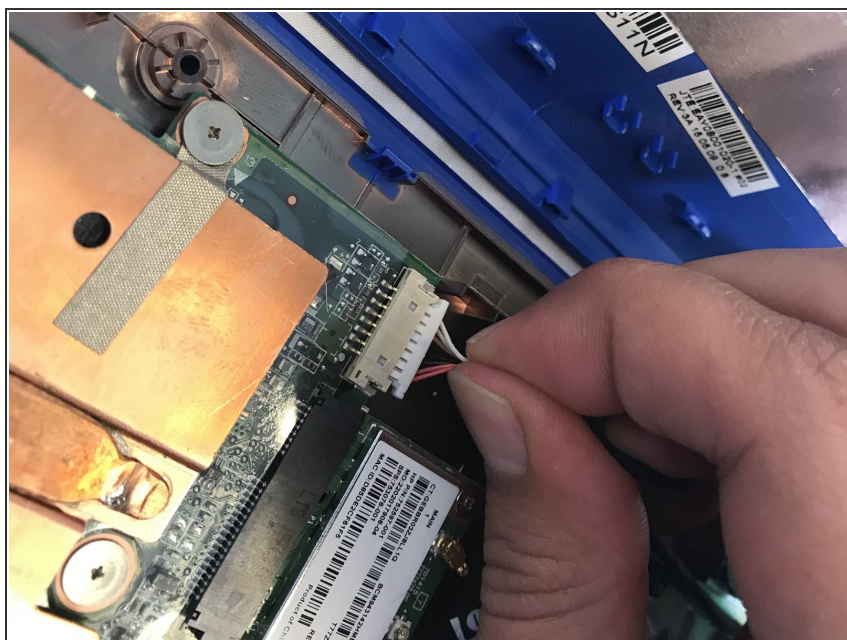

- Disconnect the charging port from the motherboard.

Step 6

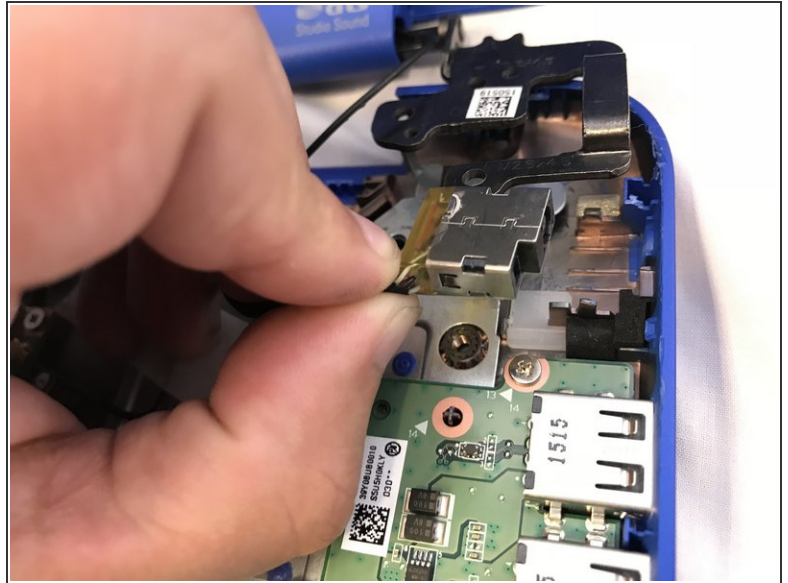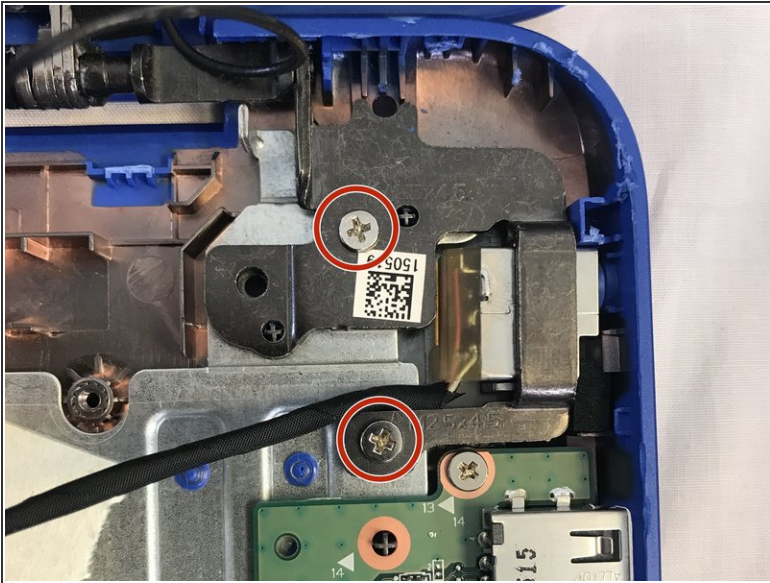

- Remove the two 5mm Phillips screws from the charging port.
- Remove the bracket.
- Pull out the charging port.

To reassemble your device, follow these instructions in reverse order.