



HP 15-ac142dx Fan Replacement

Successfully demonstrates, in detail, how to replace the fan.

Written By: Nicole Mathieu






TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Fan

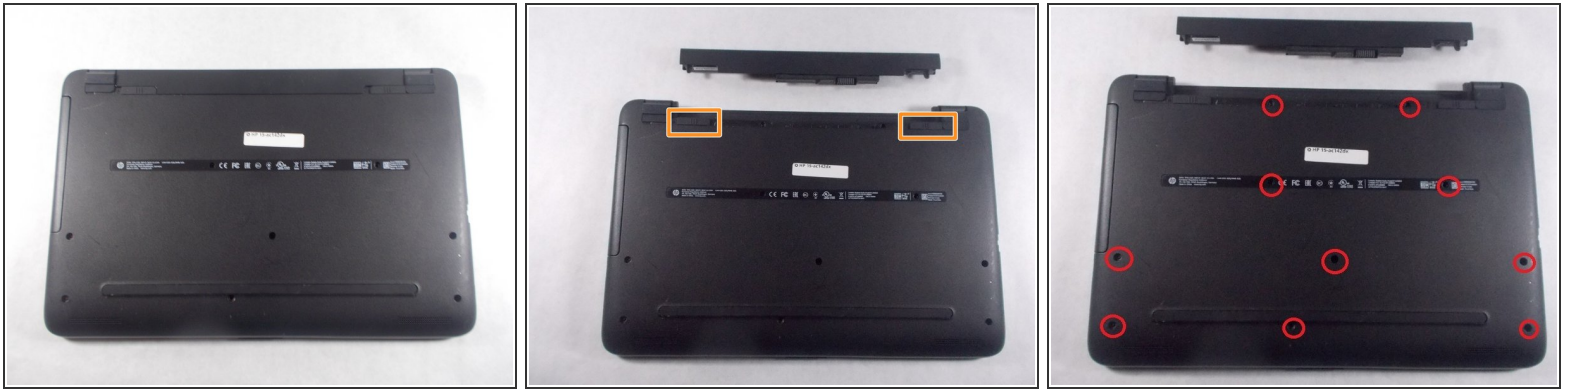


- With the computer off, turn it over onto a flat surface.
- Remove the battery by sliding the battery lock.
- Remove the 10 screws.

Step 2

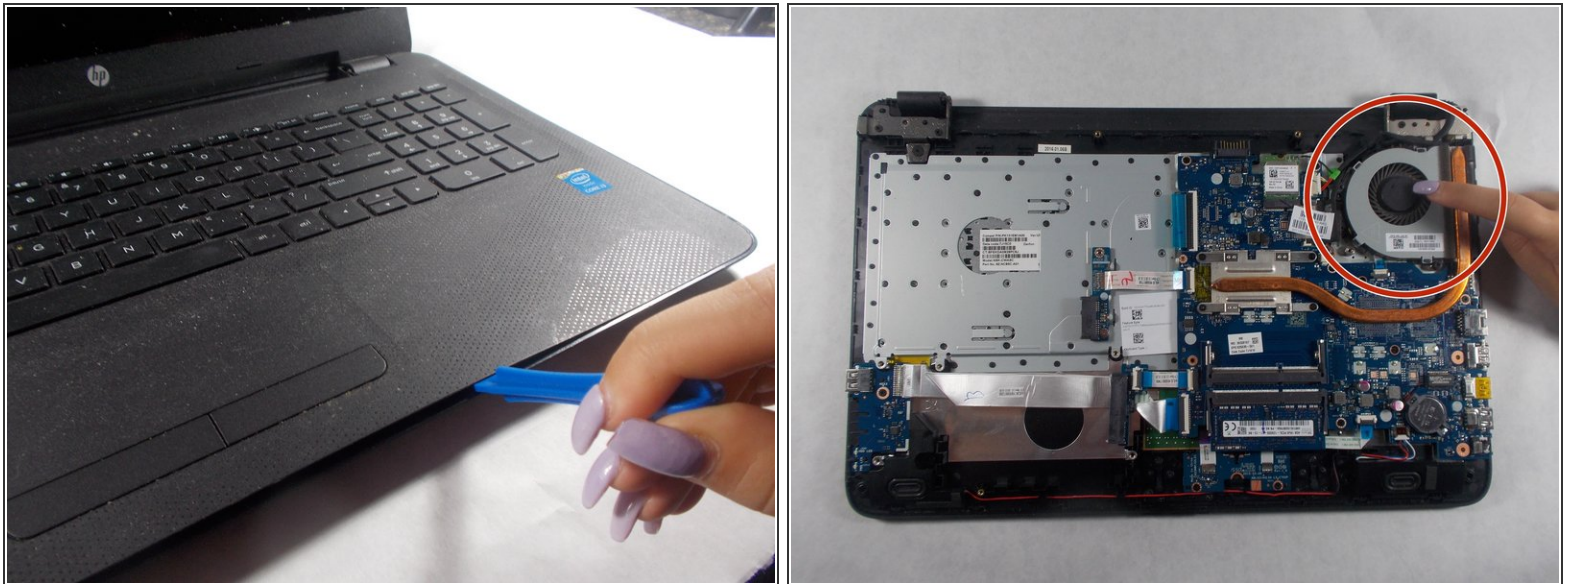

- Flip the computer back over and use the iFixit tool in order to pry the keyboard from the bottom of the computer.
- Once off you will be able to see the fan.

Step 3

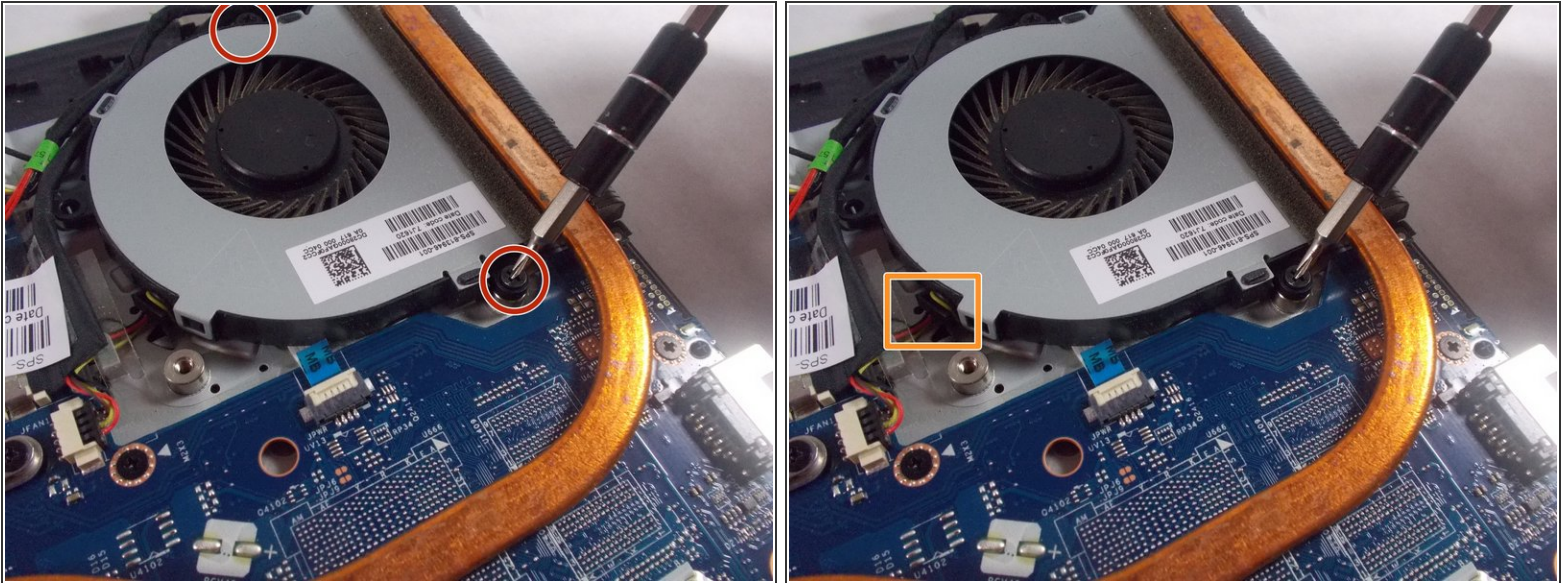

- Remove the two screws on either side of the fan.
- Unplug the wire that is connected to the fan.
- Remove the fan

To reassemble your device, follow these instructions in reverse order.