



Toshiba Satellite C55-A5310 RAM Replacement

How to replace the Toshiba Satellite C55-A5310 RAM.

Written By: Kari Rodgers





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [JIS #000 Screwdriver](#) (1)
-

Step 1 — Battery



- Push the left tab with your left hand.
- Then push the right tab with your right hand.
- While your right hand is still pushing, remove the battery with your left hand.

Step 2 — RAM




- Remove one JIS #000 screw.
- ⓘ This screw does not come out all the way, but you will still be able to open the back panel.

Step 3



- Use the plastic opening tool to pry the panel open. Be sure to do this on all four sides. Then the panel will lift off.

Step 4

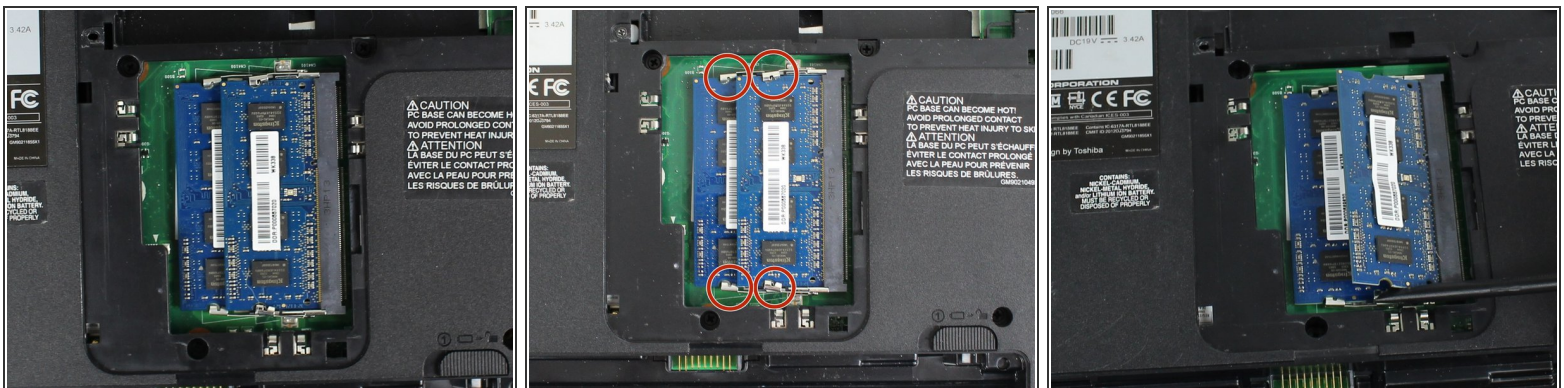

- Take the nylon spudger, and push the prongs so that it releases the RAM.

Step 5



- Once the RAM has lifted, use tweezers or fingers to pull it out.

To reassemble your device, follow these instructions in reverse order.