




Supersonic Matrix SC-91MID Screen Replacement

This replacement guide will offer step-by-step...

Written By: Norikuni Nishikawa

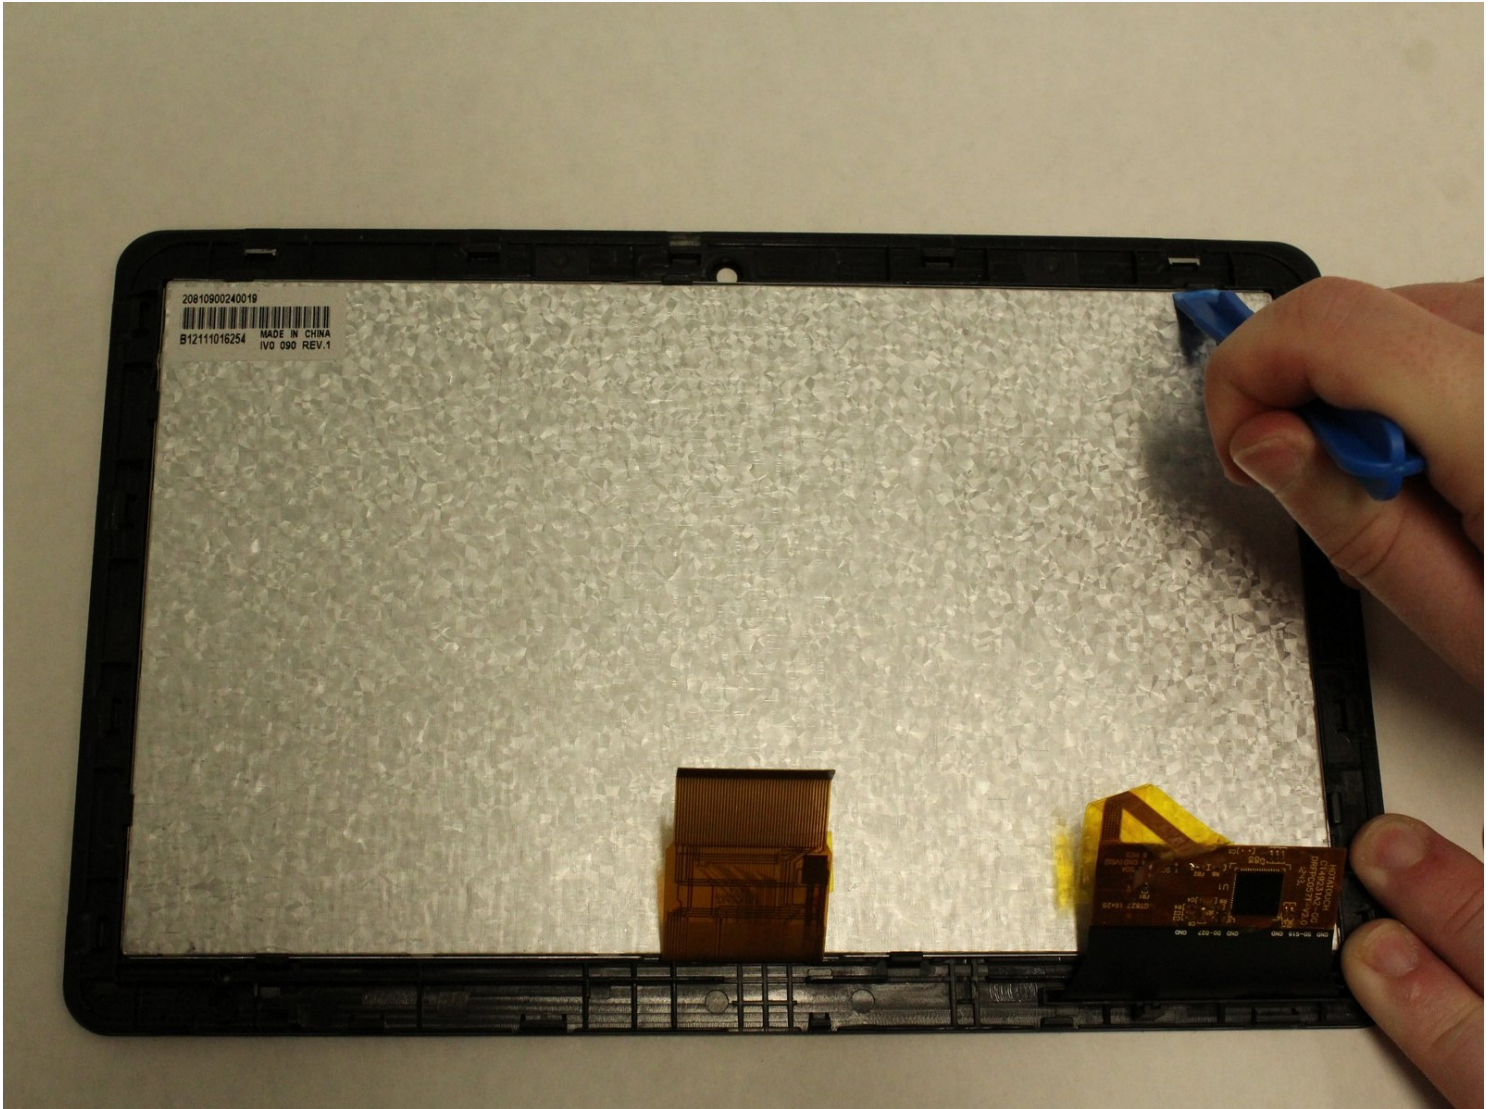


INTRODUCTION

This replacement guide will offer step-by-step information on how to replace a Supersonic Matrix SC-91MID screen

TOOLS:


[iFixit Opening Tool](#) (1)

Step 1 — Screen

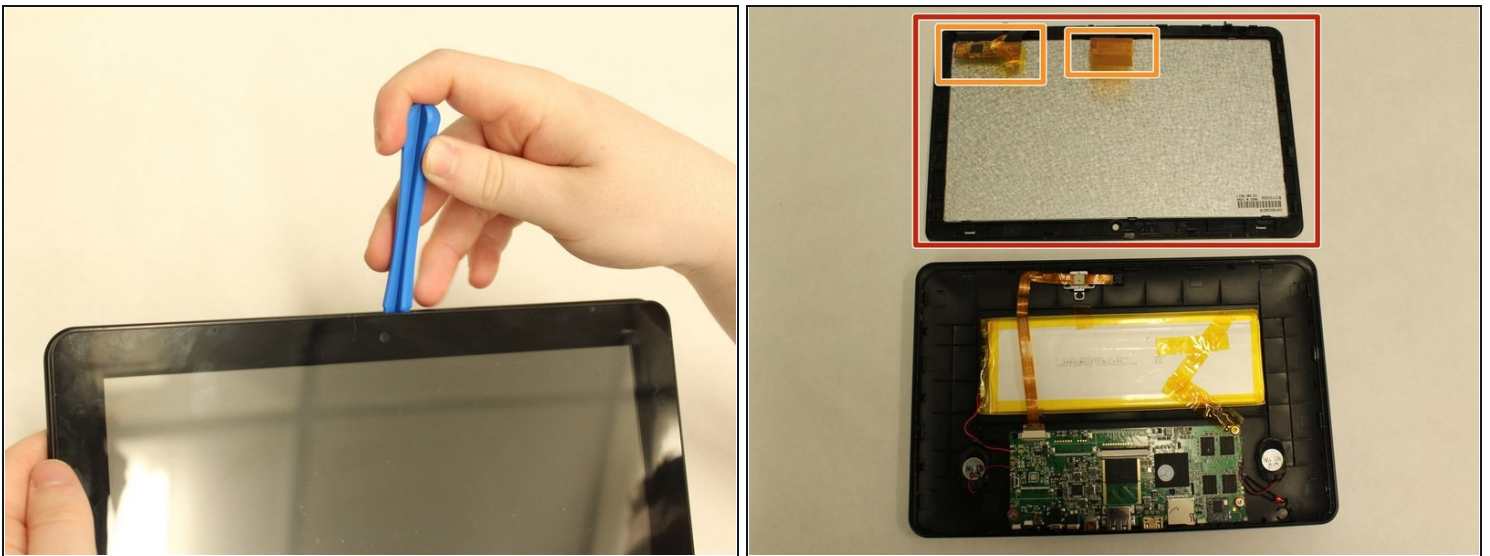

- Place the plastic opening tool between the screen and the main component and pry open between the two. Once removed place the main component in a safe place and continue working on the screen section (highlighted in red).
- Be aware of the wires when removing the display screen from the main component (highlighted in orange)

Step 2

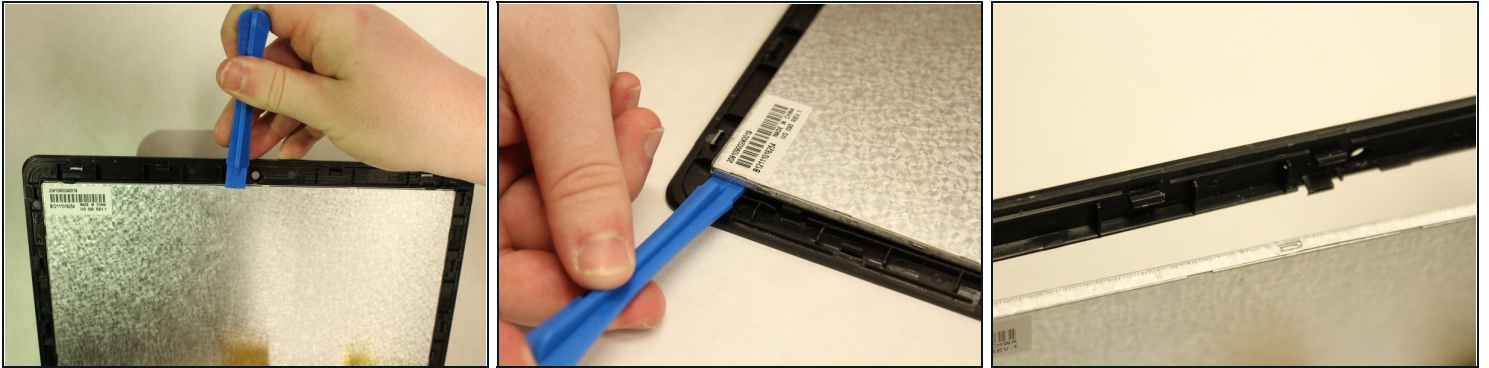


- Place the plastic opening tool between the metal screen plate and the black front casing.
- There are small clips where the plastic opening tool can be placed to help pry the screen from the casing.

Step 3



- Continue to slide the opening tool along the length of the casing until there is a clear separation between the screen and the cover (as shown in the third image).

Step 4

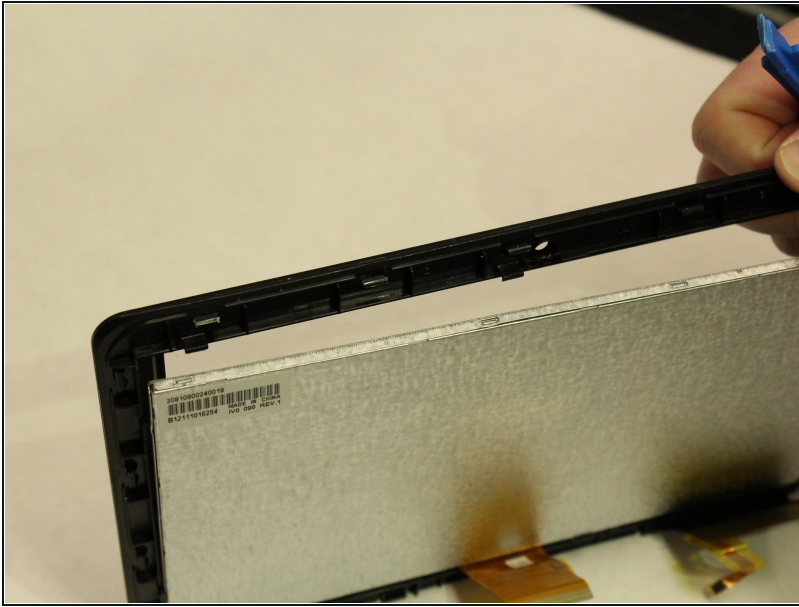

- Once there is a clearing, carefully remove the screen from the black cover. You now have separated the screen from the tablet device and are now ready to replace screen.

To reassemble your device, follow these instructions in reverse order.