




HP Compaq 6510b Hard Drive Replacement

How to replace the HP Compaq 6510b Hard Drive.

Written By: Joseph Noudom

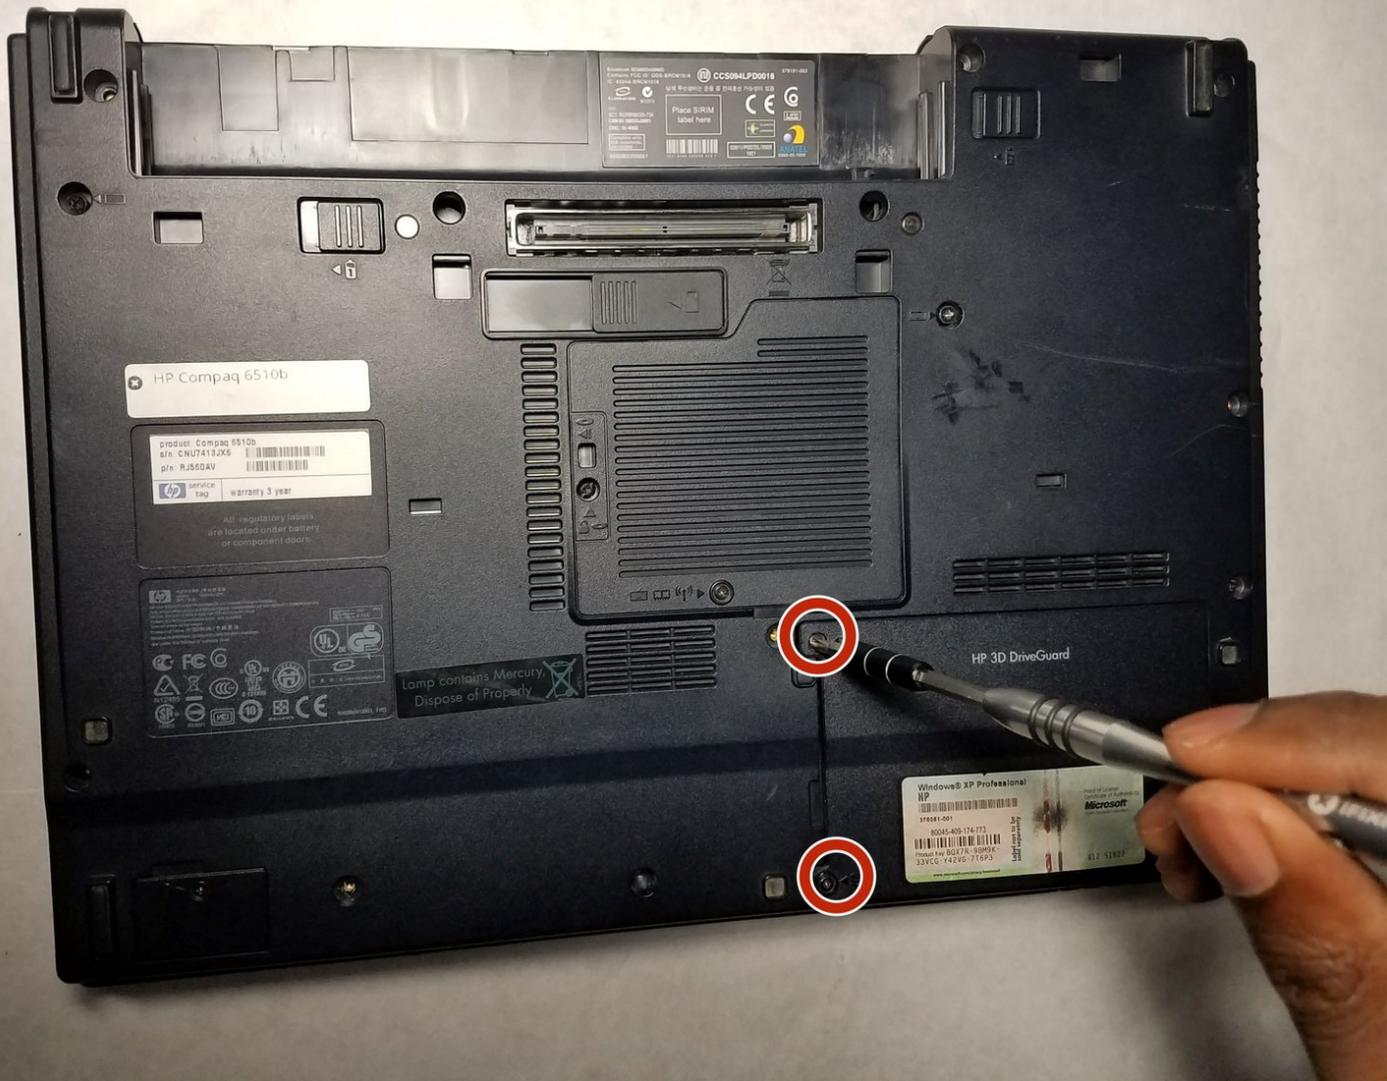

 **TOOLS:**

- **JIS #1** (1)
-

Step 1 — Battery



- Flip the computer over so the backside is facing you.
- Using the two prongs that are located in the back, slide the further left prong and the upper right prong to the left as indicated in the image.
- Slide the battery out.

Step 2 — Hard Drive



- Flip the laptop over and locate the sign that says HP 3D DriveGuard.
- Remove the two 5mm JIS #1 screws with your screwdriver.
- Carefully lift up the cover.
- Carefully lift up the hard drive from the back and pull it out.

To reassemble your device, follow these instructions in reverse order.