



iPhone 5 SIM Card Replacement

Remove the SIM card from your iPhone 5.

Written By: Andrew Optimus Goldheart



INTRODUCTION

Use this guide to remove the SIM card in your iPhone 5.



TOOLS:

- [SIM Card Eject Tool](#) (1)
or paperclip



PARTS:


- [iPhone 5 Nano SIM Tray](#) (1)
-

Step 1 — SIM Card



- Use a SIM card eject tool or a paperclip to eject the SIM card and its holder.

Step 2

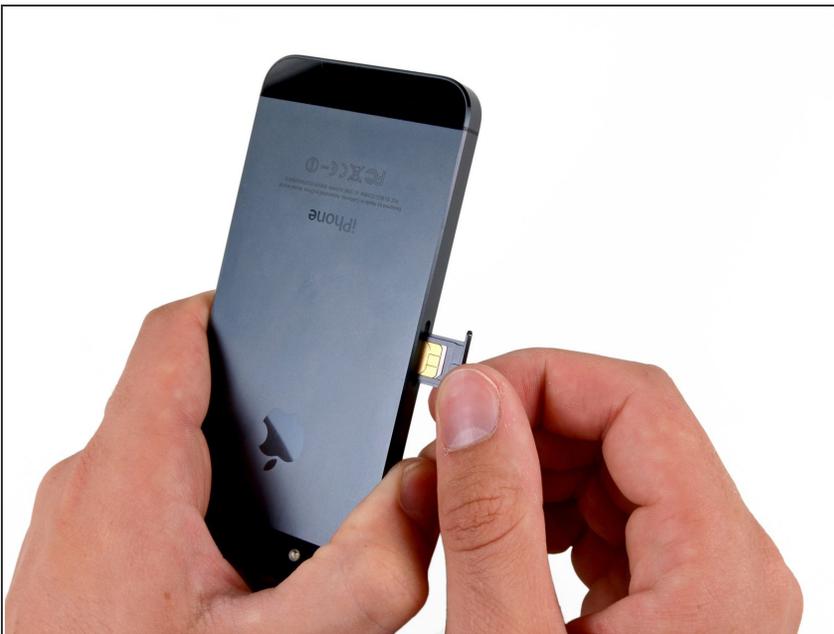

- Remove the SIM Card tray assembly from the iPhone.

To reassemble your device, follow these instructions in reverse order.