



Garmin Vivoactive HR Wrist Band Replacement

Replacement guide for broken or interchangeable wrist bands. Garmin Vivoactive Hr wrist band replacement.

Written By: David Myrick



INTRODUCTION


Replacement wrist bands can be purchased to either change the color of the bands or repair broken components.



TOOLS:

- [T4 Torx Screwdriver](#) (1)
-

Step 1 — Wrist Band

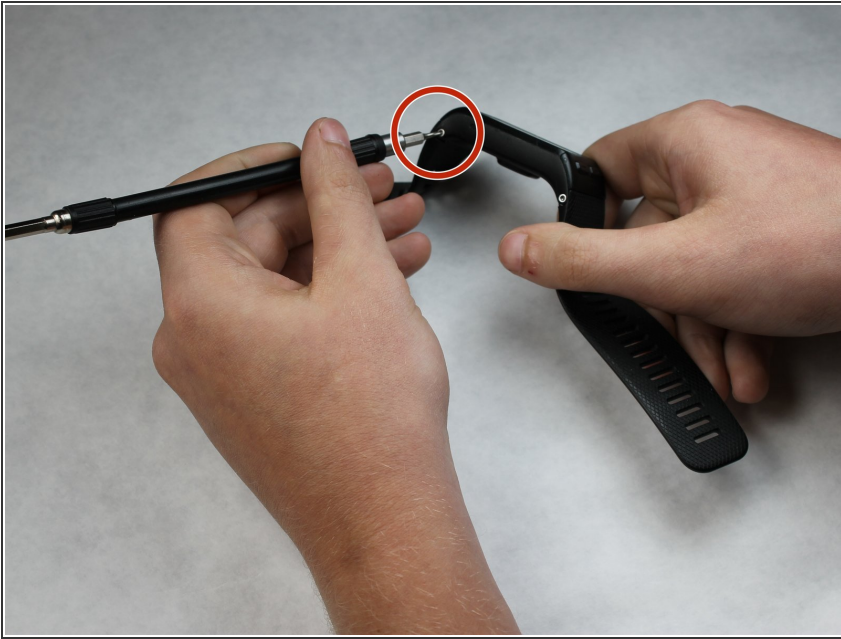

- Using a T4 Torx driver, remove the 4.34mm screw from band post.
- ⓘ You will need to hold in the screw on the other side in order to remove the screw for the band
- Remove the post from band and remove the band.

Step 2



- Repeat step 1 on the second watch band.

To reassemble your device, follow these instructions in reverse order.