



Asus Zenfone 3 Zoom Battery Replacement

How to remove the battery on the Asus ZenFone 3 Zoom.

Written By: Joshua Fontenelle



INTRODUCTION

This guide will demonstrate how to replace the battery of a Zenfone 3. This may be necessary if the battery has been damaged, will not hold a charge, or drains excessively quickly. For this guide, you will need the tweezers, Torx T2 screwdriver, a prying tool, and the Phillips #00 screwdriver.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [T2 Torx Screwdriver](#) (1)
-

Step 1 — Battery




- Using a pair of tweezers, pull out the SIM card tray and set it to the side.

Step 2



- Remove the two 2 mm screws using a Torx T2 screwdriver.

Step 3

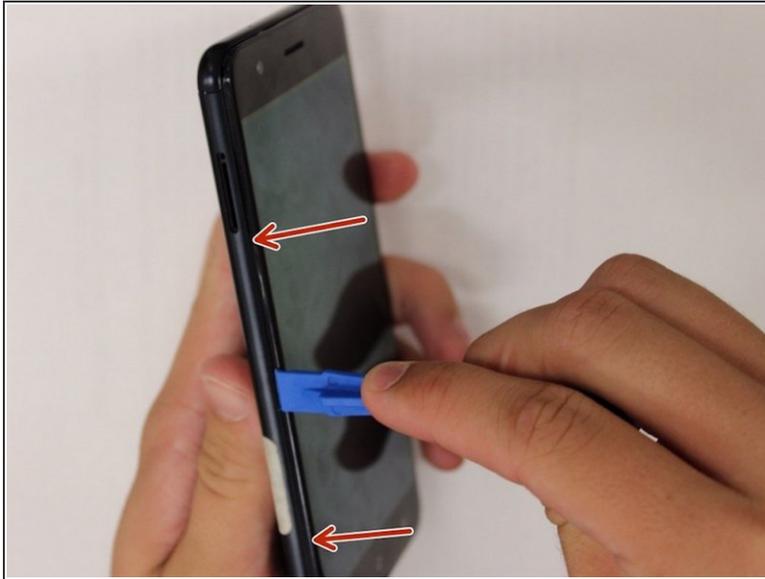


- Insert a prying tool between the screen and the metal backing of the phone at the bottom to remove backing from phone.
- ⓘ There will be a thin film connecting the two pieces. You do not need to remove this. Just fold the two pieces apart with the inside facing up.

Step 4



- Remove the two 3 mm screws, using the Phillips #00 screwdriver, on the silver band at the top of the battery and remove the band.

Step 5

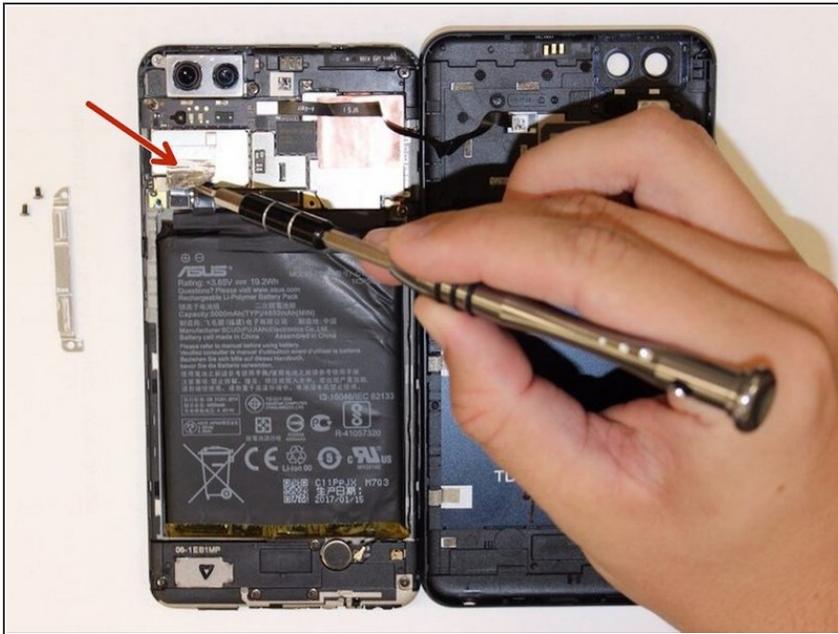


- Peel back the silver tape.

Step 6



- Disconnect the battery connections.

Step 7

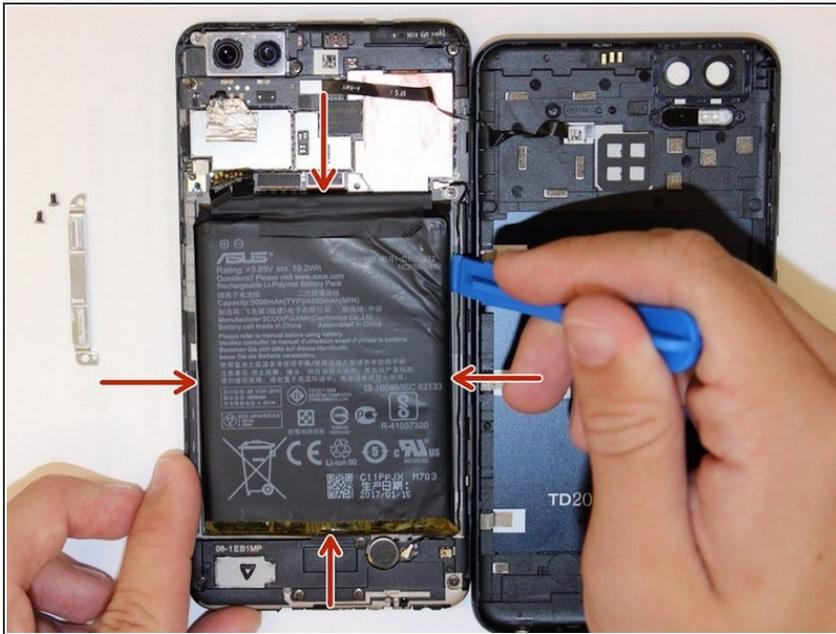

- Pry and remove the battery.
- ⓘ The underside of the battery is adhesive so make sure to pry the battery off gently.

To reassemble your device, follow these instructions in reverse order.