


Huawei P8 Lite Back Glass Replacement

The official has been updated and can found here.

Written By: Skyphone

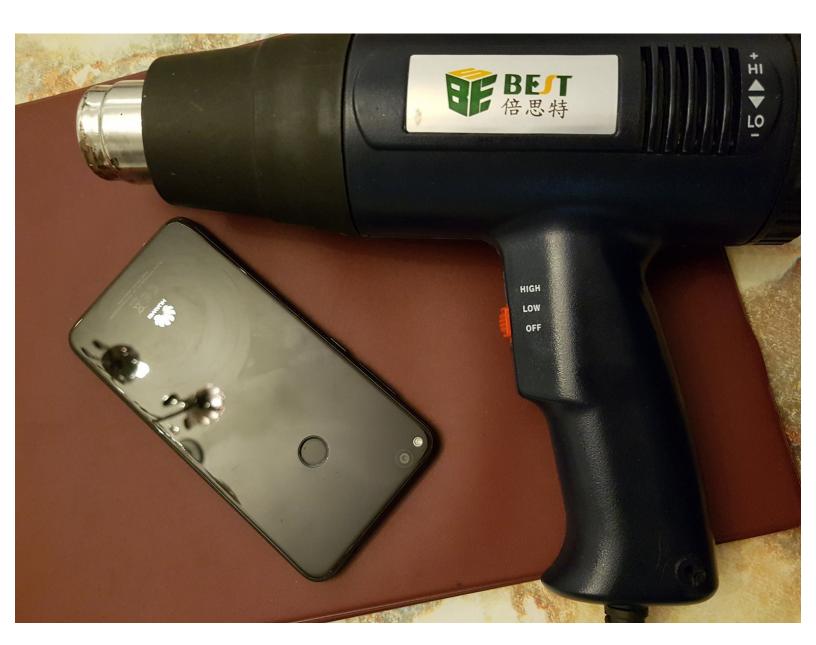

INTRODUCTION

The official guide has been updated and can be found here. This guide is archived for historical purposes.



TOOLS:

- Heat Gun (1)
- Suction Handle (1)
- Plastic Cards (1)

Step 1 — Separate the back glass and the phone







- Heat the backglass with a heat gun.
- Use a suction cup and a card to gently remove the back glass.

↑ Don't hesitate to heat again if there is any resistance.

Step 2 — Disconnecting the fingerprint.







Disconnect the fingerprint cable.

↑ You have to open the lock of the cable on the back glass.

Step 3 — Separate the fingerprint and the back glass







- Use the heat-gun to heat the fingerprint.
- Push the fingerprint to remove it from the backglass
- It's done.

To reassemble your device, follow these instructions in reverse order.