



# Philips Satinelle Tweezer Replacement

This guide will help you replace the tweezer of your device. The blade may be clogged, dull or broken and can cause harm to your skin.

Written By: Madeline Casalino



---

## INTRODUCTION


If the tweezers are struggling to grasp and pull out hair, it's time to replace them. Replacing the blades only requires you to disassemble the head of the epilator. You will only need a plastic opening tool or some other prying tool. **Be careful when removing the tension clip.** It has a tendency to shoot out at high speed when removed. This guide generally takes one to three minutes to complete.



### TOOLS:




- [iFixit Opening Tools](#) (1)
-

## Step 1 — Tweezer

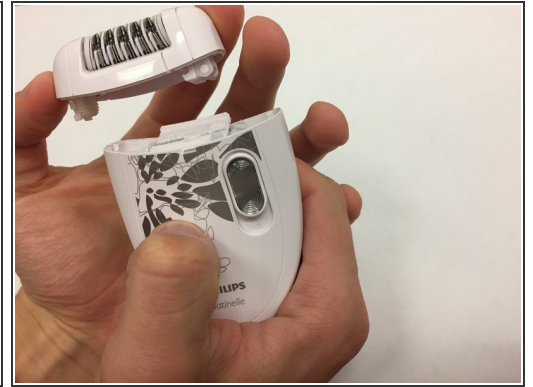

- Remove the head by pushing it to the right.


## Step 2

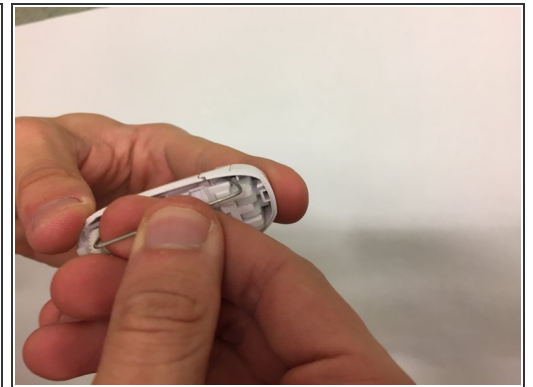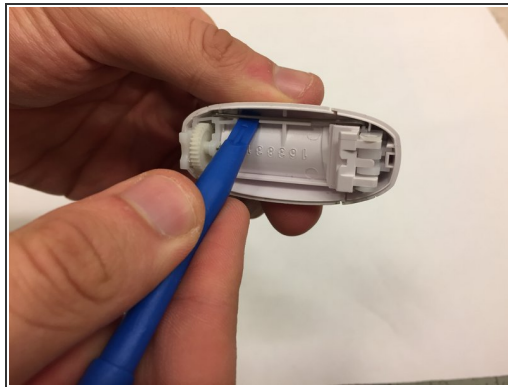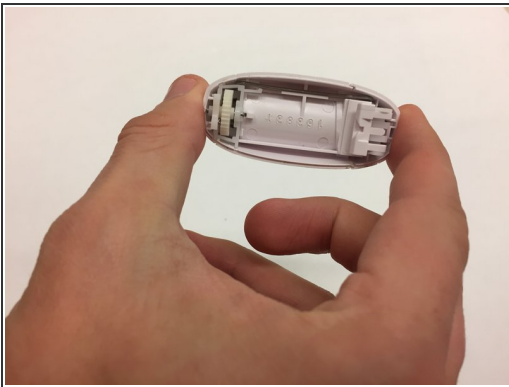

- Hold the head of the epilator with the tweezers facing away from you.
- Remove the tension clip using an opening tool.

**⚠ Caution:** The tension clip *will* shoot out when removed.

### Step 3

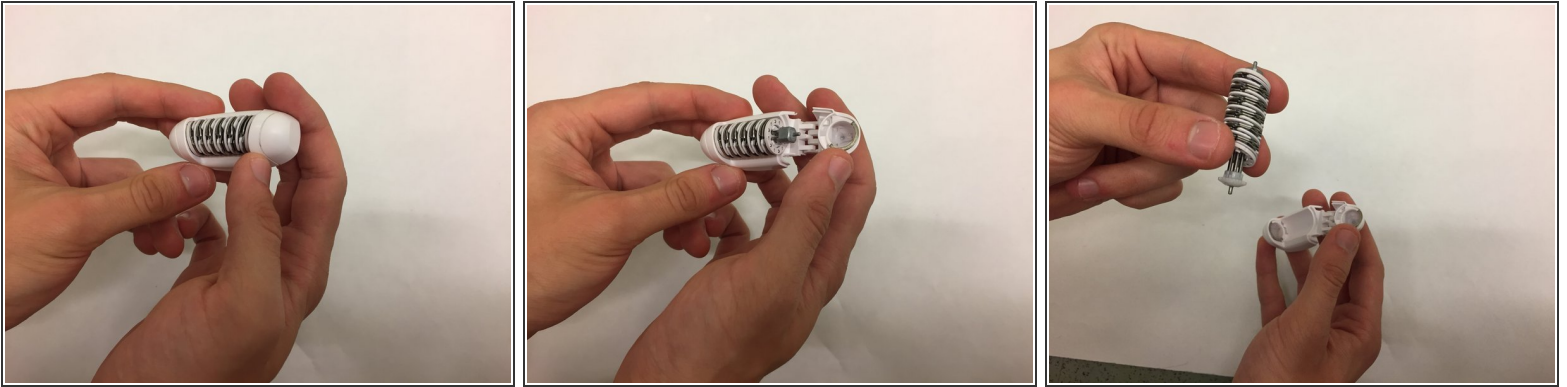

- Hold the head at an angle (this will prevent the tweezers from falling out).
- Open the hinged end of the head.
- Remove the old tweezers and replace them with the new tweezers.

To reassemble your device, follow these instructions in reverse order.