




 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Bottom Right Panel

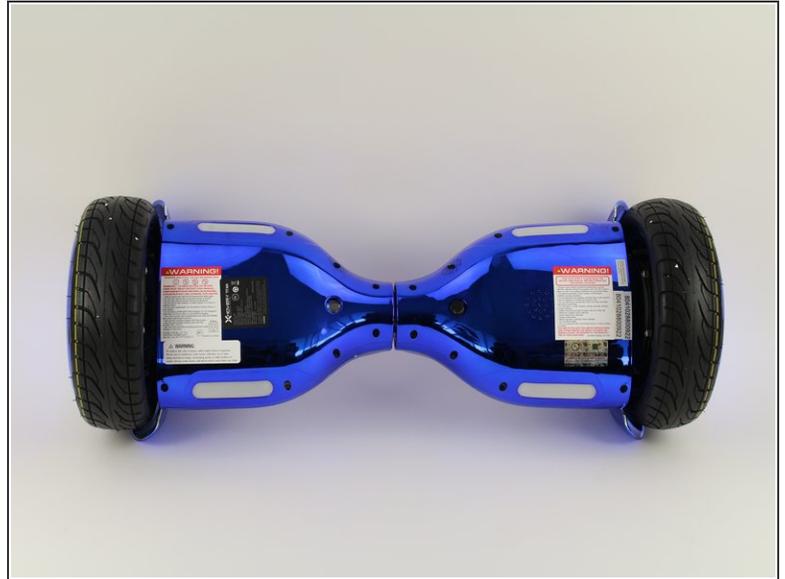

- Flip the hoverboard so the bottom is facing up.
- ⓘ The right side is the side that has the power button. There is also an "R" on the metal plate underneath the battery.

## Step 2



- Using a Phillips #1 screwdriver, remove the two 14 mm screws closest to the center of the hoverboard.
- Using a Phillips #1 screwdriver, remove the four 12 mm screws located in the middle of the panel.
- Using a Phillips #1 screwdriver, remove the two 15 mm screws located closest to the wheel.

## Step 3



- Grip the bottom right panel and lift to remove it.

To reassemble your device, follow these instructions in reverse order.