


Samsung Chromebook 2 XE503c12 Battery Replacement

Replace your dying battery on a Samsung Chromebook 2 XE503C12

Written By: Jordan W Jones

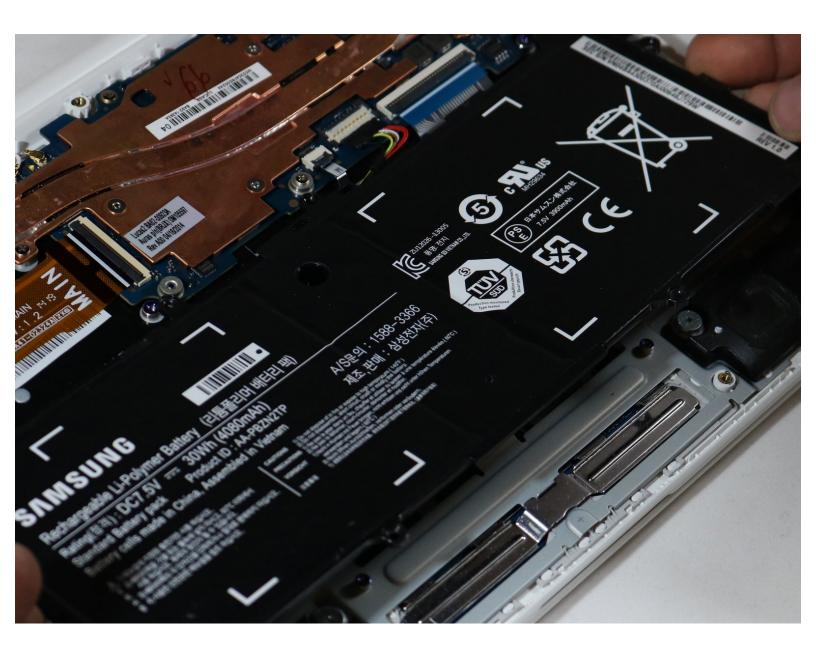

This document was generated on 2020-11-28 06:58:23 AM (MST).

INTRODUCTION

Issues with battery life and a dead battery can be resolved by following this guide.



TOOLS:

- Magnetic Project Mat (1)
- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)



PARTS:

Samsung XE503C12 Battery (1)

Step 1 — Battery





- Flip device over so that the underside is facing up.
- Remove nine, 7mm PH#0 screws from the bottom.


Step 2





- Using the plastic opening tool, pry open the bottom of the Chromebook case, working all around the computer.
- Lift the panel out of the way to reveal the battery.

Step 3

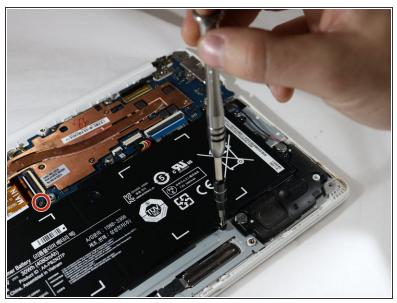




Remove four, 5mm Phillips #0 screws connecting the battery to the laptop

Step 4



- Lift the battery, and pull it up and towards you, away from the connector.
- Be sure to lift gently to avoid damage to connector

Step 5

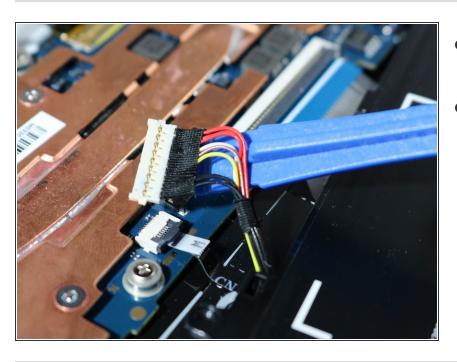

- Using a plastic opening tool, pry the connector up from the contact.
- Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.