


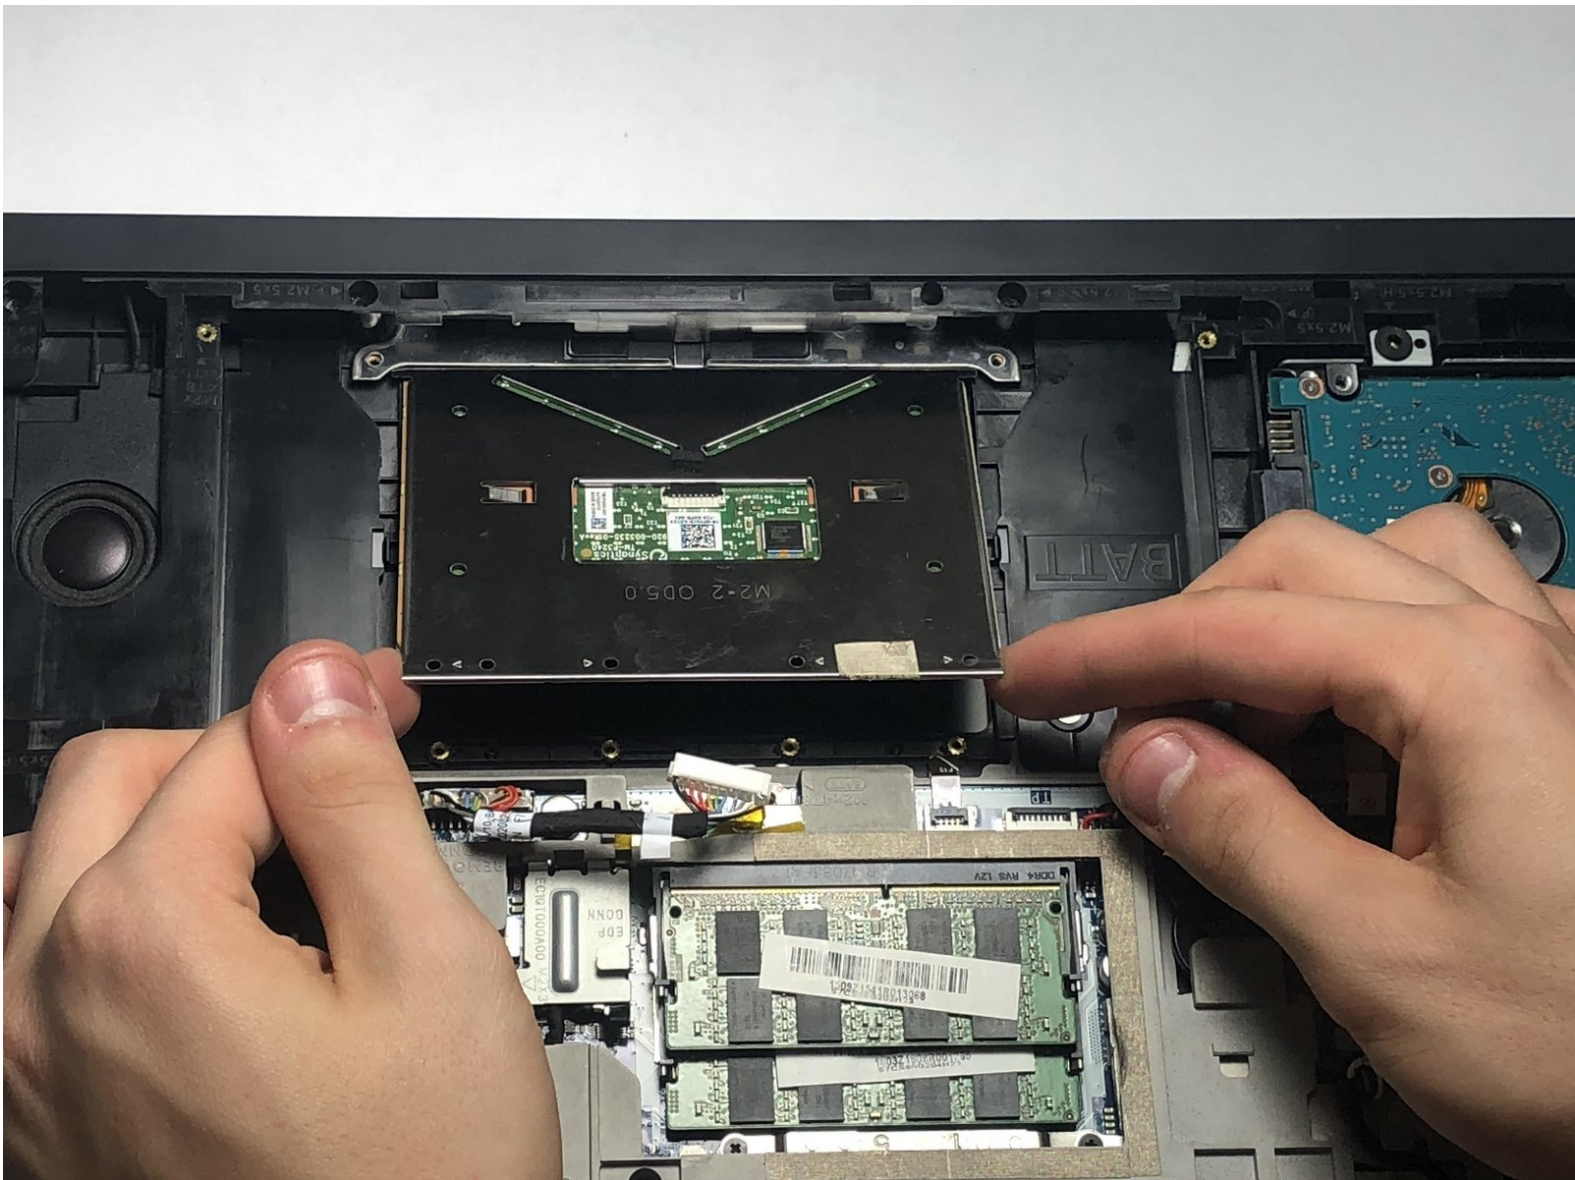

Dell Inspiron 15-7567 Touchpad Replacement

This guide will allow the user to successfully remove and replace the Touchpad in a Dell Inspiron laptop.

Written By: Dallas Lamorie



INTRODUCTION

This may be needed if your touchpad is not working as it usually does.



TOOLS:

- [TR8 Torx Security Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:

- [Dell Inspiron 15-7567 Touchpad](#) (1)

Step 1 — Battery



 Turn off laptop before beginning.

- Place the laptop upside down on a flat, stable surface.

Step 2





- Remove the 3mm screw in the location shown, using a Phillips #1 screwdriver.

Step 3





- Remove the panel from the sides and pull it out at an angle towards you.

Step 4

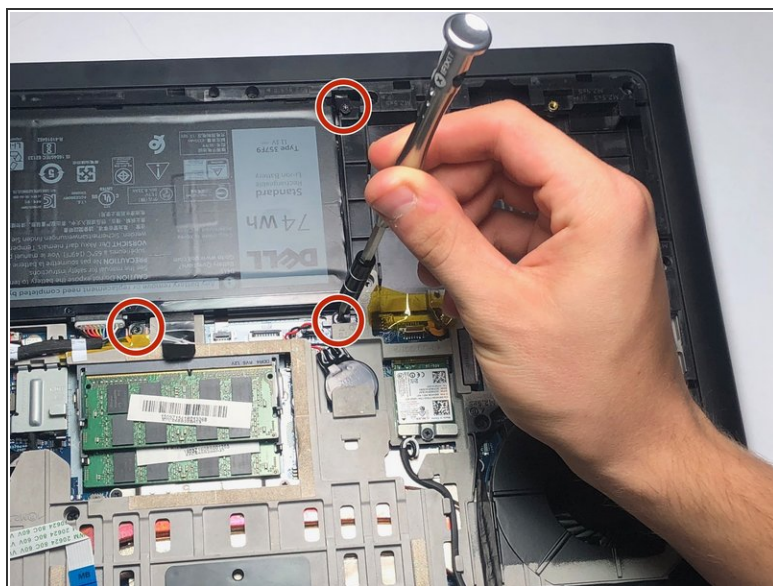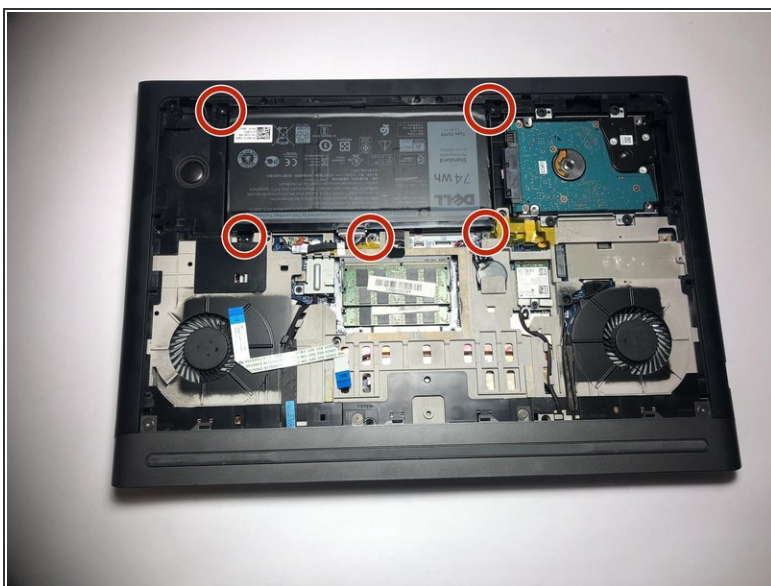

- Remove the five 3mm screws on the battery with a Torx (T8) screwdriver in the locations shown.

Step 5

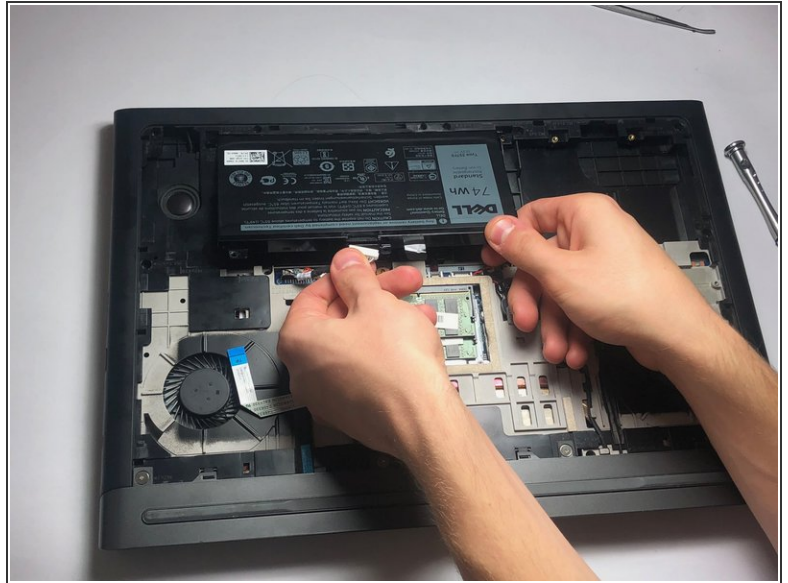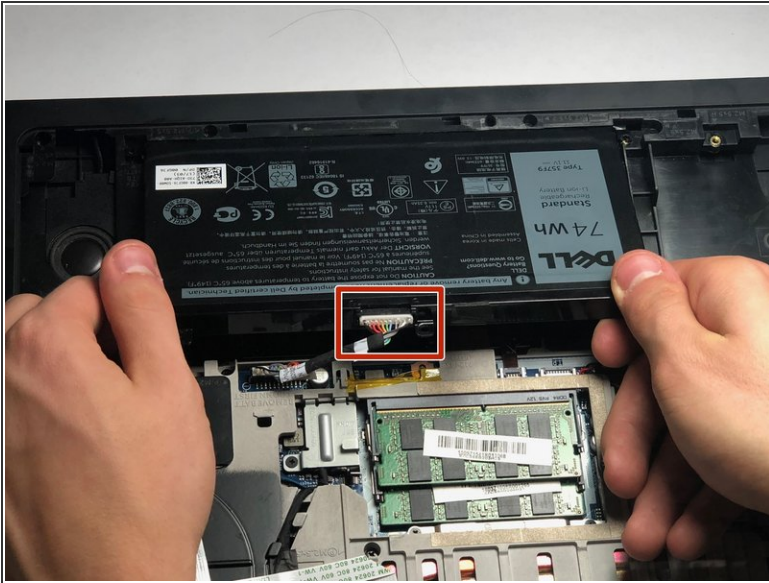


- Disconnect the power cord from the battery by using a pair of tweezers, your fingers, or the opening tools from the iFixit pro tech tool kit.
- Pinch the clips on the left and right side while pulling on the cord at the same time.

Step 6




- Pull the battery towards you.
- Make sure to pull at an upward angle.

Step 7 — Touchpad

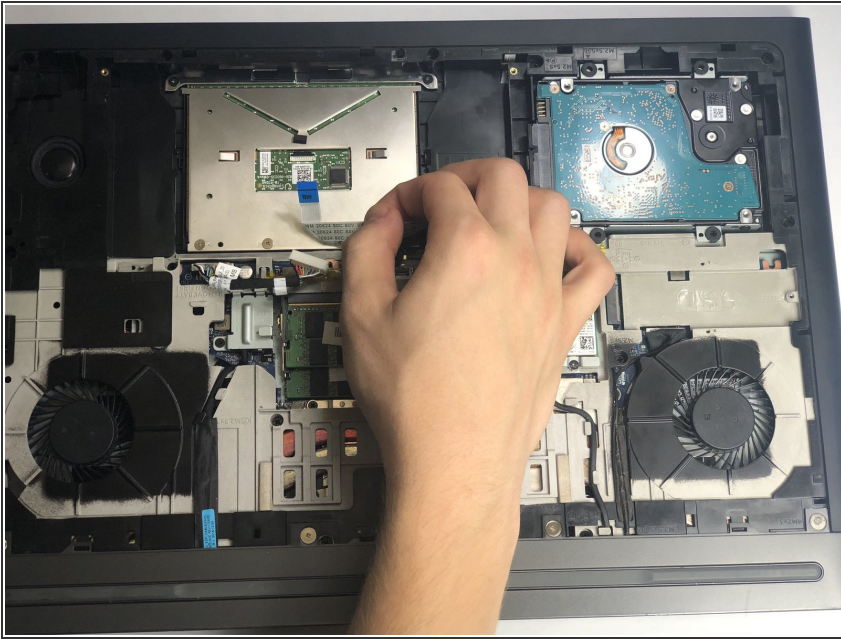


- Remove the clip holding the power cord on the Touch Pad by using tweezers, your fingers, or iFixit removing tools to gently pull up on the clip.
- This should release the power cord as shown.

Step 8

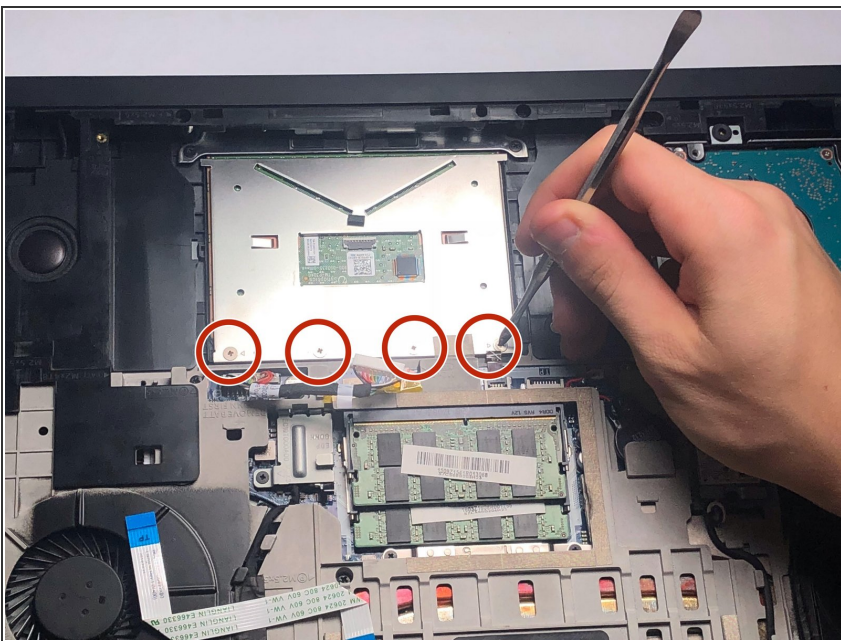

- Remove the four 3mm screws using a Phillips #1 screwdriver in the locations shown.

Step 9

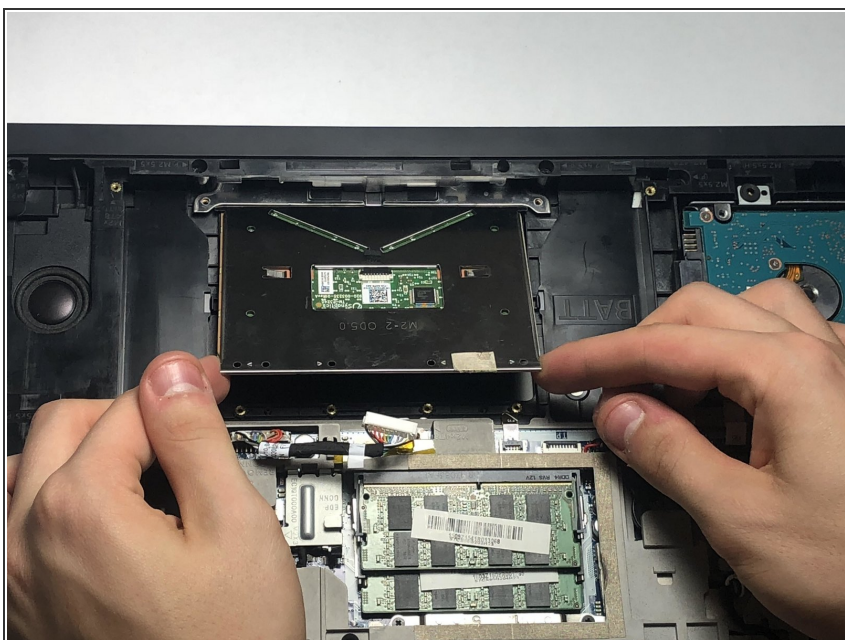

- Remove Touch Pad by pulling towards you gently at a slight upward angle.
- ⓘ The Touch Pad is now removed and ready to be replaced.

To reassemble your device, follow these instructions in reverse order.