



Insignia NS-F12R6-SS Fuse Replacement

This guide shows how to replace a damaged fuse in your Insignia NS-F12R6-SS.

Written By: Hank




INTRODUCTION

A fuse is a device that protects the electrical circuitry of your fan and power source. Fuses have a small wire inside them that will melt and disrupt the electrical current if there is a surge of electricity. A blown or damage fuse will prevent any power distribution to your fan.

TOOLS:

- [Flathead Screwdriver](#) (1)
-

Step 1 — Fuse

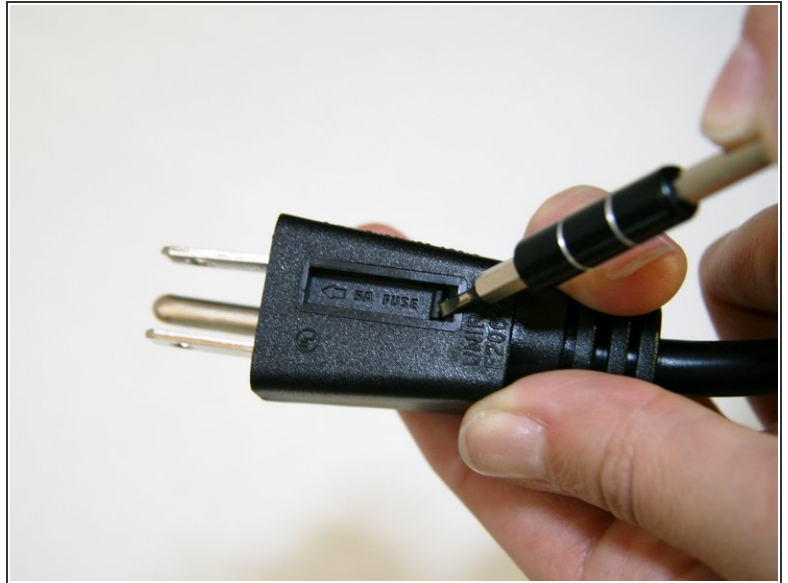

✦ Before proceeding with this guide, make sure to unplug the fan.

- Grasp the plug firmly and slide the fuse access cover toward the end of the plug prongs with a Flat-head screwdriver.

Step 2



- Carefully pry the 5A fuse out of the plug by slipping the Flat-head screwdriver under one side of the fuse and popping the fuse upward.

To reassemble your device, follow these instructions in reverse order.