



# Casio CTK-501 Keys Replacement

Written By: Jimmy Winne



---

 **TOOLS:**

Phillips #0 Screwdriver (1)  
Phillips #2 Screwdriver (1)

 **PARTS:**

Replacement Keys (1)

---

### Step 1 — Bottom Panel




- Flip the keyboard over so that the bottom is facing up.
- Remove the twenty-seven 12 mm screws from the dark-grey panel using a Phillips #2 screwdriver.

## Step 2



- Remove the bottom panel by lifting and pulling it towards yourself.

## Step 3

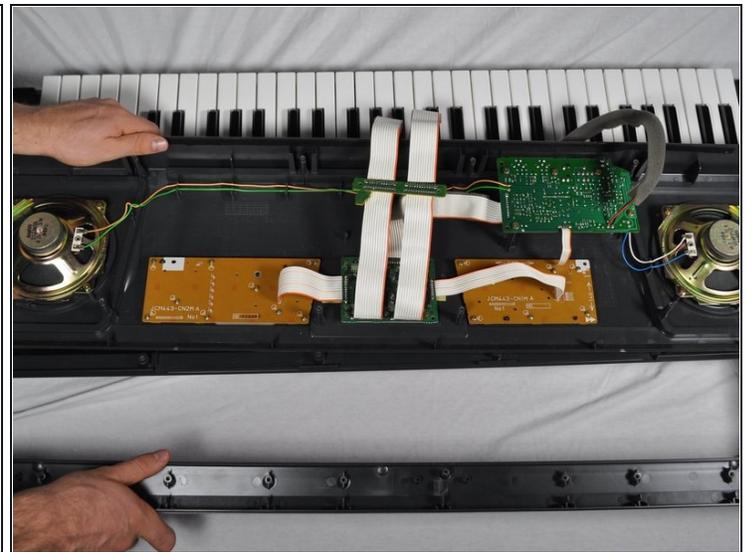

- Flip open the top half of the keyboard.
- Set the keyboard onto the bottom half with the internal parts facing up.


**⚠ Be careful not to let the bottom drop.**

## Step 4 — Keys



- Completely unscrew and remove the screws holding the broken string of keys in place.

## Step 5

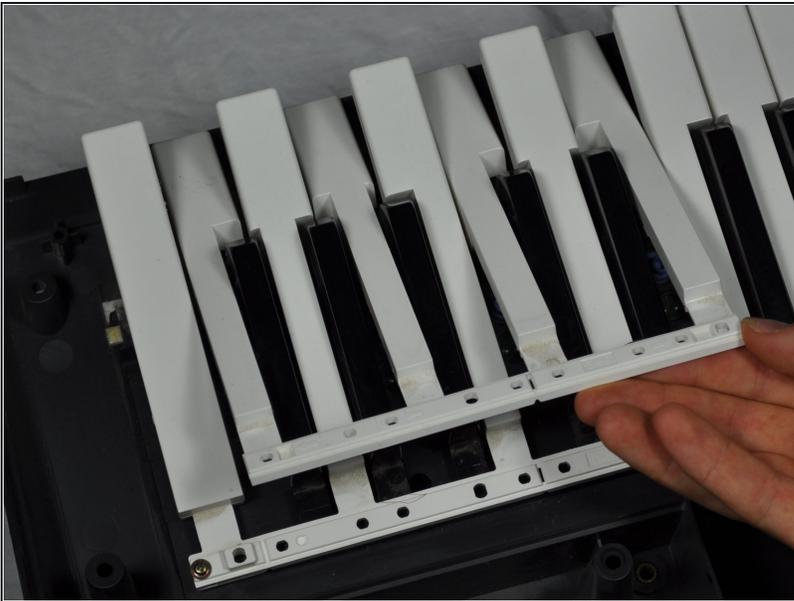

- Pull up the top layer of white keys to remove them from the keyboard.

## Step 6



- Pull up on the last layer of white keys to remove them.

## Step 7



- Push the black keys toward the front of the keyboard and rotate them until they fall out of the keyboard.

---

To reassemble your device, follow these instructions in reverse order.