




Dell Inspiron 15-7548 Speaker Replacement

Is the sound coming out of your laptop...

Written By: brianna cordoway

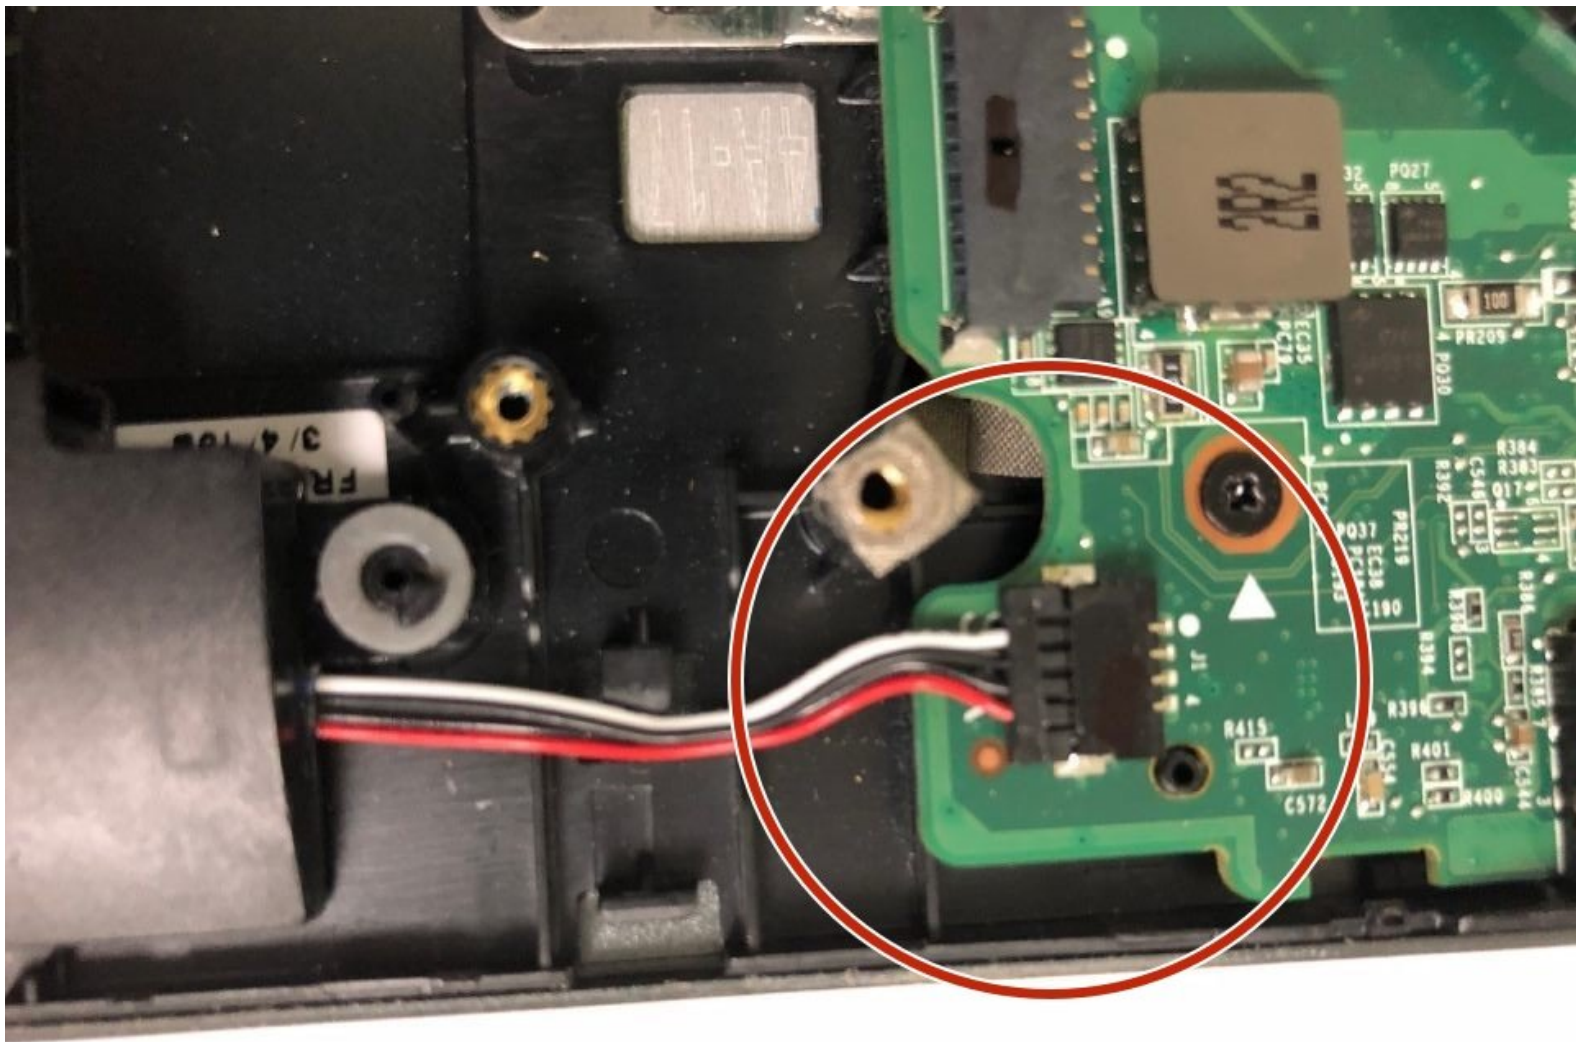

INTRODUCTION



Is the sound coming out of your laptop distorted or unclear? Consider using this guide to replace the speakers in your device.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Panel

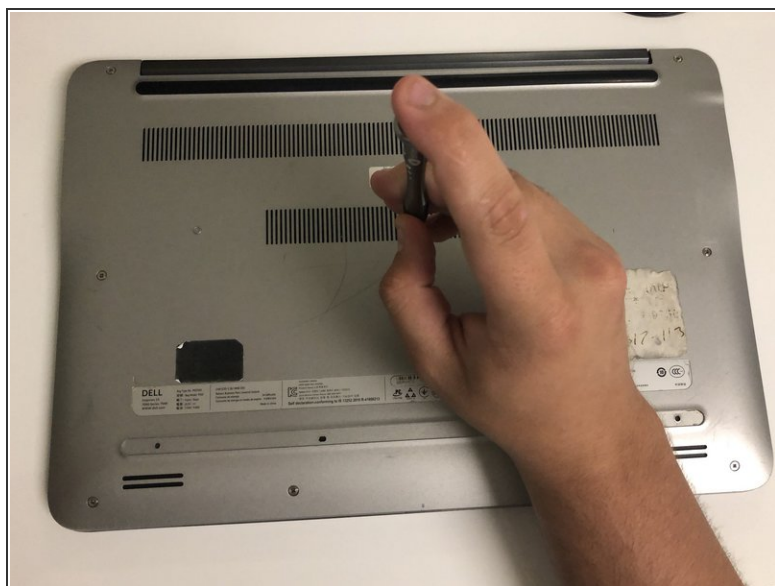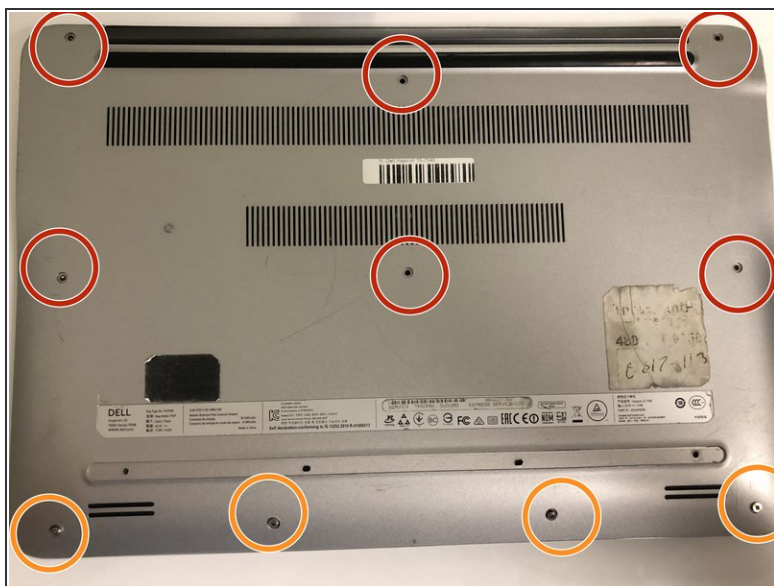

- Remove the six 6 mm screws from the back panel with a Phillips #1 screwdriver.
- Loosen the four captive screws at the bottom using a Phillips #1 screwdriver.
- ⓘ The four screws on the bottom are captive screws and cannot be removed.


Step 2

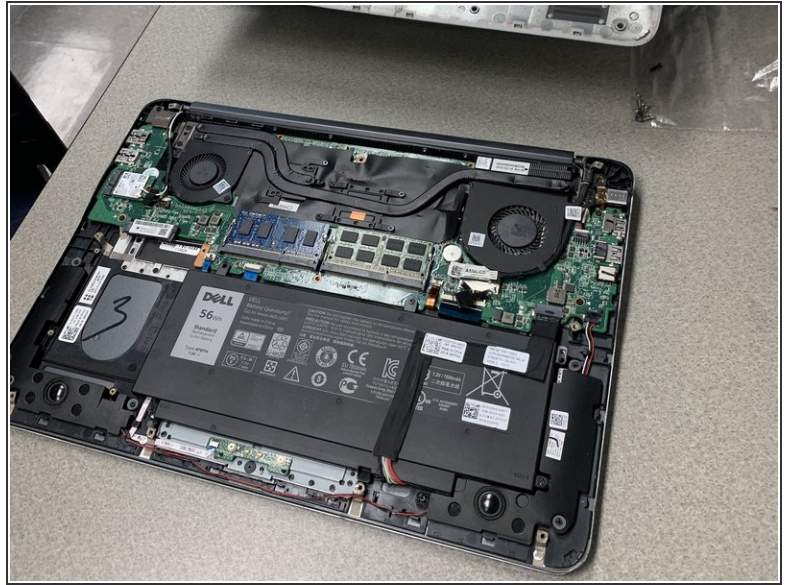

- Pry out the back panel using the flat head side of the spudger.


⚠ Do not insert the spudger more than half an inch when separating the bottom and right side of the back panel.

Step 3 — Battery

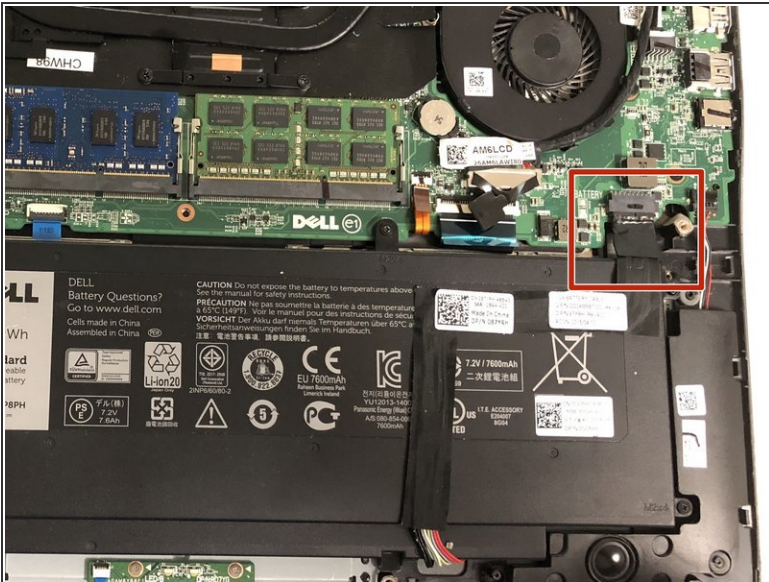


- Disconnect the battery from the motherboard by pulling the black tab attached to the cable.

Step 4

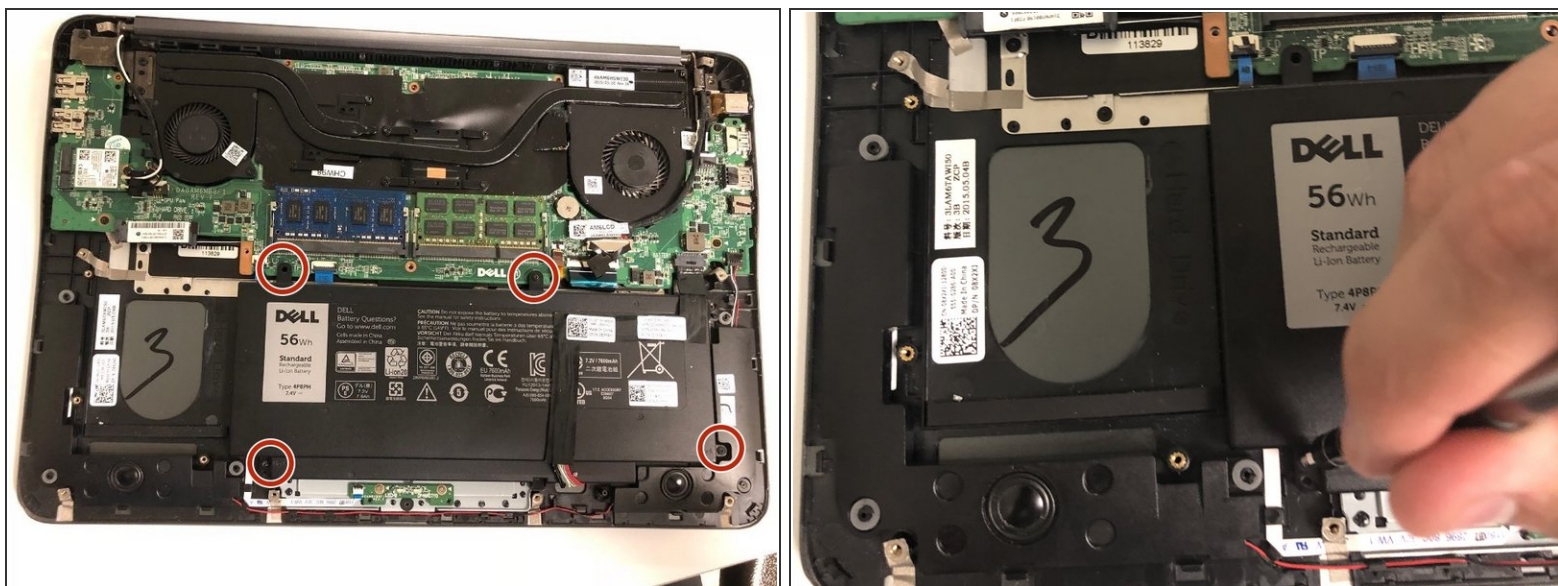


- Remove the four 2.5x6mm screws using a Phillips #1 screwdriver.

Step 5 — Speaker

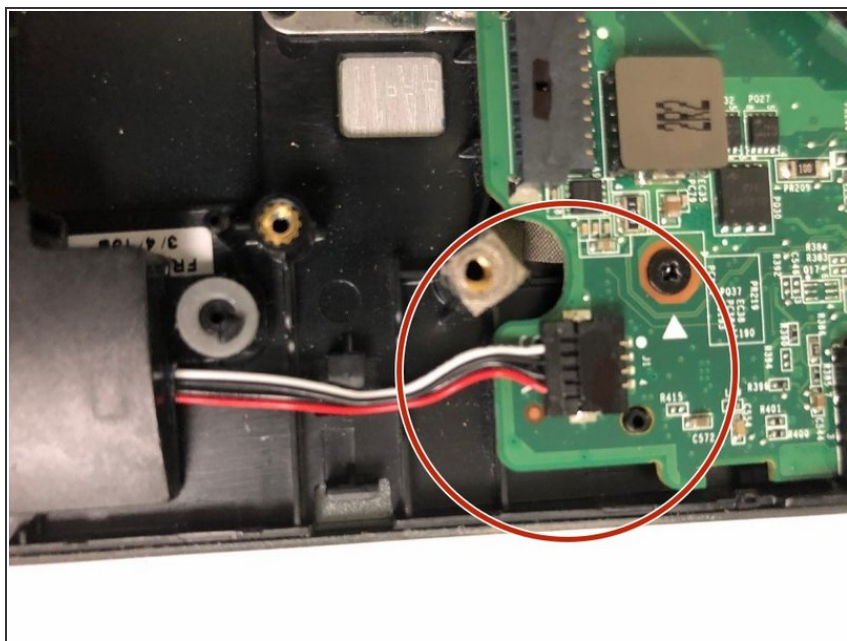


- Remove the ribbon cable by pulling it out.

Step 6

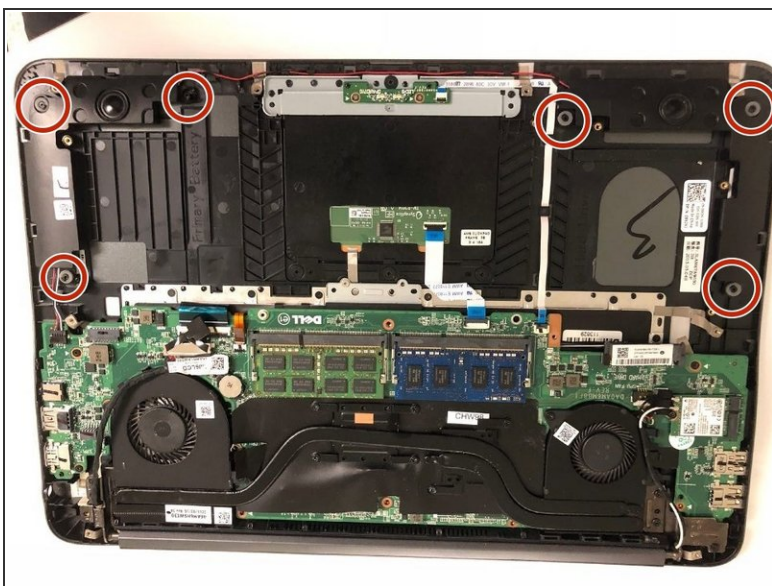

- Remove the compression caps by using the spudger.

Step 7

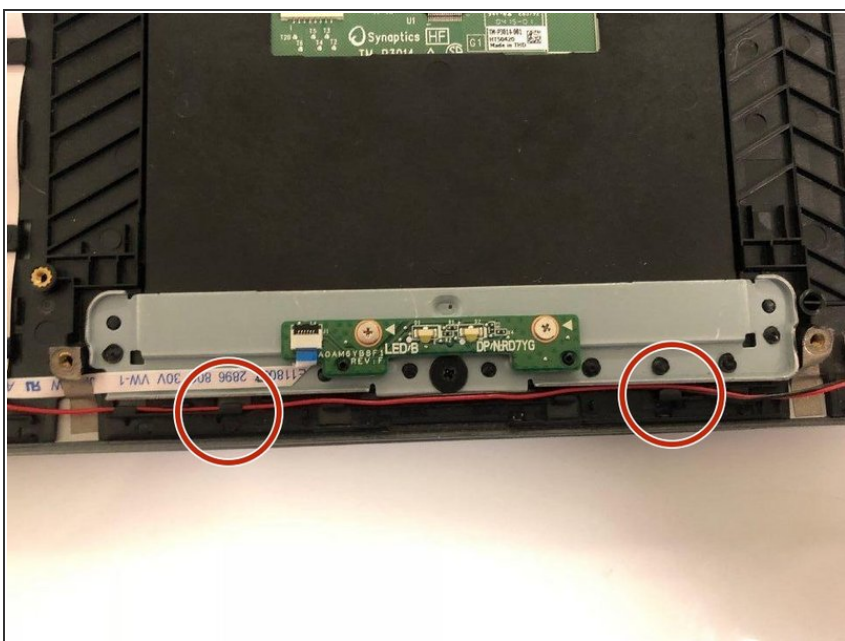

- Untangle the wire from the plastic clips and remove the speakers from the device.

To reassemble your device, follow these instructions in reverse order.