




Compaq Presario CQ60-211DX RAM (Random Access Memory) Replacement

This guide will detail how to replace the RAM in a CQ60-211DX.

Written By: Garrett Carter

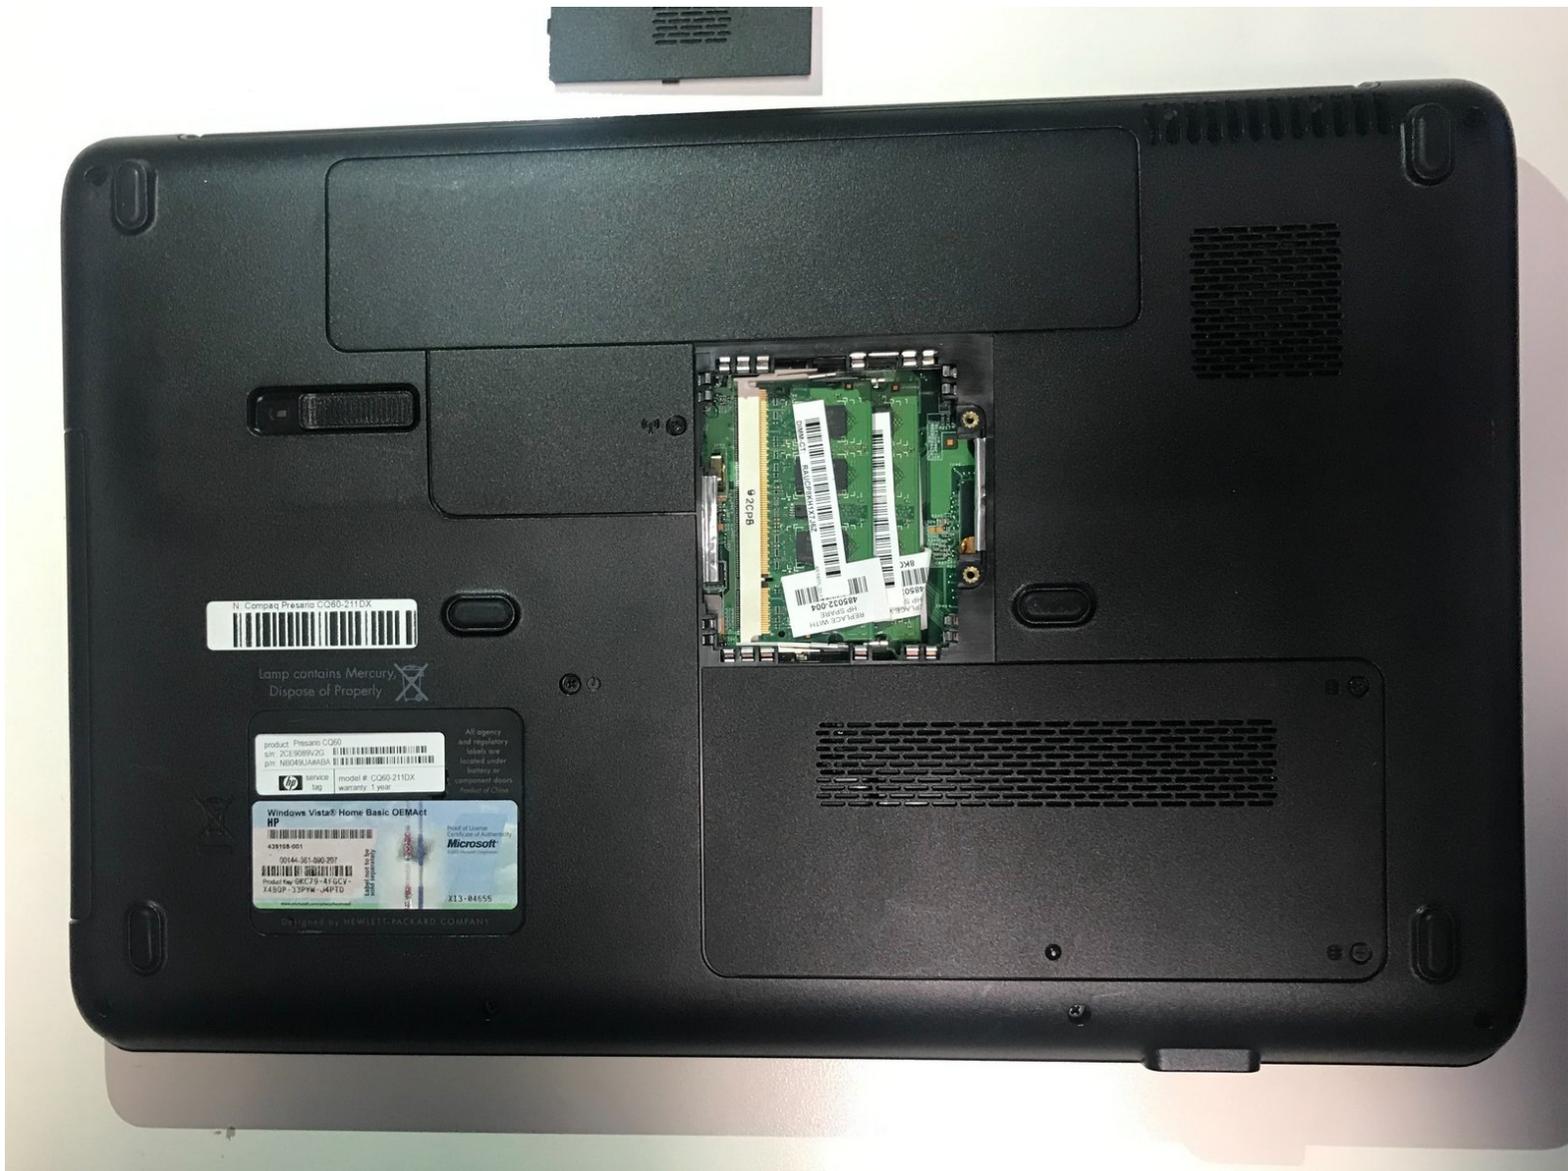

INTRODUCTION

This guide will detail how to replace the RAM in a CQ60-211DX.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — RAM (Random Access Memory)




- Power off the CQ60 and unplug all cables connected to it.

Step 2



- Using a standard #2 Phillips-head screwdriver, remove the back compartment of the CQ60 to access the motherboard.

Step 3

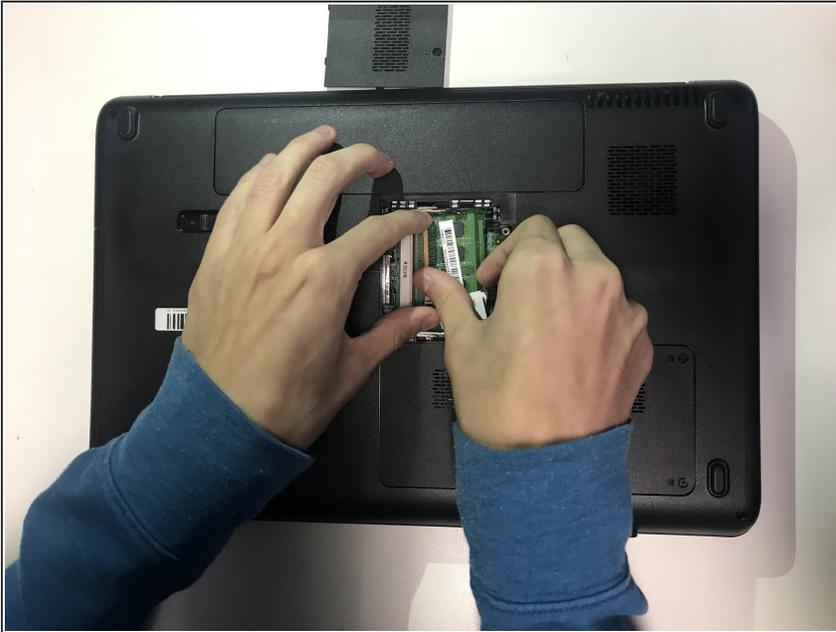

- Use your fingers to push the retention clips away from the RAM sticks, and carefully pull out the old RAM.

Step 4



- ★ Carefully insert the new RAM, and ensure that it is placed in the correct slots.

To reassemble your device, follow these instructions in reverse order.