


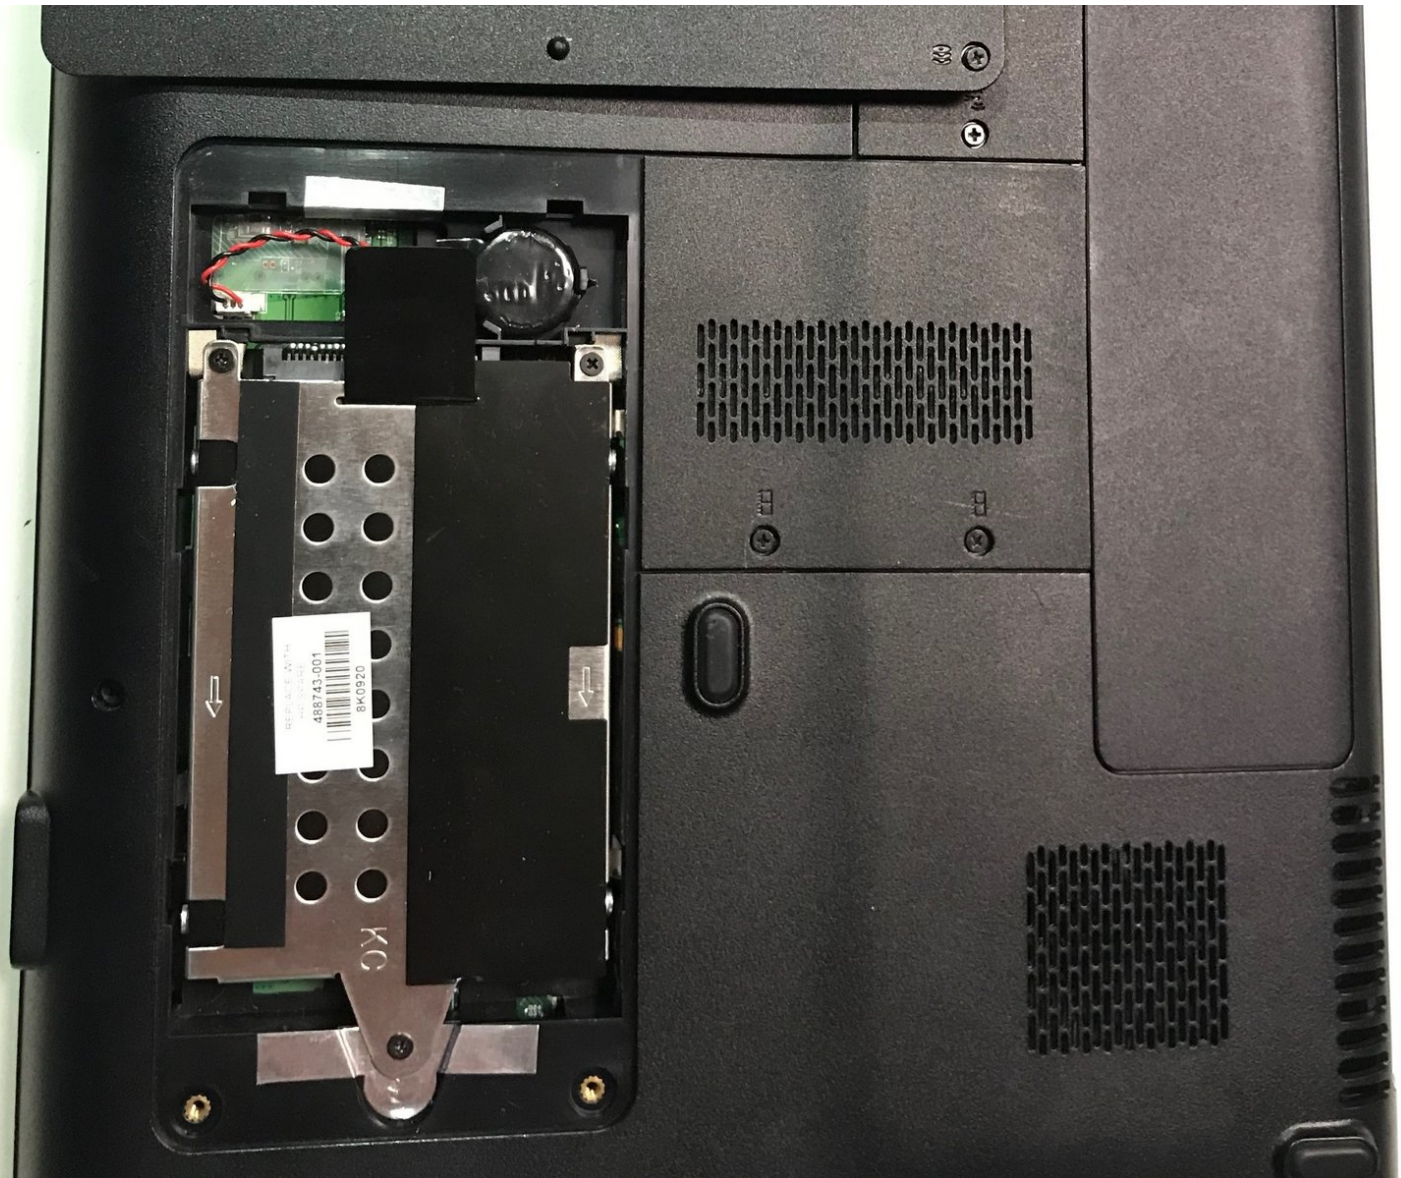

Compaq Presario CQ60-211DX Solid State Drive Replacement

This guide will show how to swap out the internal Hard Drive for either a HDD or for a SSD.

Written By: Garrett Carter



INTRODUCTION

This guide will show how to swap out the internal Hard Drive for either a HDD or for a SSD.



TOOLS:


- [Fingers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery




- Turn the laptop off and disconnect all sources of power.
- Set the laptop on a flat surface with the bottom side facing up.

Step 2

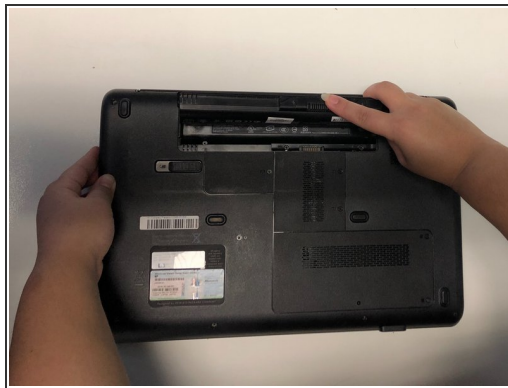



- Slide the battery release tab.
 - ⓘ This will eject the battery.
- Carefully remove the battery and set it aside.

Step 3 — Solid State Drive (SSD)

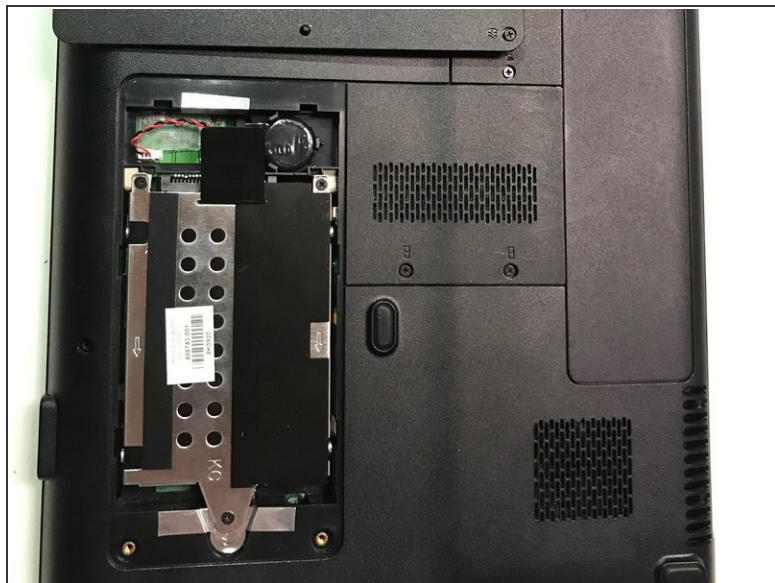

- Use a PH1 screwdriver to unscrew the 2 screws that secure the hard drive cover.
- Remove the cover.

Step 4

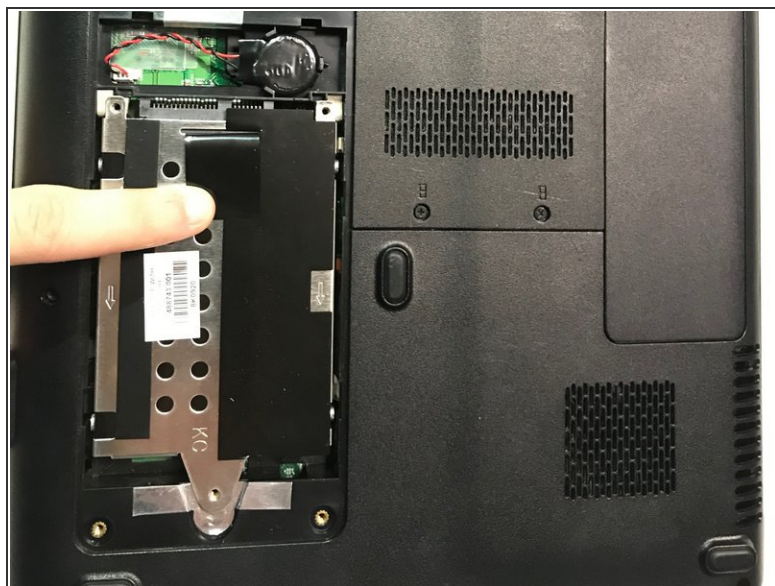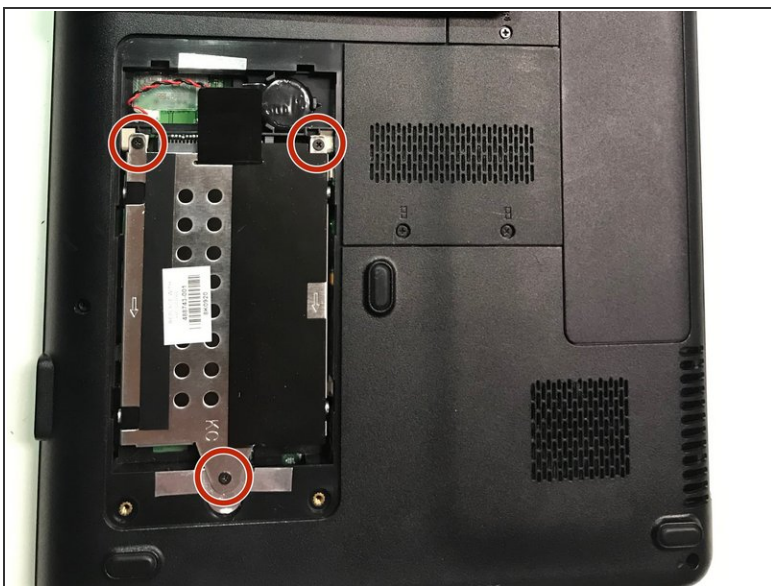

- Unscrew the next three screws holding the hard drive in place.
- Pull the black ribbon and slide the hard drive out of place.

To reassemble your device, follow these instructions in reverse order.