



# Samsung NP-R540-JA09US Optical Drive Replacement

How to remove the Optical (CD/DVD) Drive in your Samsung NP-R540-JA09US.

Written By: Daylyn Bourland



---

## INTRODUCTION

Is your laptop not reading your DVD's and CD's correctly? Consider using this guide to replace the Optical Drive of your device.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- ⚠ Turn off laptop before starting.
- ⚠ Remove power cable before starting.
- Flip the laptop over so that the bottom of the laptop is facing upwards.

## Step 2




- Pull the two latches outward.

### Step 3



- Slide the battery out of the laptop.

### Step 4 — Optical Drive

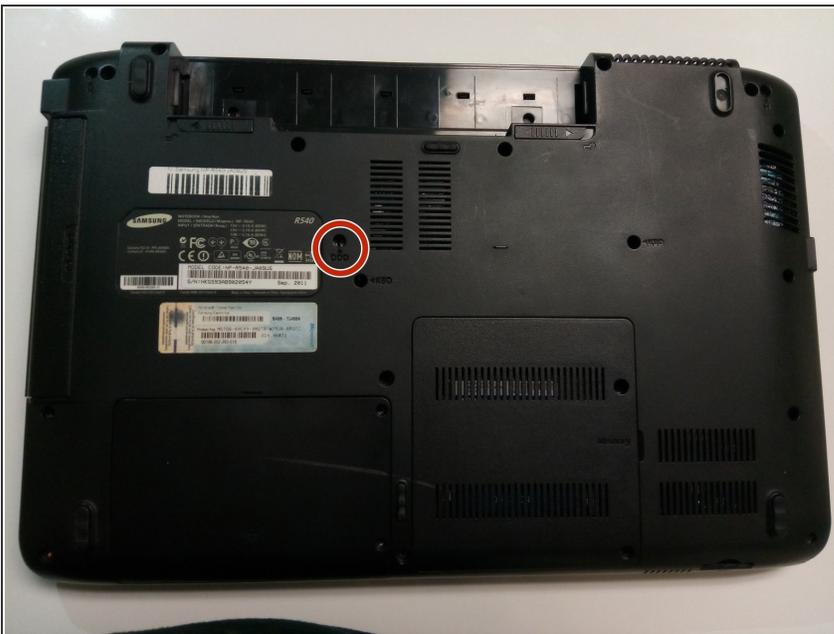

- Remove securing screw with the PH0 head.

## Step 5



- Slide the optical drive out and remove it from the device.

To reassemble your device, follow these instructions in reverse order.