



# Samsung NP350E5C-A02US hard drive and memory stick cover Replacement

How to remove the hard drive and memory stick cover.

Written By: James Kingrey



---

## INTRODUCTION

If you need to remove the cover over the hard drive and memory sticks this guide will show you how.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Hard drive and memory stick cover




- Remove the M2.5x5 mm screw with a Phillips #0 screwdriver.

## Step 2



- Slide the cover 1/4" towards the front of the laptop.

### Step 3

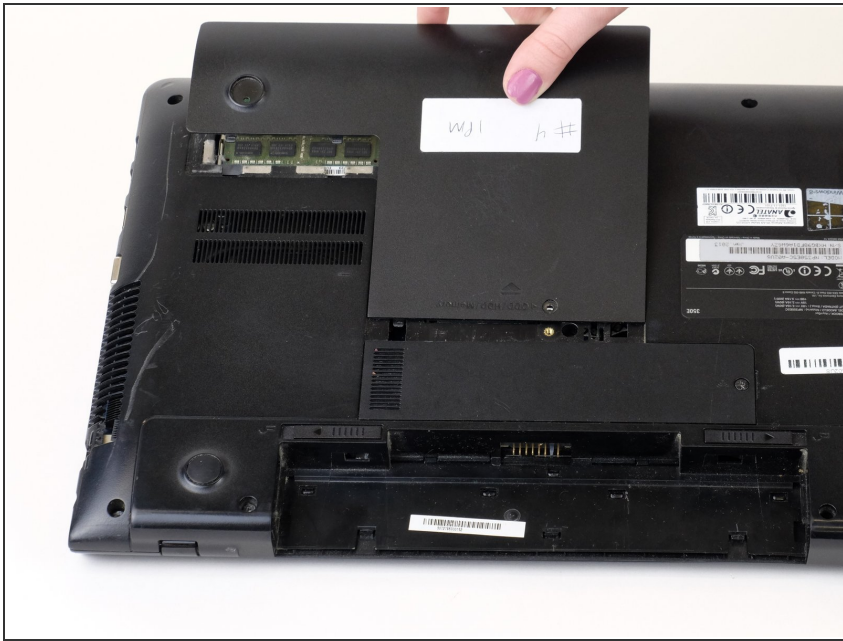

- Then, lift the cover off.

To reassemble your device, follow these instructions in reverse order.