


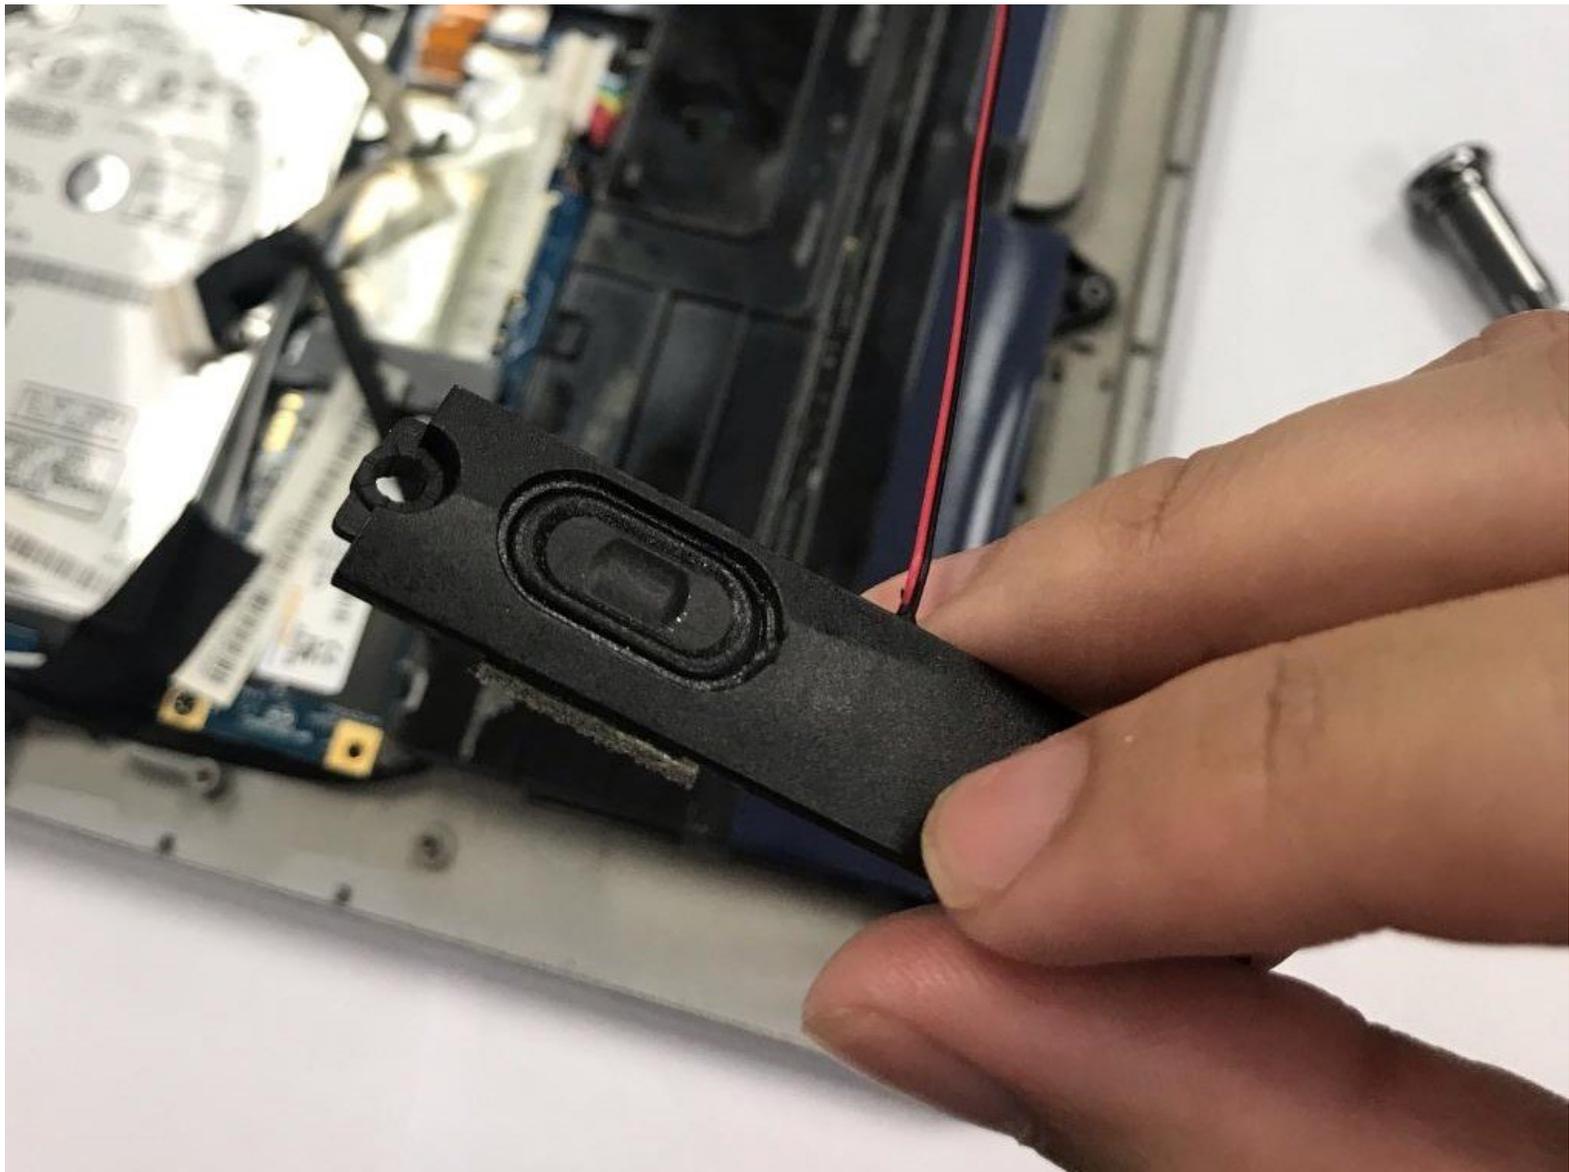

# Acer Aspire S3-391-6046 Speaker Replacement

Replace the speakers on Acer Aspire S3-391-6046.

Written By: Skylar Werner



---

## INTRODUCTION


If your laptop doesn't play sound, use this guide to remove and replace your speakers. For this guide, you will need a PH00 screwdriver head and tweezers.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Back Cover

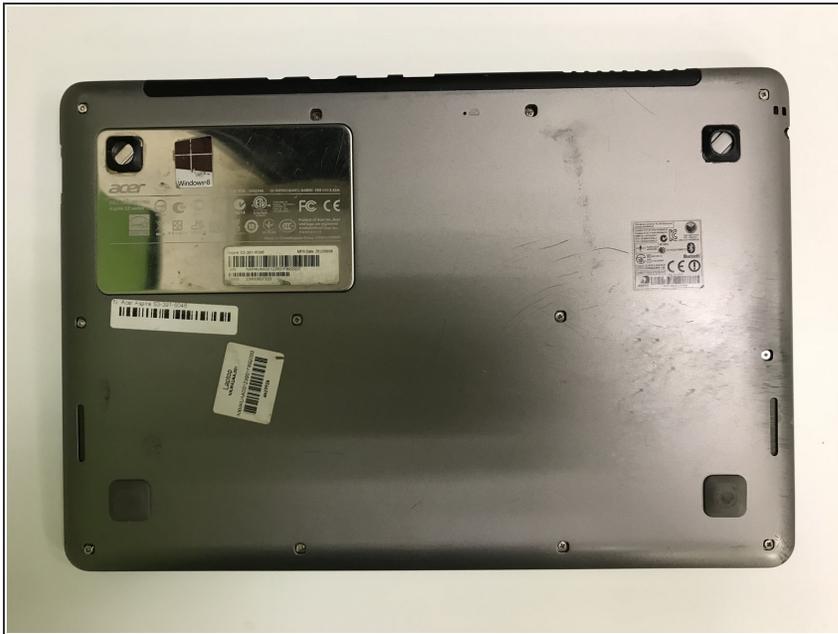

- Place laptop upside down.

## Step 2



- Remove the twelve 5mm screws with a Phillips #1 screwdriver.

### Step 3




- Lift cover upwards away from you.

### Step 4 — Speaker



- Remove the two Phillips #0 screws from the left speaker.
- Remove the speaker.



## Step 5

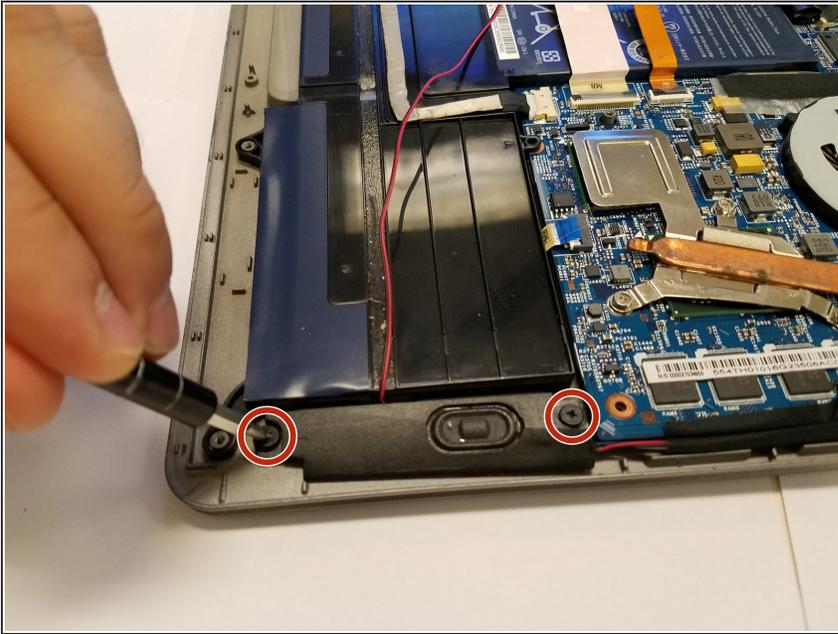

- Remove the two Phillips #0 screws from the right speaker.

⚠ Do not lift the speaker.

## Step 6

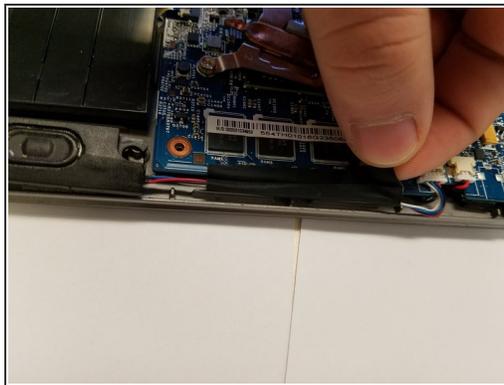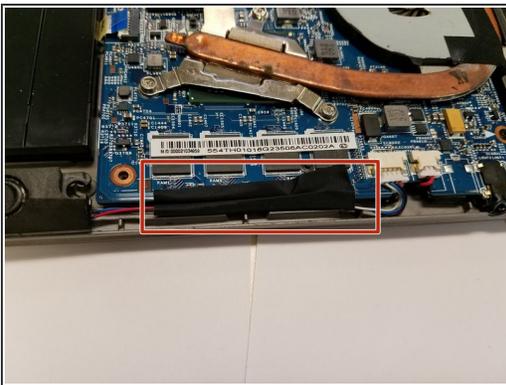


- Remove the black tape above the right speaker.
- Remove the right speaker.

## Step 7



- Remove the white connector above the black tape.

## Step 8

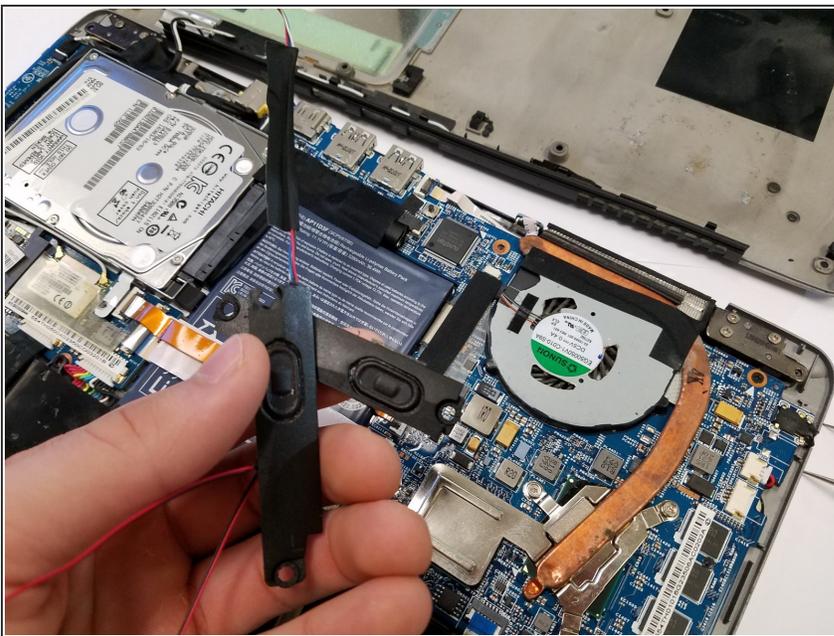

- The speakers are fully disconnected.

To reassemble your device, follow these instructions in reverse order.