



How to Fix a Correcting Tape

This guide will show you how to repair a correcting tape within a few steps.

Written By: Yi Luo




INTRODUCTION

This guide will show you how to repair a correcting tape within a few steps and make a full used of it.

TOOLS:


- [Scotch tape](#) (1)
 - [Utility Scissors](#) (1)
-

Step 1 — How to Fix a Correcting Tape

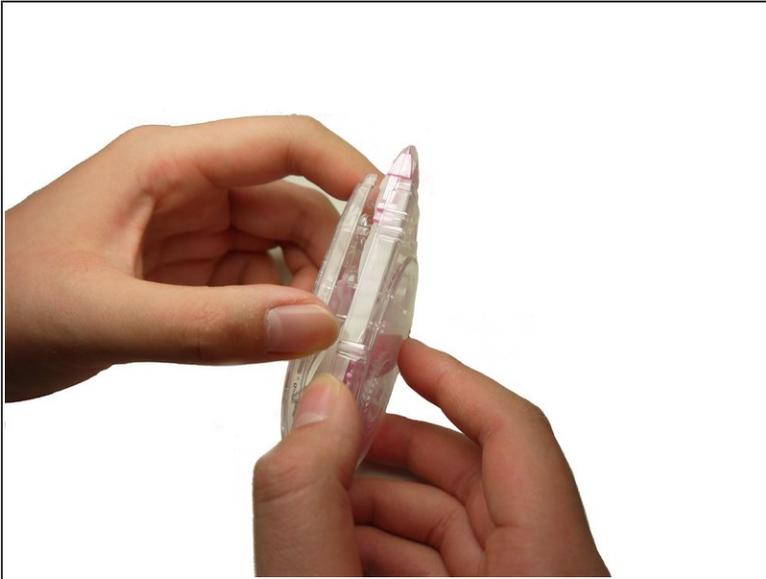

- From the button, open the case of the correcting tape.

Step 2

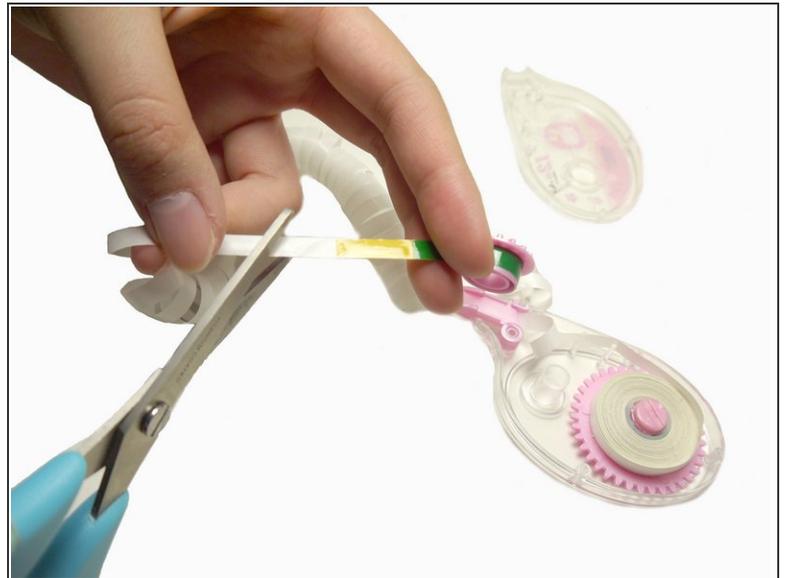

- Cut from the middle of the extra correcting tape and remove those used parts.
- Cut off those used parts from the place near the small gear.

Step 3



- Cut a small piece of the scotch tape.

Step 4



- Connect the remaining correction tape to the small gear by using a small piece of scotch tape.

Step 5



- After the connection is made, wrap the used tape tightly around the gear.
- Put all the parts back in place.

Step 6



- Close the case of the correcting tape and snap back to place.

Step 7



- You're done!

To reassemble your device, follow these instructions in reverse order.