



Asus K55VD DVD Player Replacement

This guide will help show you the correct way to be able to remove and replace the DVD Player.

Written By: Hector Morales



INTRODUCTION

If your Asus K55VD is having problems reading DVDs, not playing audio or videos properly, or DVD programs won't install properly then it may be experiencing a faulty optical disk drive which needs to be replaced.

TOOLS:

- [Fingers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



 Power off the device completely


- Flip the device over to its back cover.
- Use the switches to release the battery from its adapter.

Step 2 — Hard Drive




- Use a Phillips #0 screwdriver to remove the two 1.5 mm screws in the smaller portion of the bottom cover.
- After removing the screws, remove the smaller cover.

Step 3

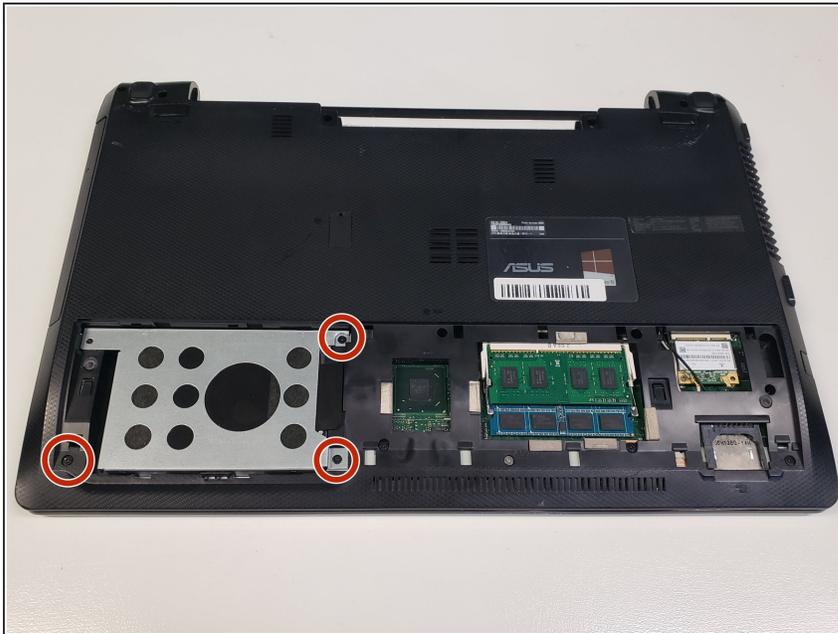

- Use a Phillips #0 screwdriver to remove the 1.5 mm screws that hold down the hard drive.

Step 4

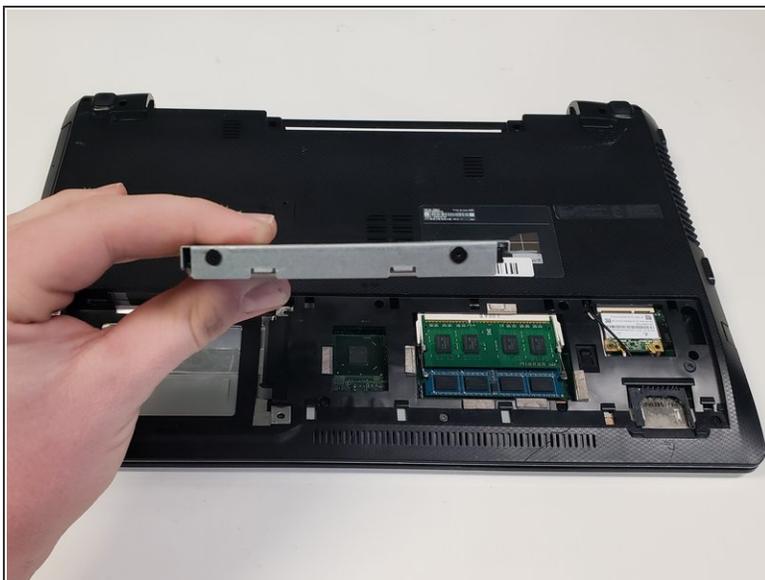


- Remove the hard drive from the slot.
- Remove the hard drive from its shell.

Step 5 — Optical Disk Drive




- Using the the Philips #0 Screwdriver remove highlighted screws.

Step 6

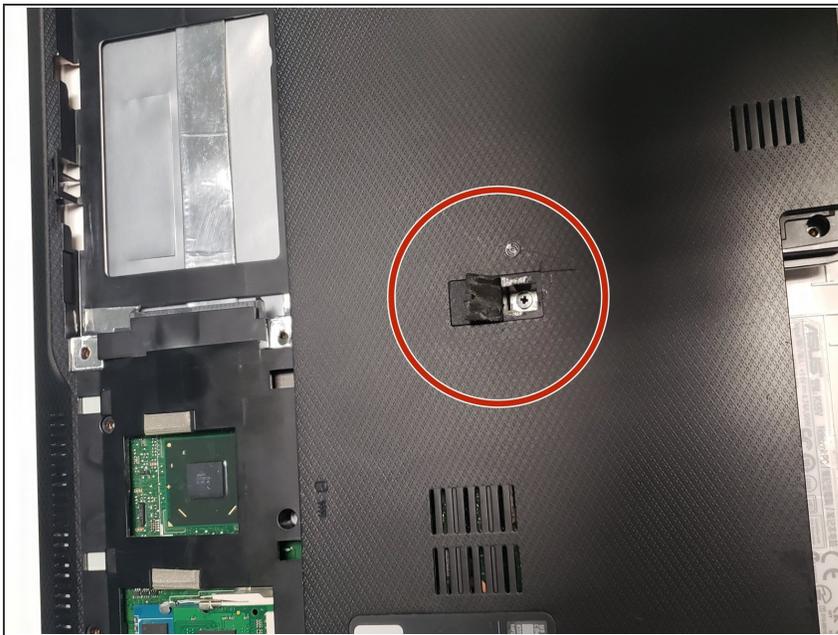


- Lift plastic cover with tweezers.
- Remove screw.

Step 7

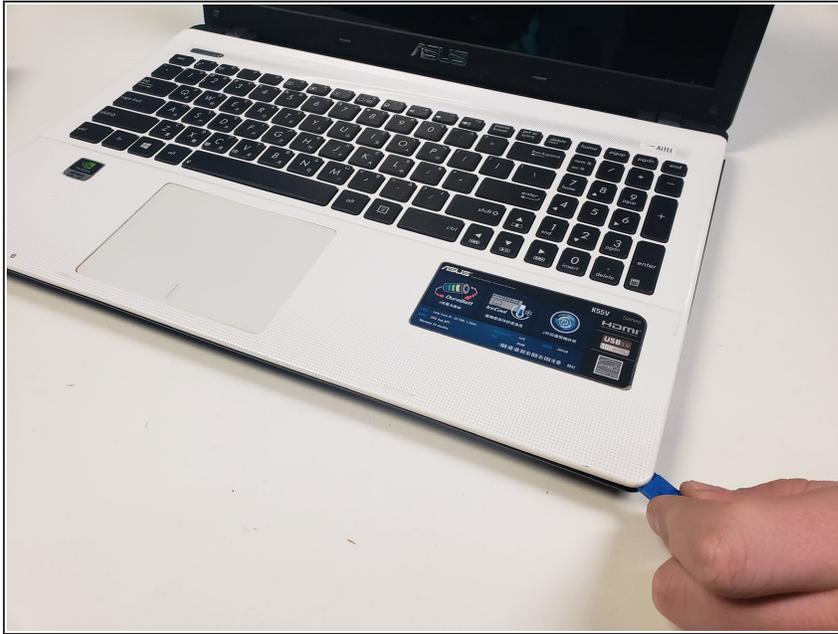

- Lift keyboard panel with plastic pry tool to remove.

Step 8

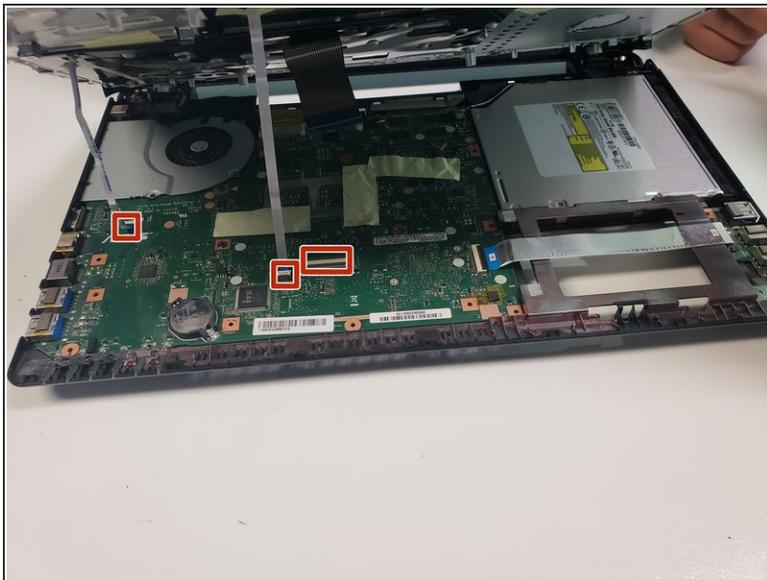

- Unhook all ribbons to remove keyboard panel completely.

Step 9



- Slide the DVD Player outward.

To reassemble your device, follow these instructions in reverse order.