



HP 17-x027ds Battery Replacement

How to replace a HP 17-x027ds battery.


Written By: Bryan Garza



INTRODUCTION

This guide will assist you in replacing the battery. You will need to replace the battery if it is not able to charge when plugged in.

Step 1 — Battery

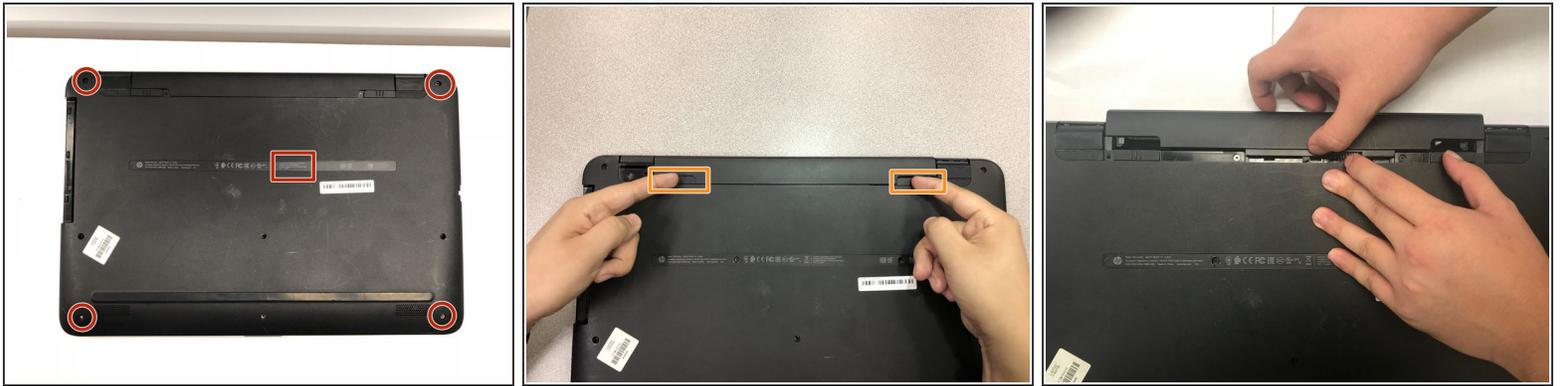

- Flip the laptop so you can see the serial number and the four 7mm screws in all the corners.
- Click the hinges by pushing them inward, which are located at the top of the laptop.
- Remove the battery by pulling it out.

To reassemble your device, follow these instructions in reverse order.