


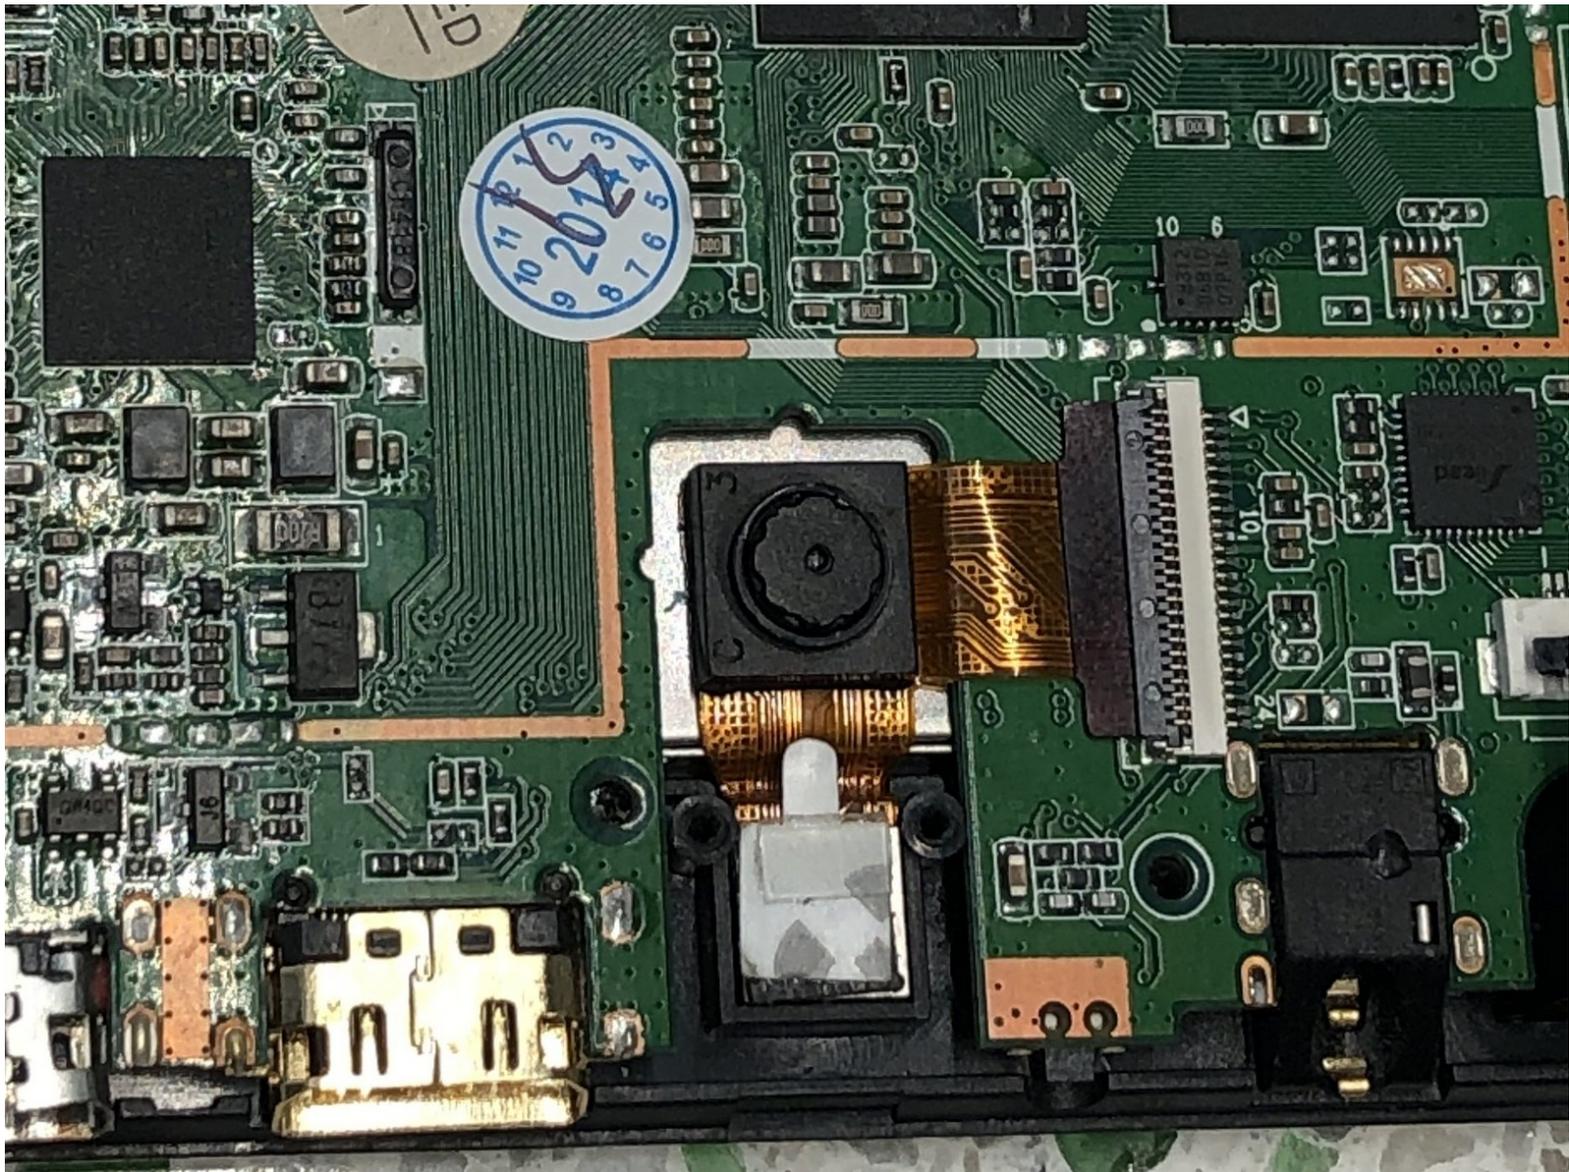

Supersonic SC-777BT Camera Replacement

This guide will help you with the replacement of the camera of the Supersonic SC-777BT.

Written By: Maiya Webster



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Camera




- Remove the back cover using the plastic opening tool.
- ⓘ Open the cover like a book so you do not disconnect the yellow plastic holding the cover to the motherboard.

Step 2




- Remove the two screws using the screwdriver.
- Use the tweezers to pull the camera out of place.
- ⓘ Be gentle while pulling it out so you do not pull any extra components out.

Step 3

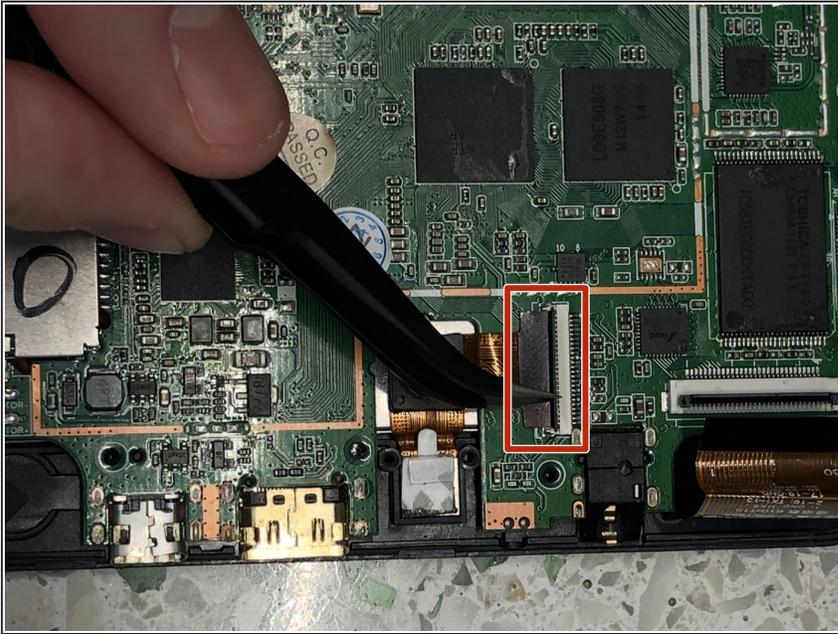

- Disconnect the yellow ribbon cable from the connector.

Step 4

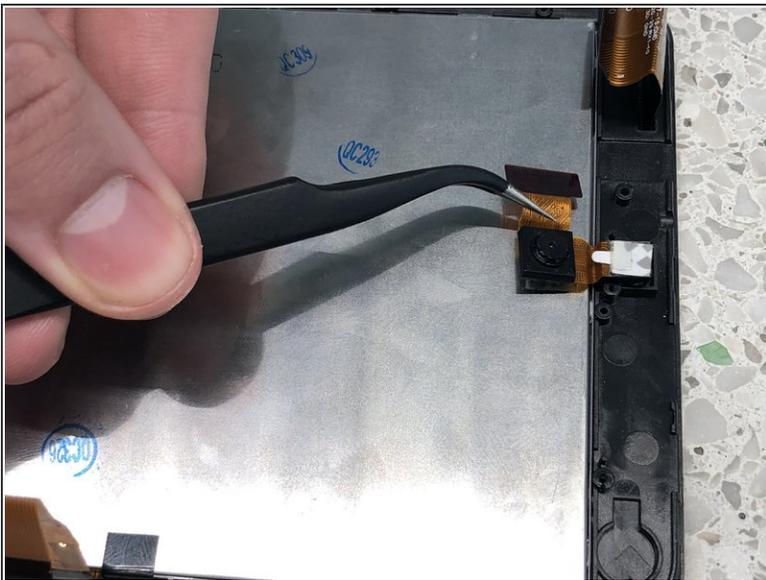

- Remove camera.
 - ⓘ It should just peel off like a sticker.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 07:03:54 AM (MST).

