



Samsung Chromebook Pro Key Replacement

This guide will demonstrate how to replace a key on a Samsung Chromebook Pro keyboard.

Written By: Amber Castro-Beltran



INTRODUCTION

Bring your keyboard back to life by following the guide below to replace a key for the Samsung Chromebook Pro.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Key




- Completely open your Samsung Chromebook Pro.

Step 2



- Place the plastic opening tool underneath any side of the key at an angle.

Step 3

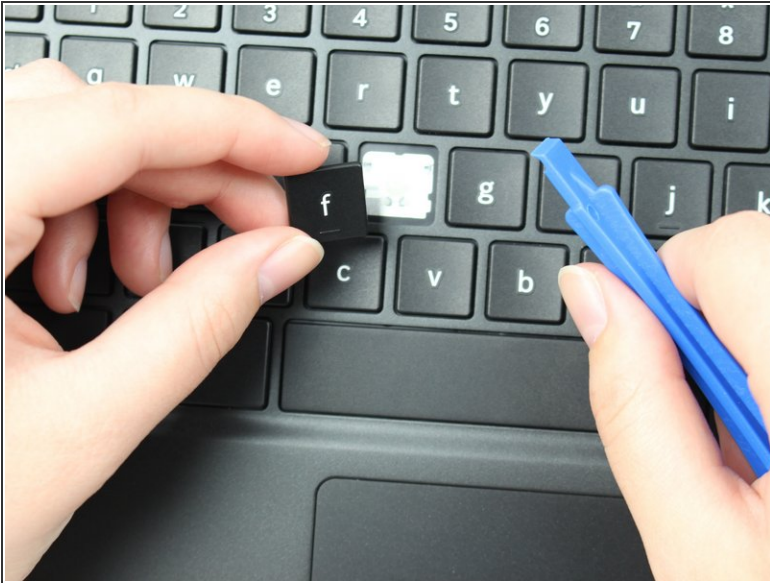

- Pry the key up using the plastic opening tool.

To reassemble your device, follow these instructions in reverse order.