




# Nokia Lumia 925 Speaker Replacement

This guide is to remove and replace a Nokia Lumia 925 speaker.

Written By: Guillermo Lara

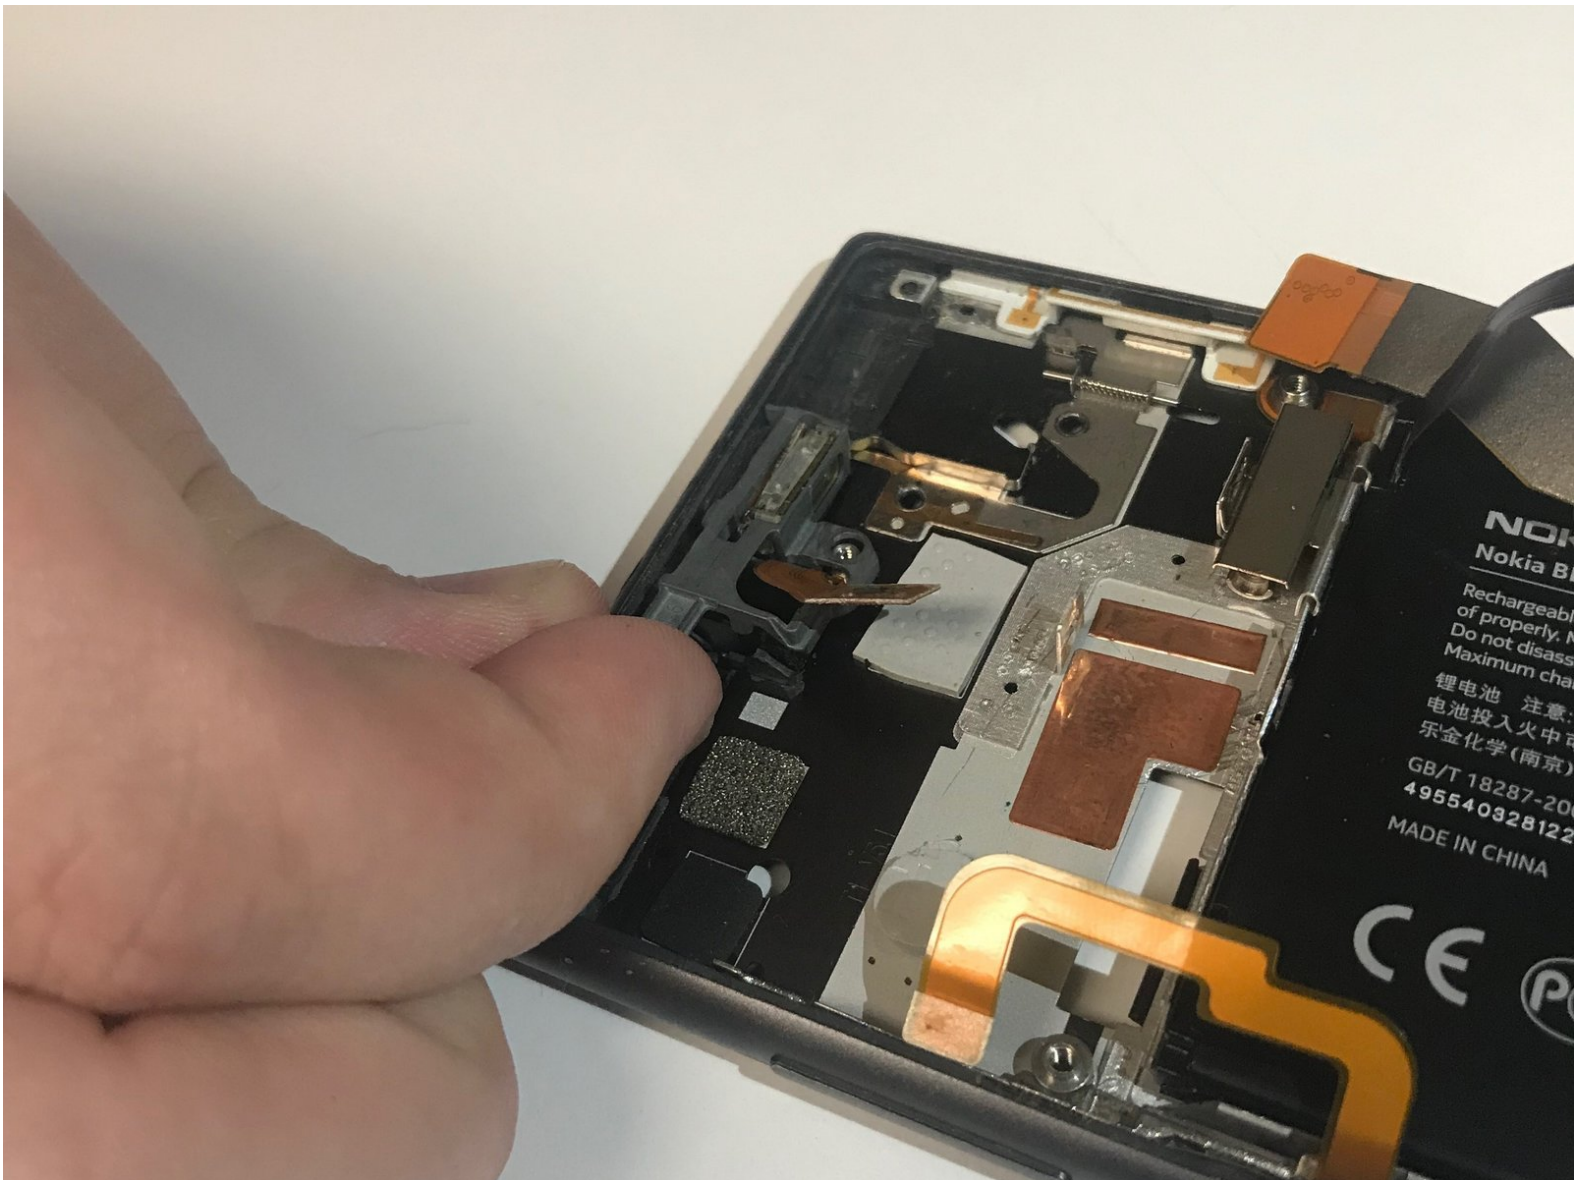



## TOOLS:


- [T7 Torx Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [ESD Safe Tweezers Blunt Nose](#) (1)

## Step 1 — Motherboard




- Remove the sim card holder by inserting tweezers into the hole. Push down and the holder will spring back up.
- Pull out the holder until it is completely separate.
- ⓘ Something like a paperclip will work if there are no tweezers available.

## Step 2

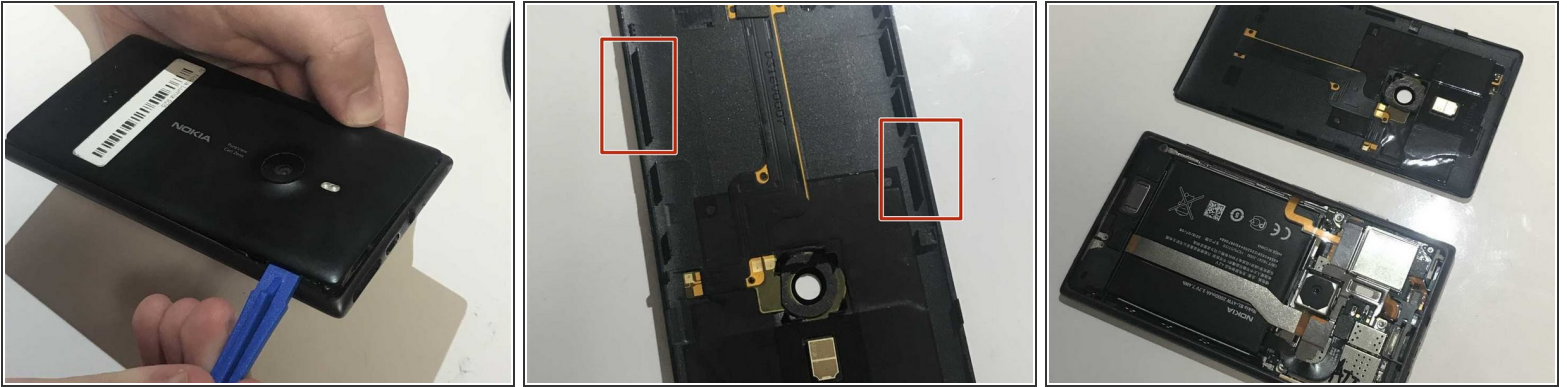

- Slide a plastic opening tool under the back cover.
  - Slide the tool around the outsides of the cover to fully dislodge the pins holding the cover to the phone.
- ⚠ Some pins are facing the opposite way from the others.



## Step 3

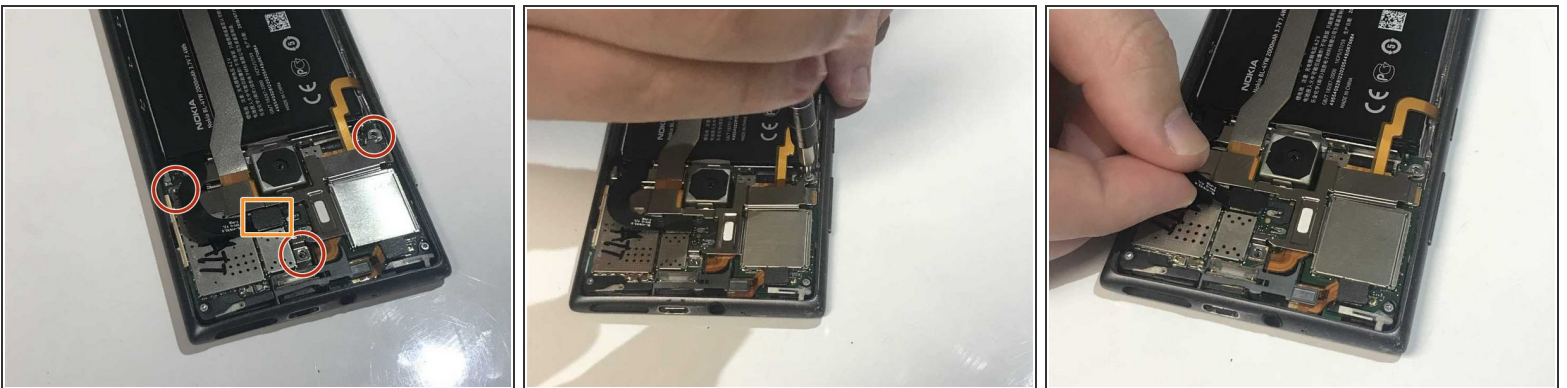

- Remove the 3 screws using the T7 Torx screwdriver.
- Unclip the black tab connector.





## Step 4

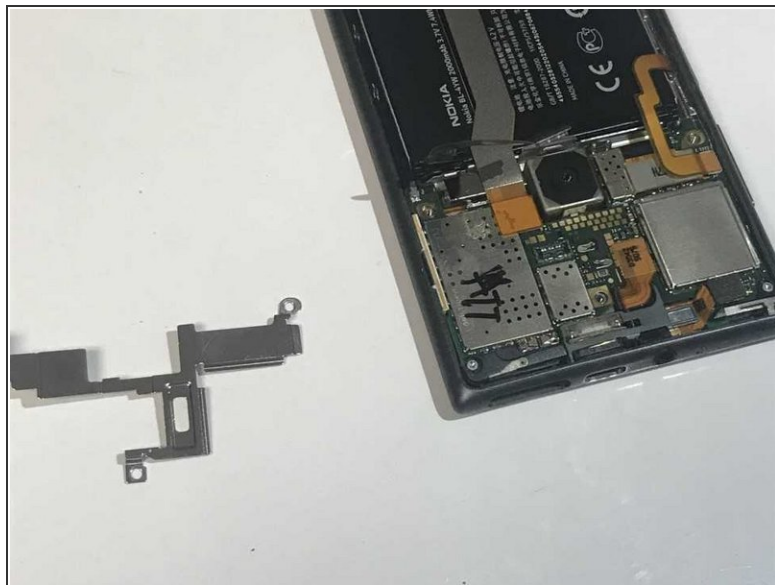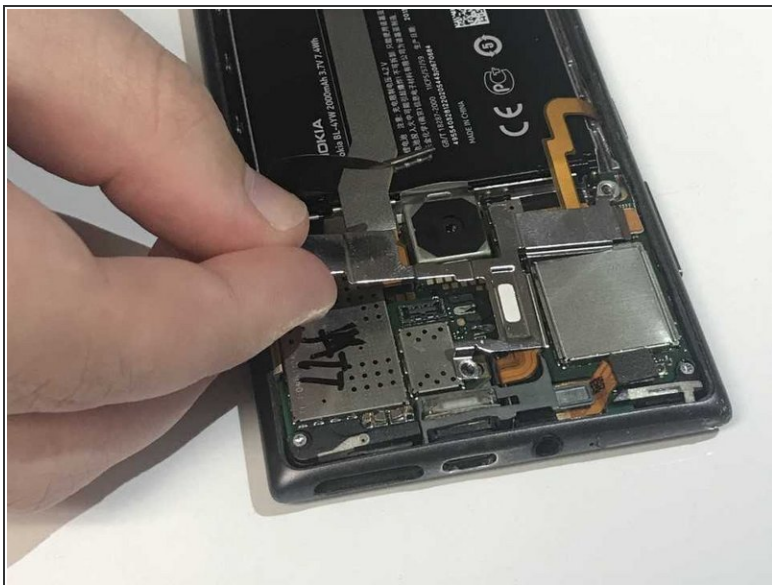

- Remove the silver metal cover.


⚠ Be careful of the tape under the right square side of the panel. Using a spudger helps.

## Step 5

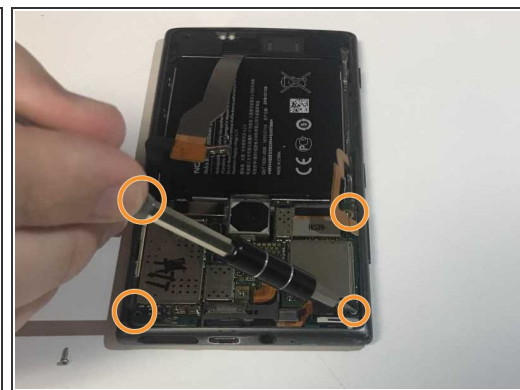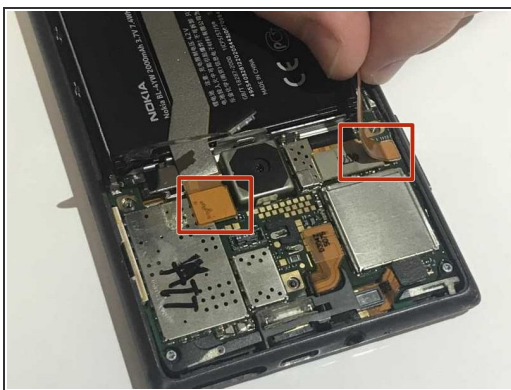

- Unclip the two orange tabs.
- Remove the four silver screws using the T5 Torx screwdriver.

## Step 6

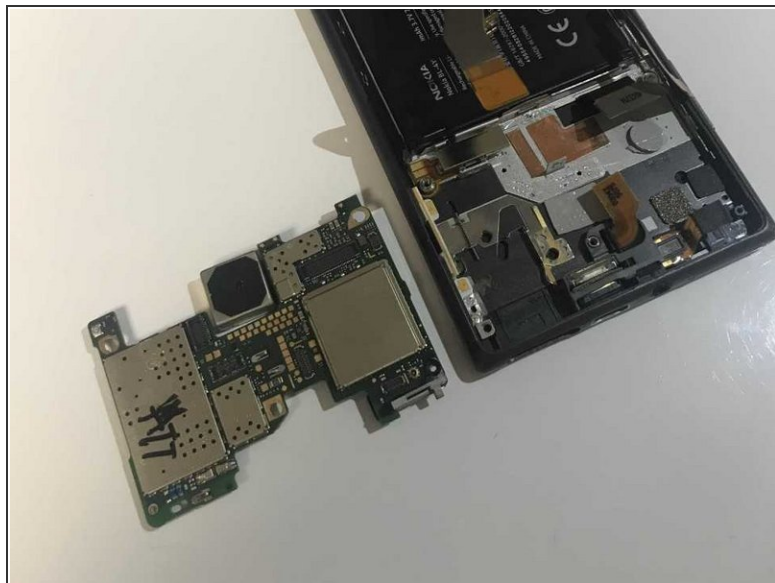

- Remove the motherboard by sliding tweezers between it and the back of the screen. Lift up.


## Step 7 — Display



- Push the screen from the inside of the phone.
- Pull the screen off.
- ⓘ Slide the electronic strip through the small opening.





## Step 8 — Speaker

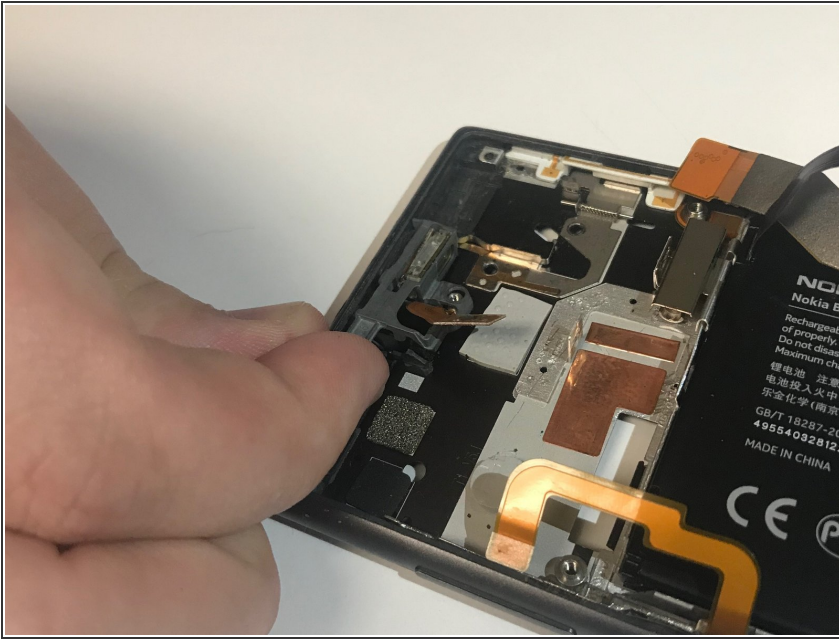

- Locate the grey speaker/camera cover.
- Carefully remove the cover with either a pair of tweezers or your fingers.

## Step 9

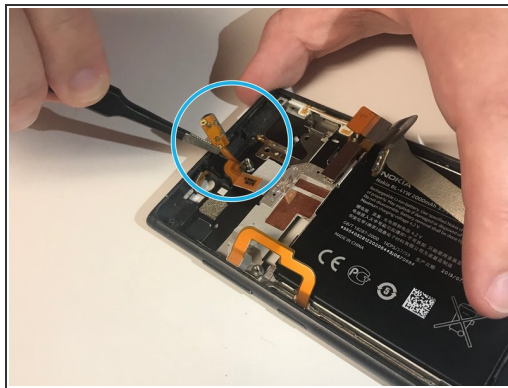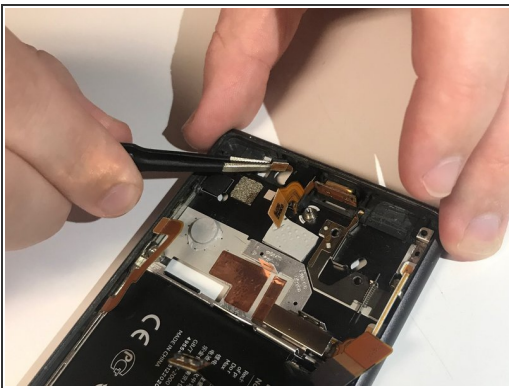

- With a pair of tweezers, gently remove the orange colored tab closest to the speaker.

To reassemble your device, follow these instructions in reverse order.