




# Samsung Chromebook 2 XE503c12 Speakers Replacement

Replace broken speakers to help improve the sound on your laptop

Written By: Britney Betterman

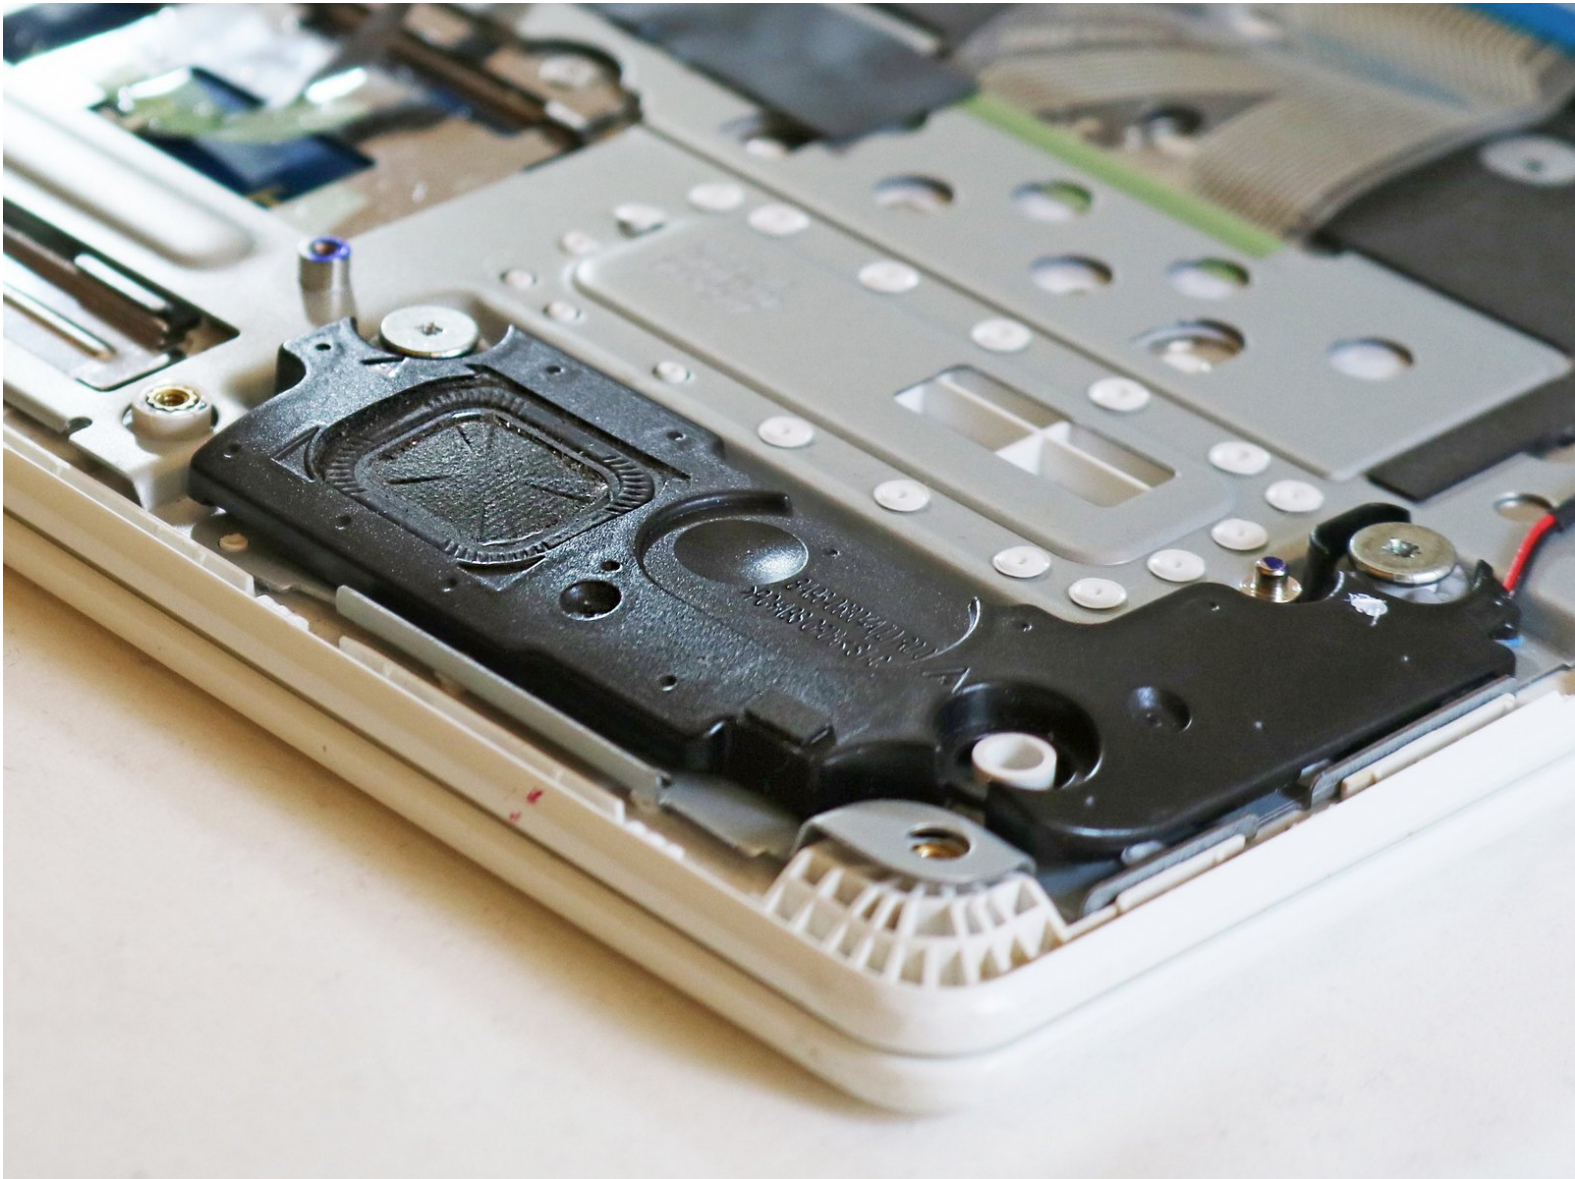

---

# INTRODUCTION

Issues with horrible sound quality or bad speakers can be fixed by following this guide.

---



## TOOLS:

- [Magnetic Project Mat](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Flip device over so that the underside is facing up.
- Remove nine, 7mm PH#0 screws from the bottom.





## Step 2




- Using the plastic opening tool, pry open the bottom of the Chromebook case, working all around the computer.
- Lift the panel out of the way to reveal the battery.

## Step 3

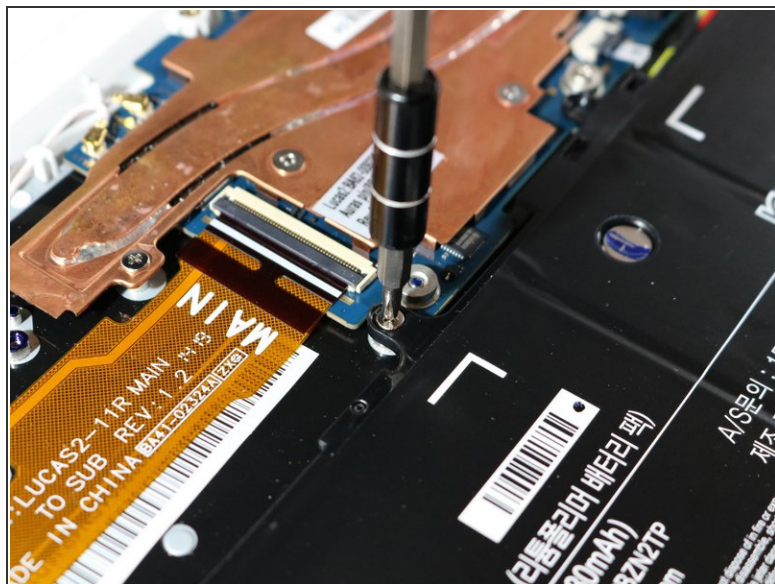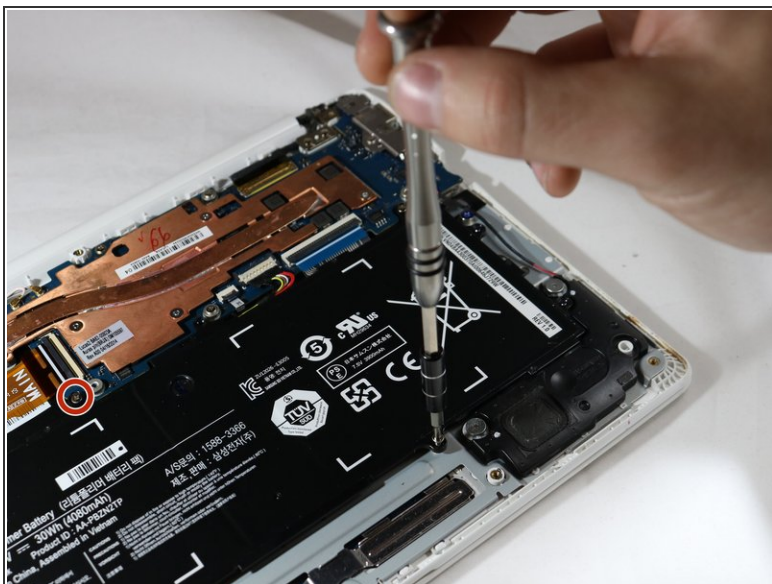

- Remove four, 5mm Phillips #0 screws connecting the battery to the laptop


## Step 4

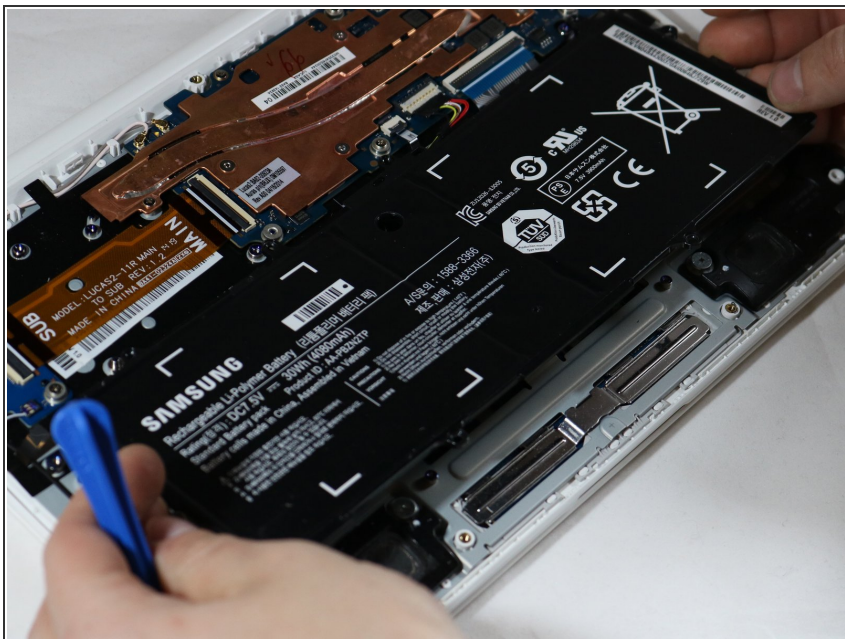

- Lift the battery, and pull it up and towards you, away from the connector.

⚠ Be sure to lift gently to avoid damage to connector



## Step 5

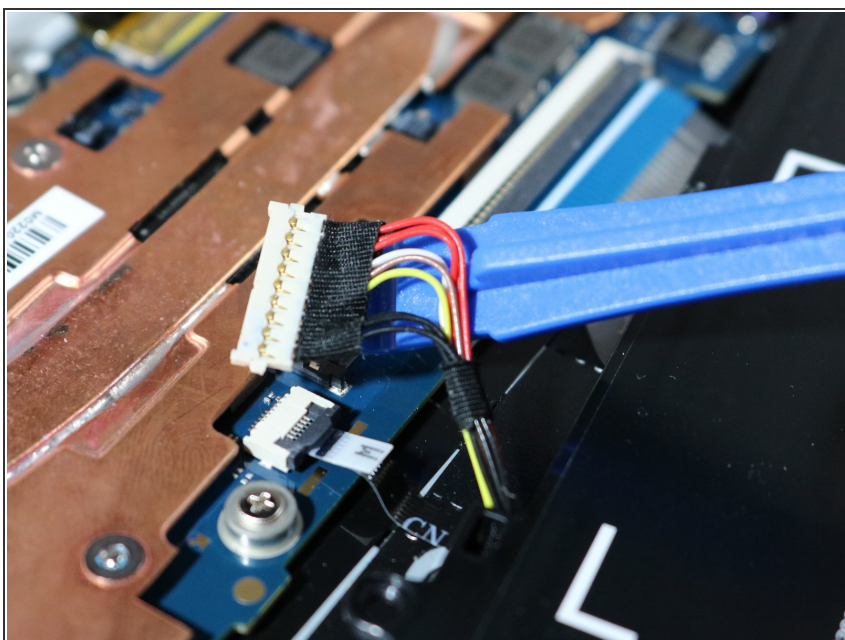

- Using a plastic opening tool, pry the connector up from the contact.
- Remove the battery from the device.



## Step 6 — Speakers

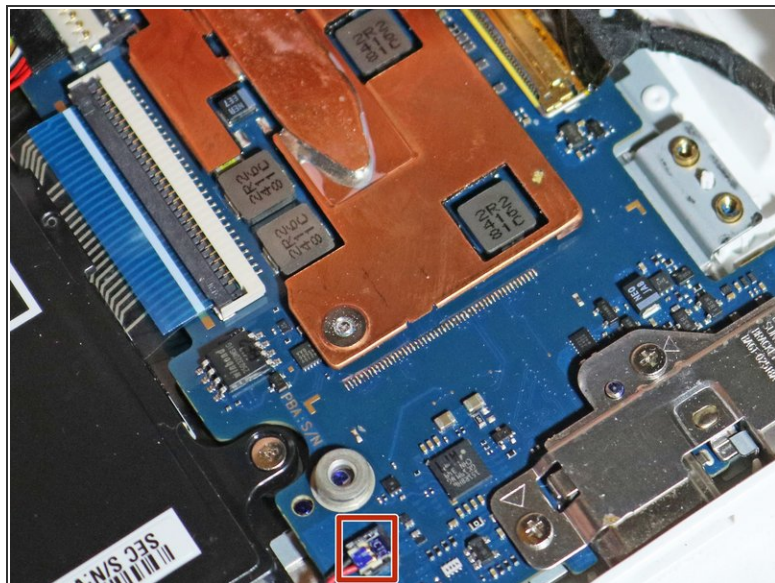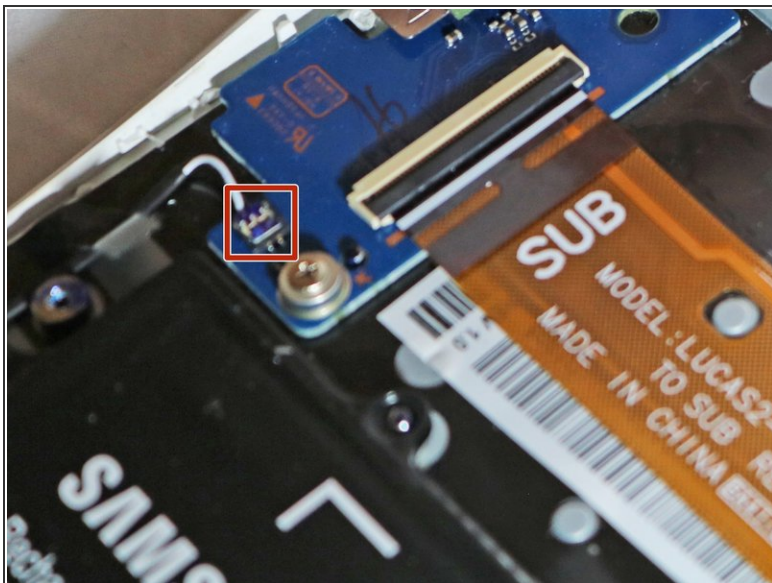

- Remove the connectors for each speaker.

## Step 7



- Remove two 7mm Phillips #0 screws from each speaker.
- Pull speakers out of laptop.

To reassemble your device, follow these instructions in reverse order.