



HP 17-x027ds Keyboard Key Replacement

How to replace an HP 17-x027ds keyboard key.

Written By: Tyrin



INTRODUCTION


This guide shows how to extract a key from the laptop.



TOOLS:

- [Metal Spudger](#) (1)
-

Step 1 — Keyboard Key

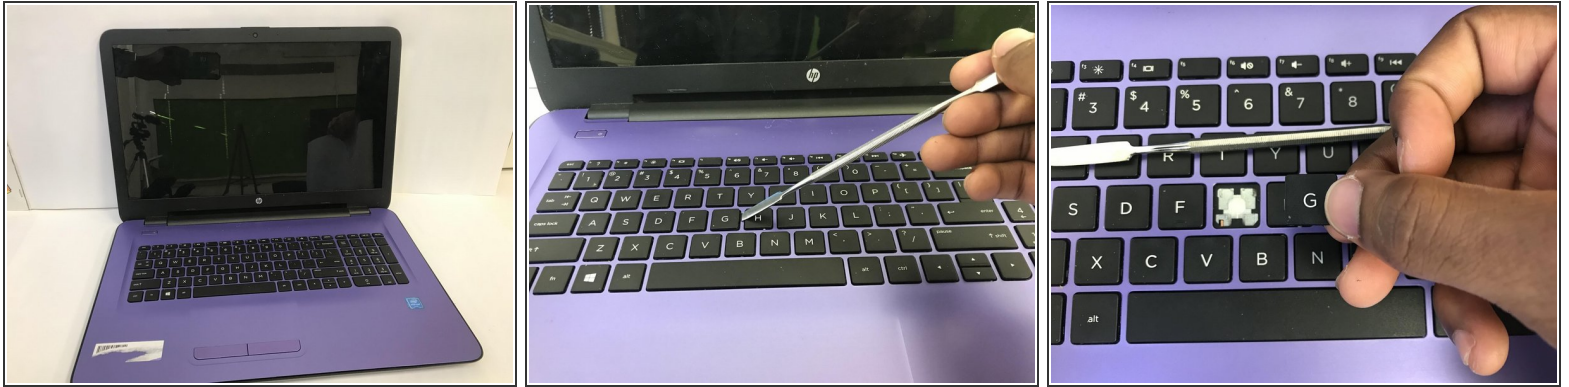

- Use a metal spudger or your fingernail to extract the key.

To reassemble your device, follow these instructions in reverse order.