




Asus Q302UA-BHI5T20 Hard Drive Replacement

This guide will explain and illustrate how to remove and replace the hard drive of the Asus Q302UA-BHI5T20 laptop.

Written By: Houston Koontz

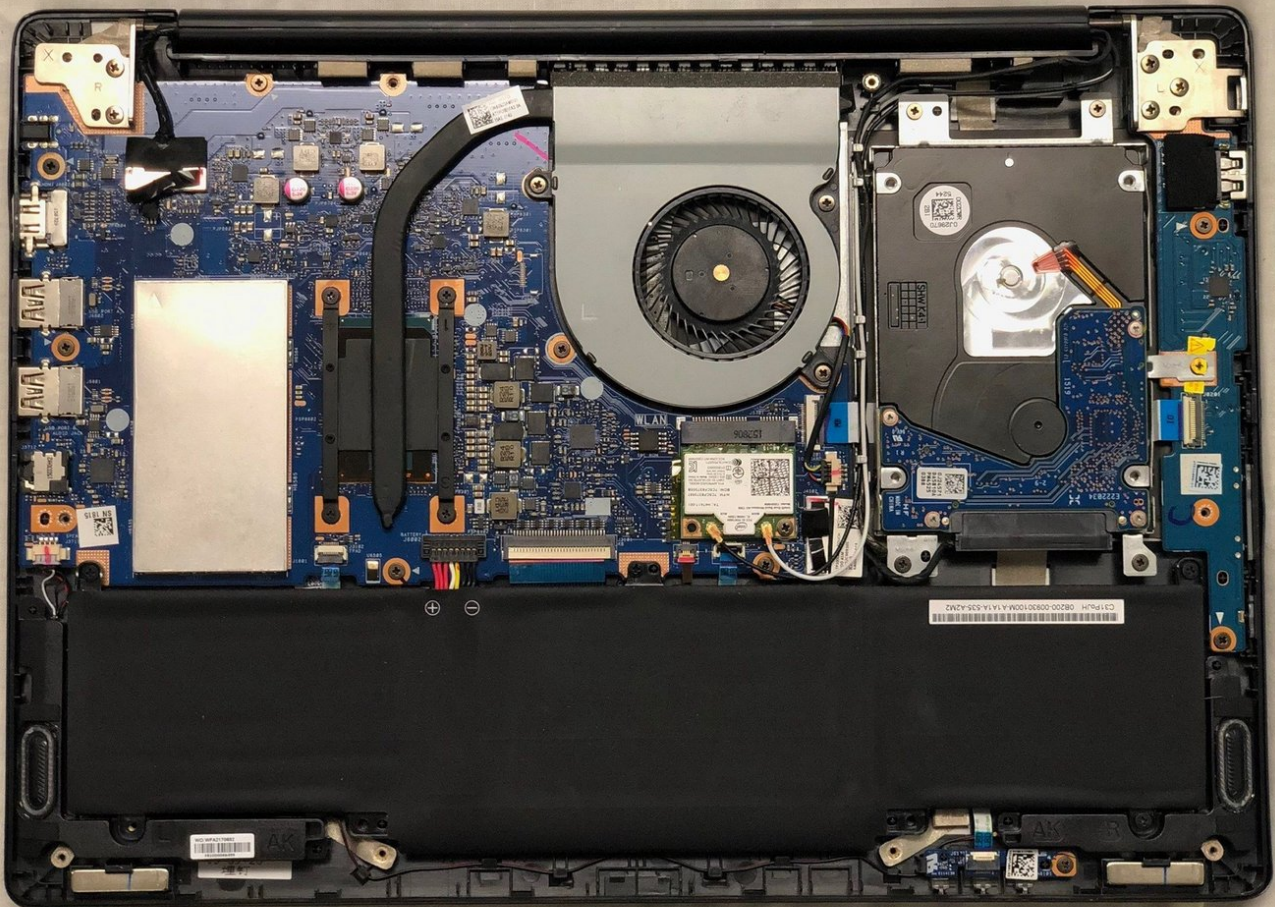

INTRODUCTION


This guide will help you replace the hard drive in case of hard drive failure or wanting to upgrade it. Be sure to follow this guide in a well lit room on a flat surface. Acquire the necessary tools before hand and have a cup or a magnetic plate to keep track of all the screws.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Hard Drive

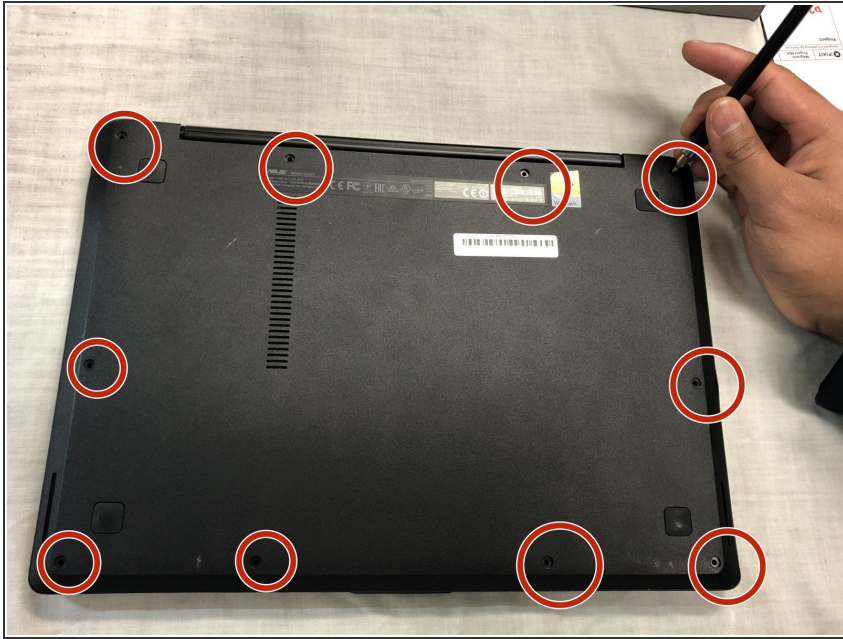



- Remove the ten 10mm Phillips #0 screws.

Step 2

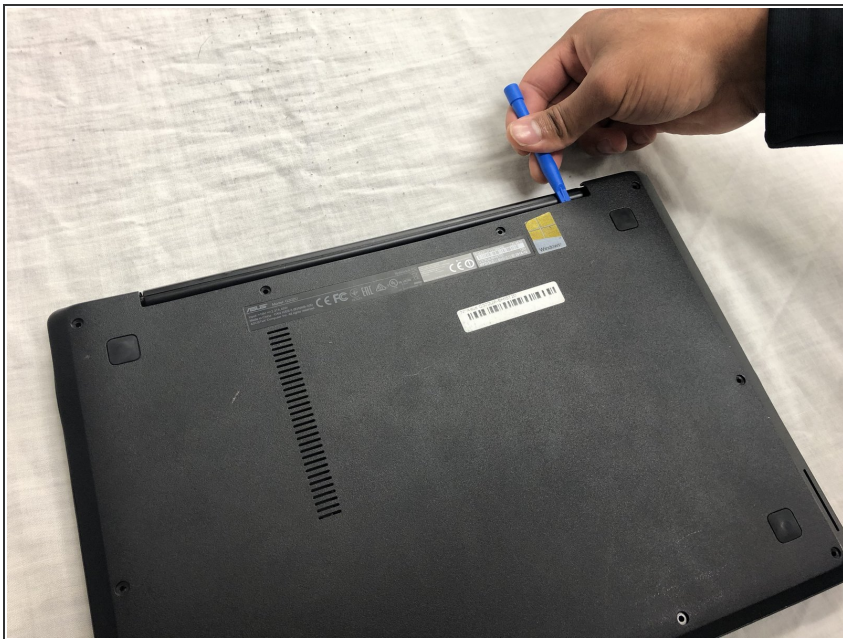



- Use the iFixit opening tool to pry off the back cover of the laptop.

Step 3

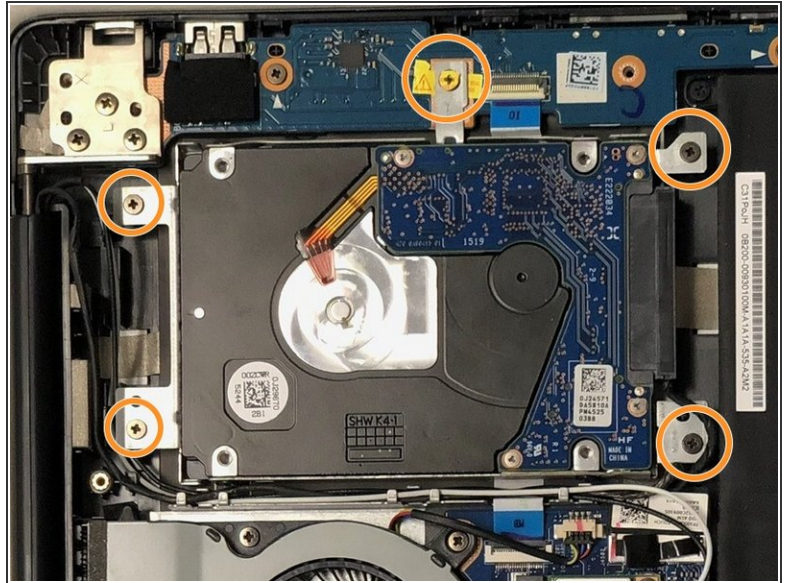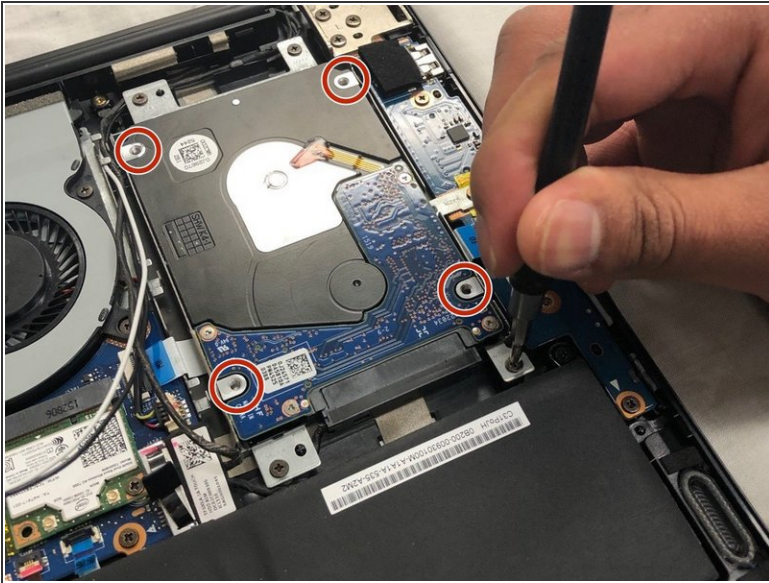


- Remove the four screws from the hard drive bracket.
- Remove the five 4 mm Phillips screws.

Step 4

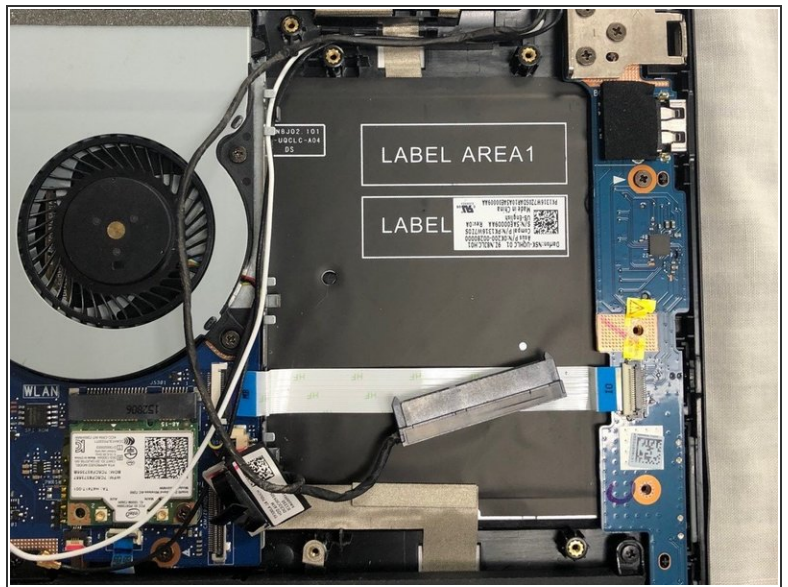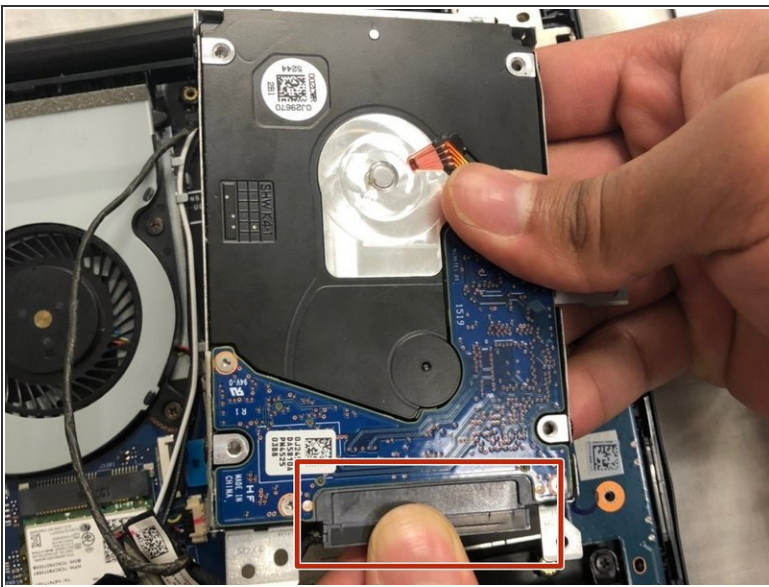

- Pull on this black connector piece to remove it from the hard drive.
- The second picture shows how things should look at this point.

Step 5

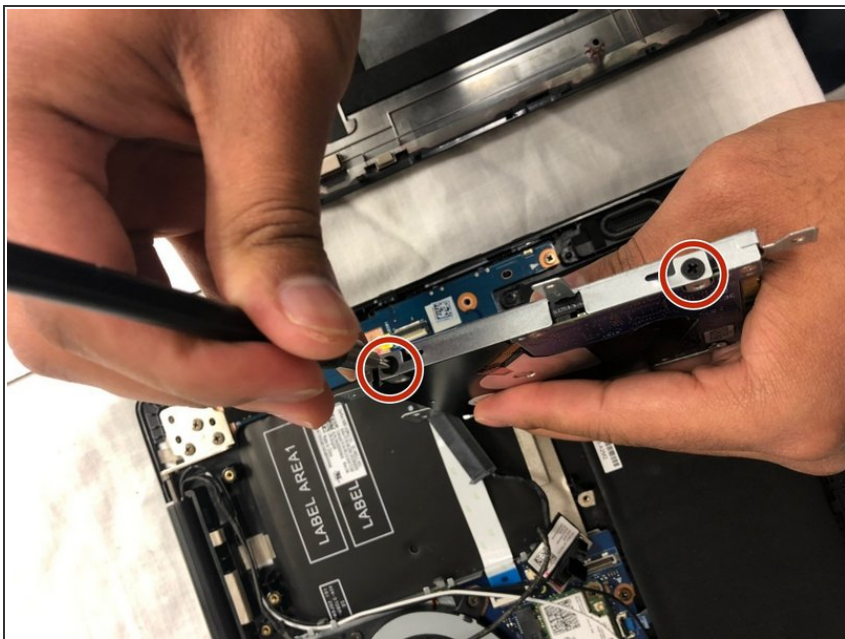

- Remove these two 4 mm Phillips screws holding the hard drive to the bracket. Repeat on the other side of the bracket.
- Pull the HD from its housing.

To reassemble your device, follow these instructions in reverse order.