


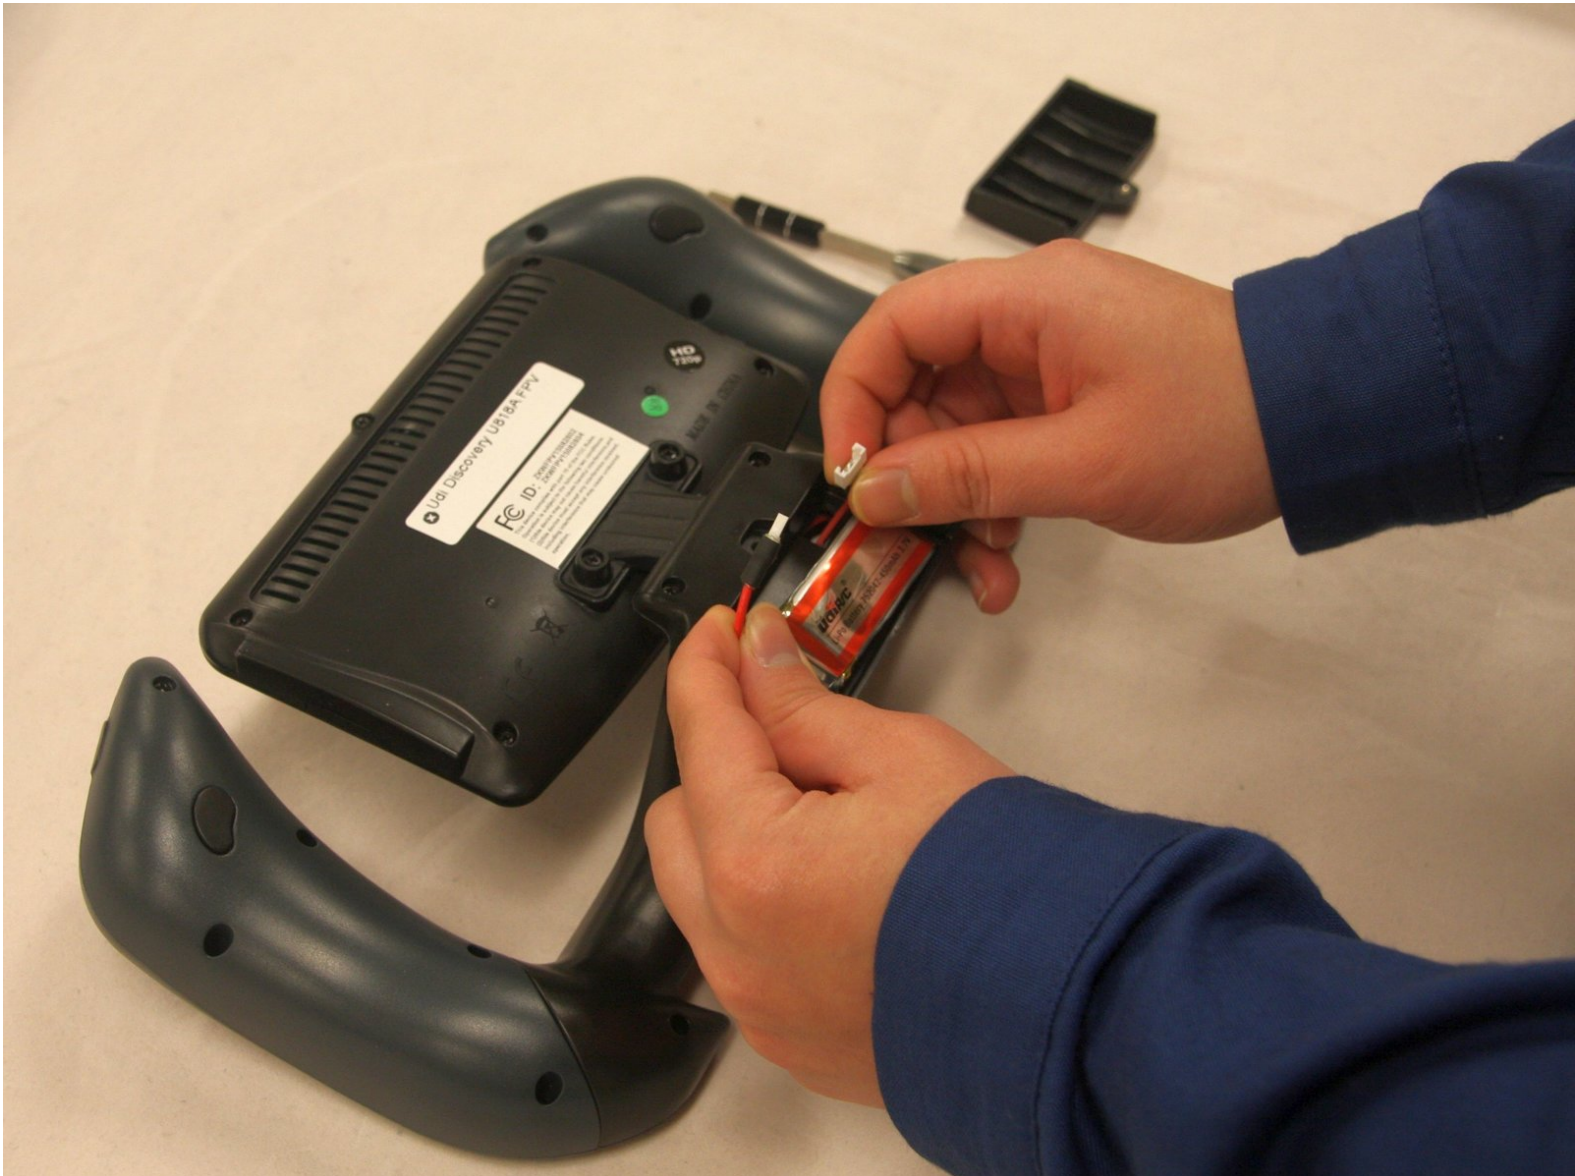

# Udi Discovery U818A FPV Controller Battery Replacement

How to replace the controller battery of a Udi Discovery U818A FPV drone.

Written By: Raghda Al-Hmeyrat



---

## INTRODUCTION

This guide will show you how to replace the battery of your Udi U818A FPV drone controller. You will need a JIS #0 screwdriver to complete this task.



### TOOLS:

- [JIS #0 Screwdriver](#) (1)
-

## Step 1 — Controller Battery



- Turn the remote control over so that the buttons and joysticks are facing downward.


## Step 2



- Using a JIS #0, unscrew the silver 4mm screw that holds the battery cover in place.



## Step 3

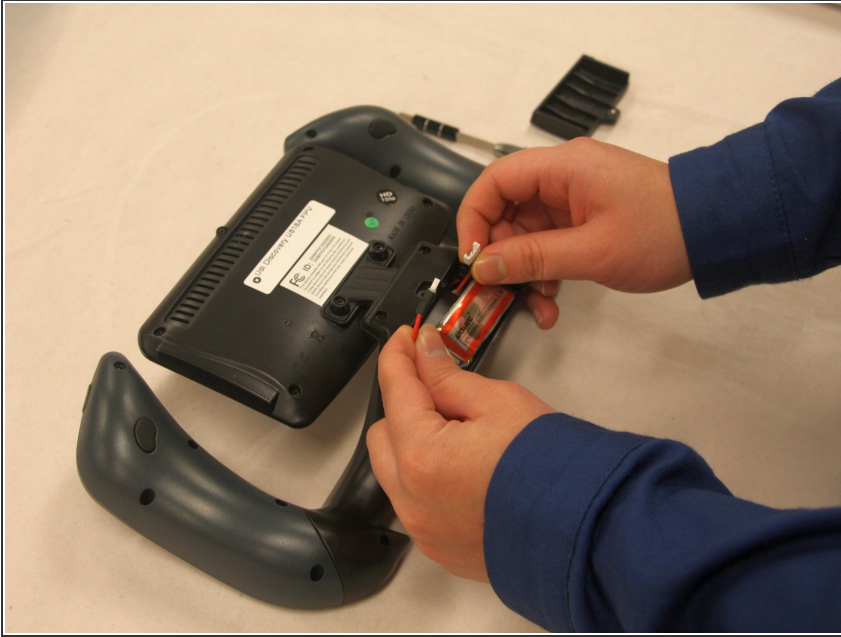

- Open the battery access panel.
- Disconnect the red and black wires.
- Remove the depleted battery.

To reassemble your device, follow these instructions in reverse order.