




# ASUS Padfone X mini Station Speaker Replacement

How to replace a faulty ASUS Padfone X mini Station speaker to restore sound to your device.

Written By: Alexzander Pastore

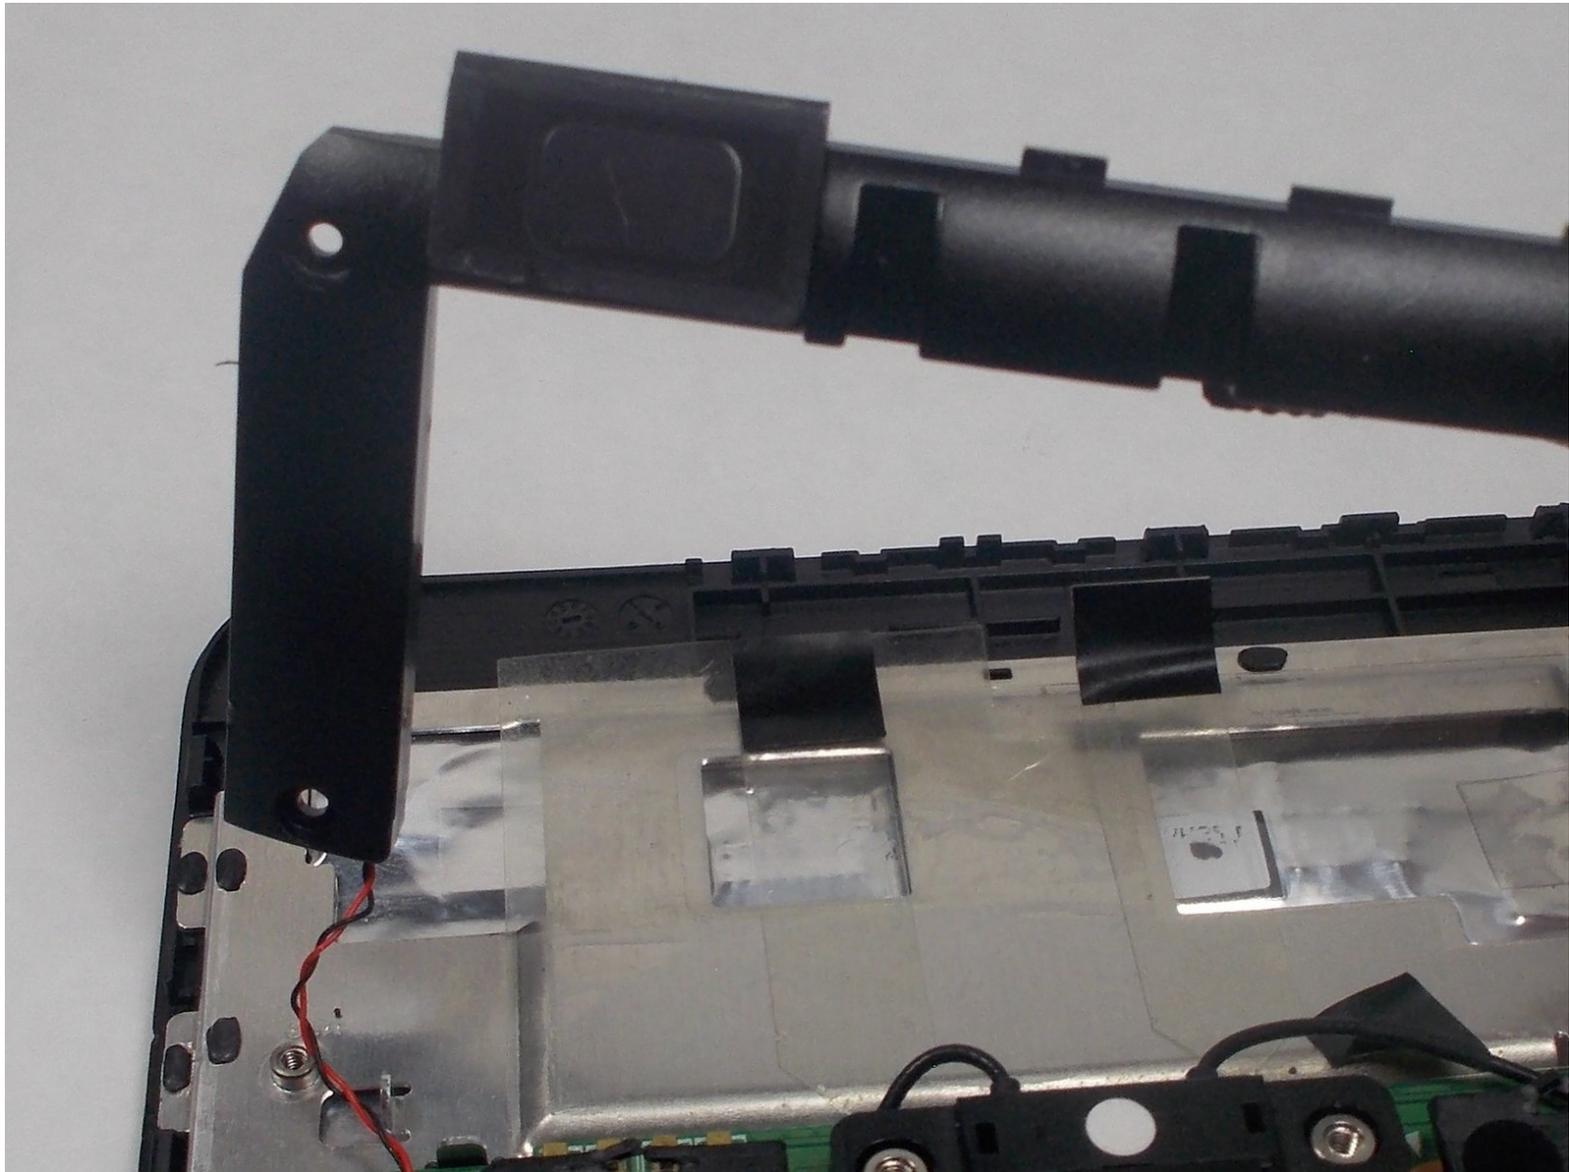

---

## INTRODUCTION

This guide will be helpful for repairing the speaker if the troubleshooting page recommends that you replace it. This is a necessary step when you have determined no other way to repair your current speaker.

---

### TOOLS:



- [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Battery



- Insert the plastic opening tool between the edge of the screen and the back cover.
- Gently pry them apart. Use hands to pull them apart if necessary.

## Step 2

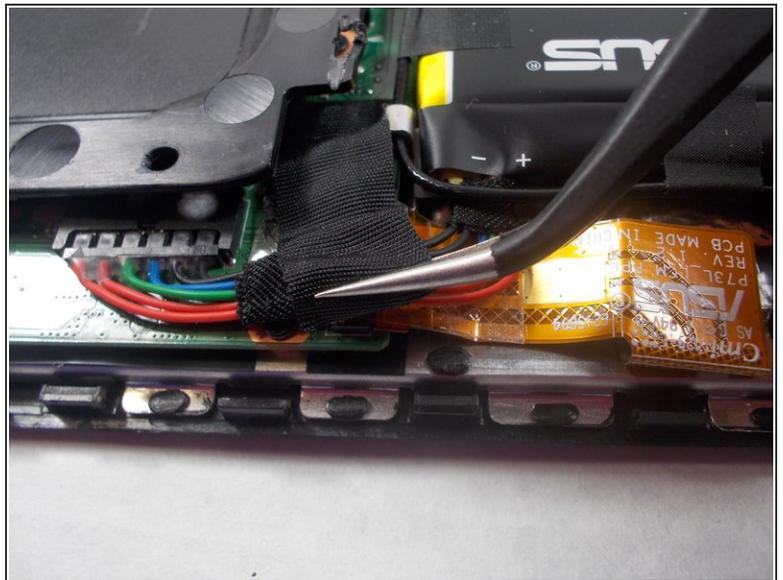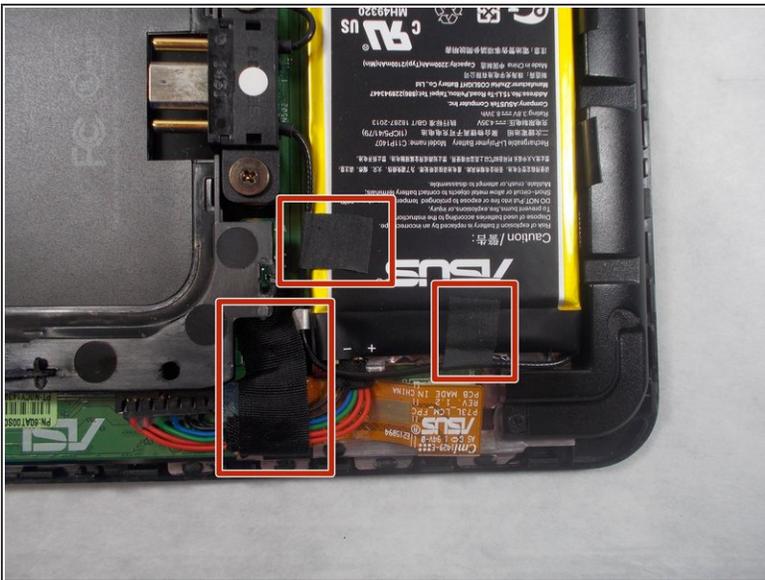

- Remove the three pieces of tape that secure the battery and its wires. Peel gently so you don't damage any wires.

## Step 3



- Disconnect the ribbon from the motherboard by gently pulling with your fingers.
- Using the opening tools, pry the battery off of the adhesive.
- ⓘ Be careful not to pull the battery out right away. The ribbon cable is tucked beneath another wire.

## Step 4 — Speaker




- Use a Phillips #00 screwdriver to remove the three 2.5mm screws that secure the speaker case to the motherboard.
- ⓘ Remove all tape covering the screws before removing them.

## Step 5



- Use tweezers to remove the three pieces of tape that are covering the metal.
- Insert the metal spudger beneath the speaker case and wedge it upwards to remove speaker case from the device body.

## Step 6

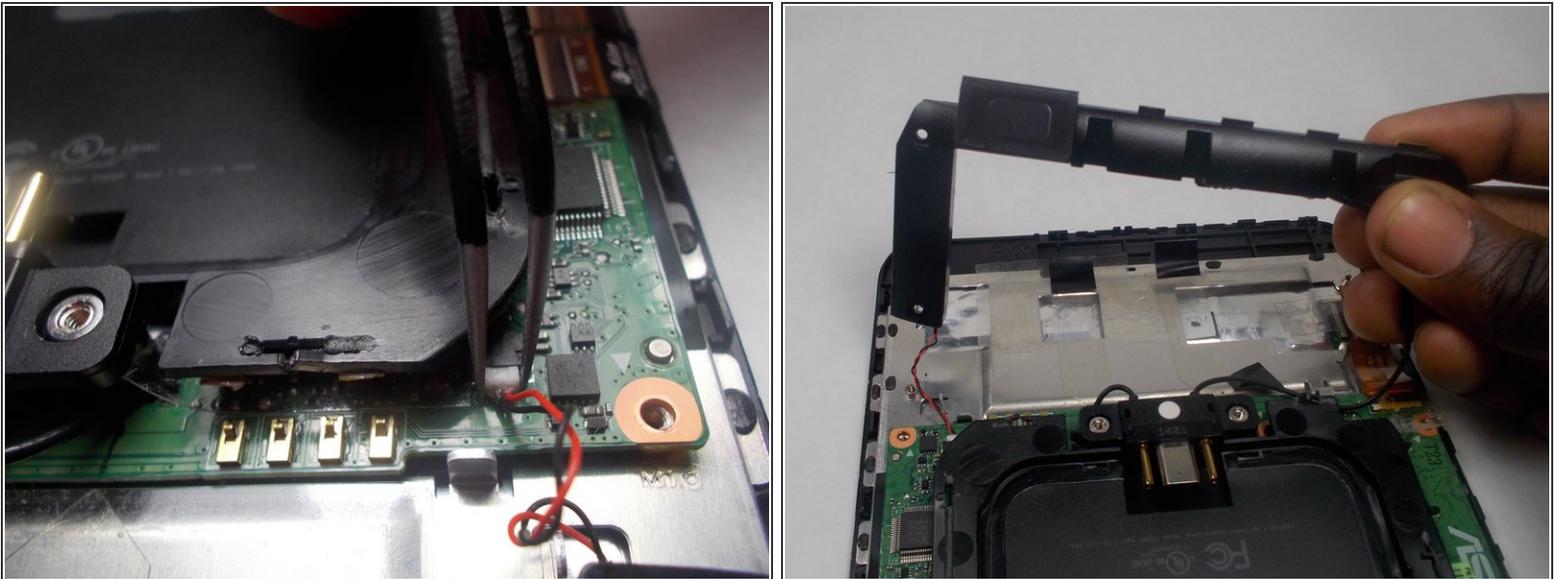

- Use tweezers to detach the connector from the motherboard.

To reassemble your device, follow these instructions in reverse order.