



# Sony Vaio VPCF2390X Optical Drive Replacement

If you are experiencing trouble with your...

Written By: Alejandro Lopez



---

## INTRODUCTION


If you are experiencing trouble with your optical drive, you may need to use this guide in order to replace it. This is a beginner level process. There is no background knowledge or special requirements you need in order to successfully replace your optical drive.



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Optical Drive

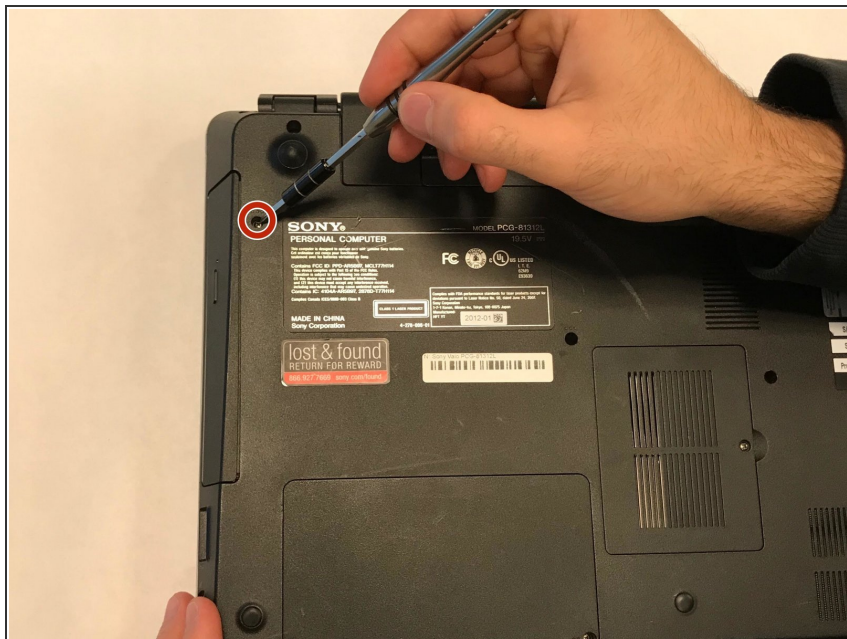

- Remove the first of two screws located at the marker in the photo.


## Step 2

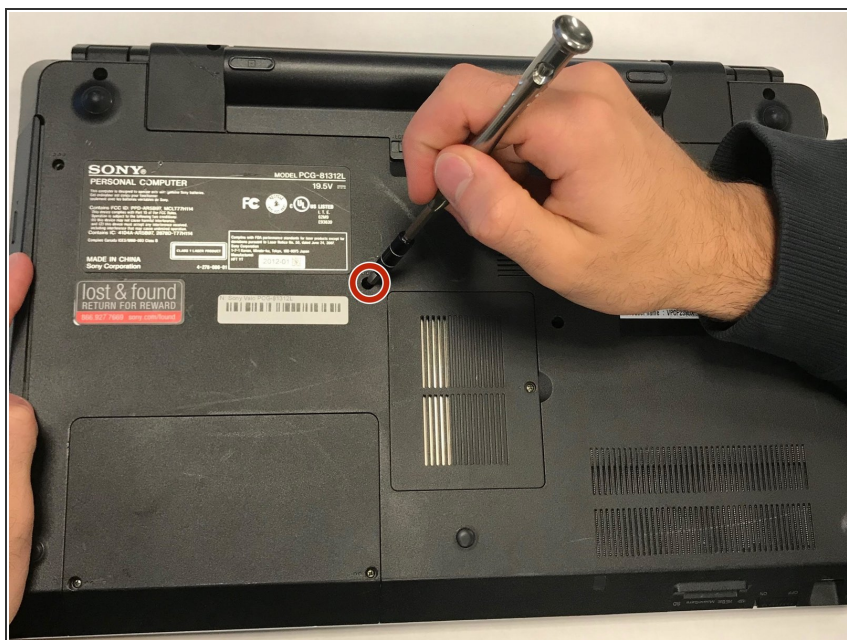

- Remove the second of the two screws located at the marker in the photo.



## Step 3

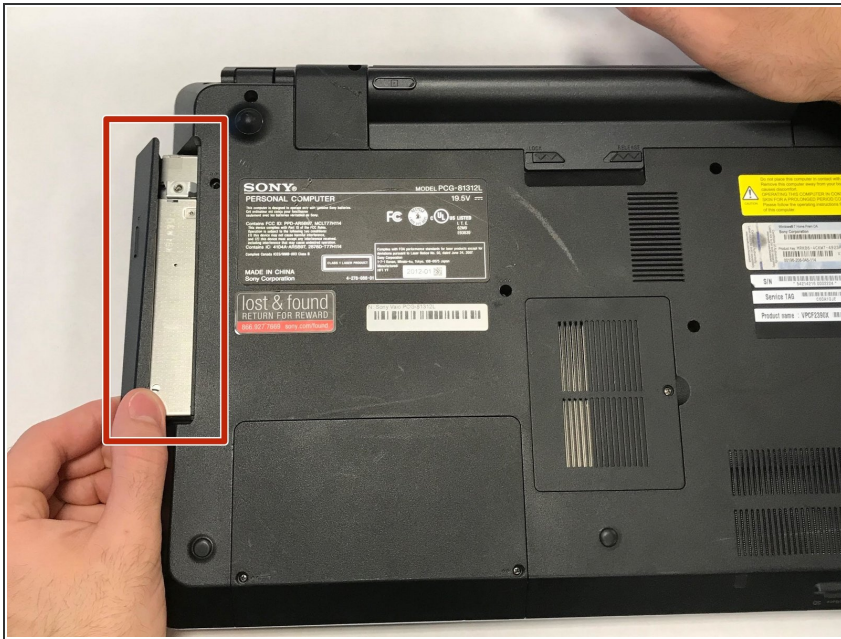

- Grab and slide out the tray from the side of the laptop after both screws have been removed.

## Step 4



- ❗ Slide in new CD drive and repeat steps 2 and 1 in reverse to screw the new drive down.

To reassemble your device, follow these instructions in reverse order.