



LG Intuition Volume Buttons Replacement

This guide will replace the volume up and down buttons on your LG Intuition.

Written By: Thomas Morrissey



INTRODUCTION

If the phone's volume will not increase/decrease or the buttons are not functioning properly, use this guide to replace your volume buttons.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery




- Turn the device so the two bottom screws are shown.

Step 2



- Remove the two 7mm screws holding the back panel of the phone using the P5 bit and magnetic driver.

Step 3

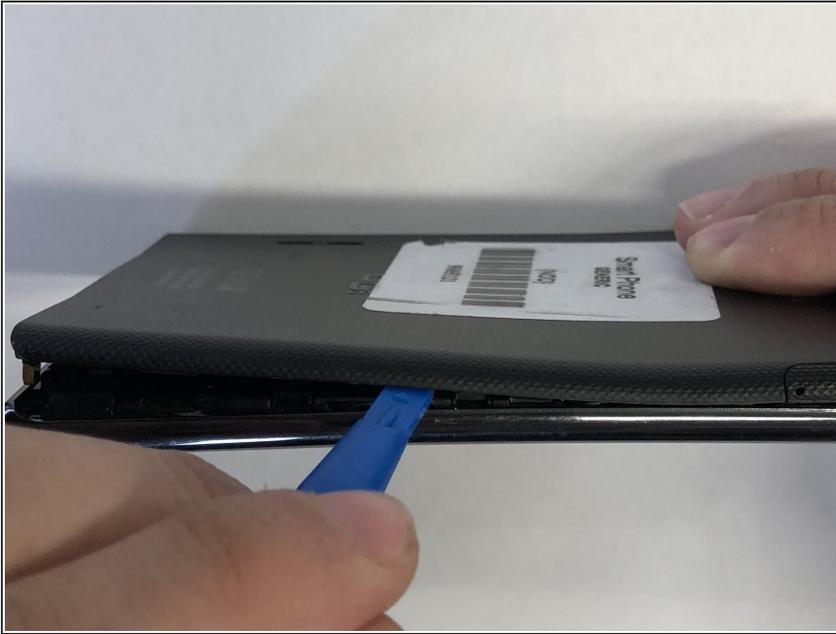


- Carefully use the plastic opening tool to pry the back panel of the phone from the front screen. This will expose the battery and other parts.

Step 4




- Use the Phillips #0 screwdriver to remove the 5mm screw holding the metal bracket that protects the battery's ribbon cable.

Step 5

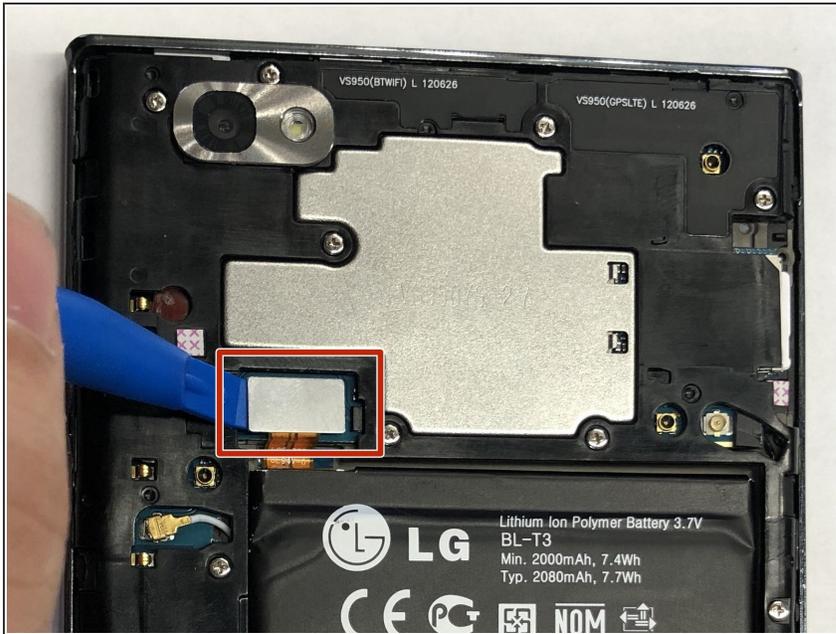

- Carefully use the plastic opening tool to pry the ribbon cable connecting the battery to the motherboard of the phone.

Step 6

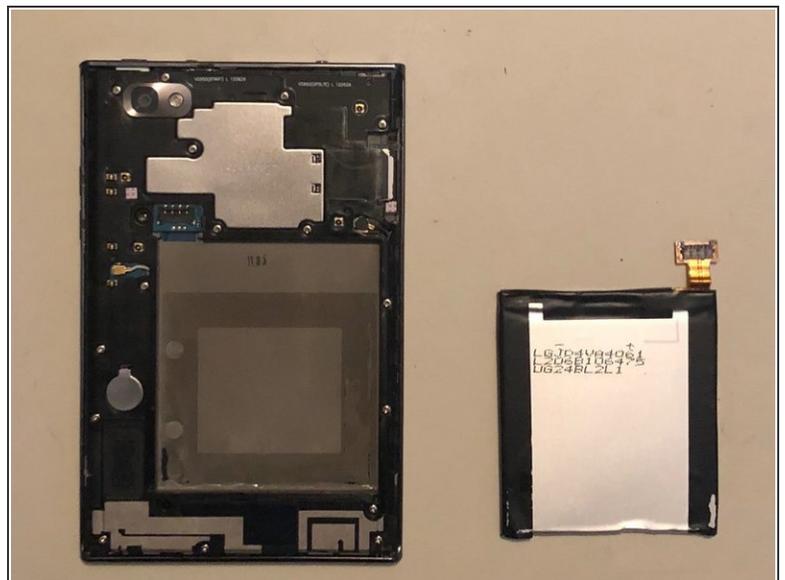

- Gently raise the battery from its compartment.

Step 7 — Plastic Motherboard Shield



- Remove the thirteen 5mm screws holding the plastic shield covering the motherboard using the Phillips #00 screwdriver.

Step 8



- Carefully use the plastic opening tool to pry the plastic shield from the motherboard. This will expose the motherboard and ribbon cables for each component.

Step 9 — Volume Buttons



- Carefully use the plastic opening tool to pry the ribbon cable connecting the battery to the motherboard of the phone.
- Slowly pull the ribbon cable upward releasing the volume buttons from the phone.

To reassemble your device, follow these instructions in reverse order.