



Page 1 of 7

INTRODUCTION

How to remove and replace the keyboard of an HP ProBook 440 G1.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



⚠ Make sure the laptop is turned off before you start.

- Push and hold the release tab on the right and left toward the center.

Step 2




- Pull the battery out.

Step 3 — Backplate





- Push and hold the release tabs on the right and left toward the center again.

Step 4

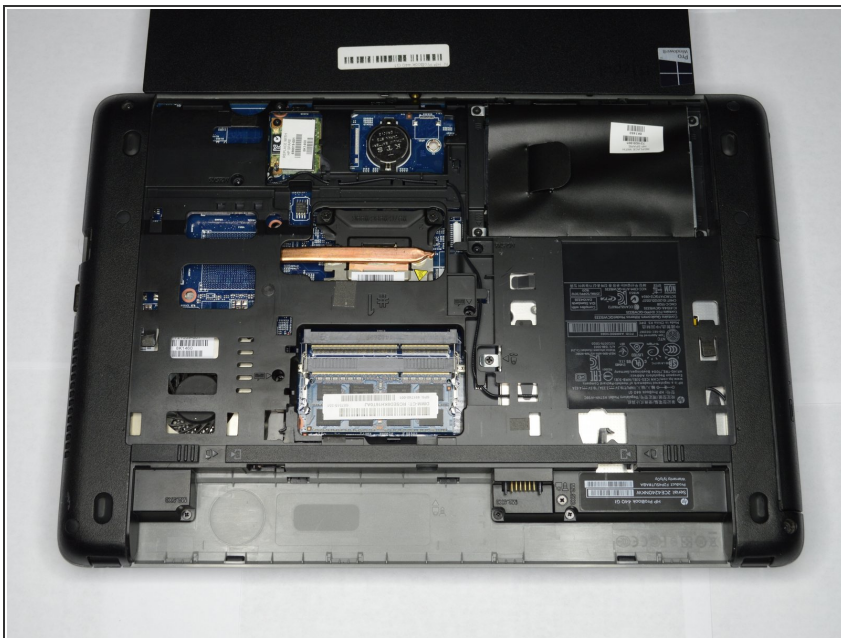

- Slide the backplate off.

Step 5 — Keyboard

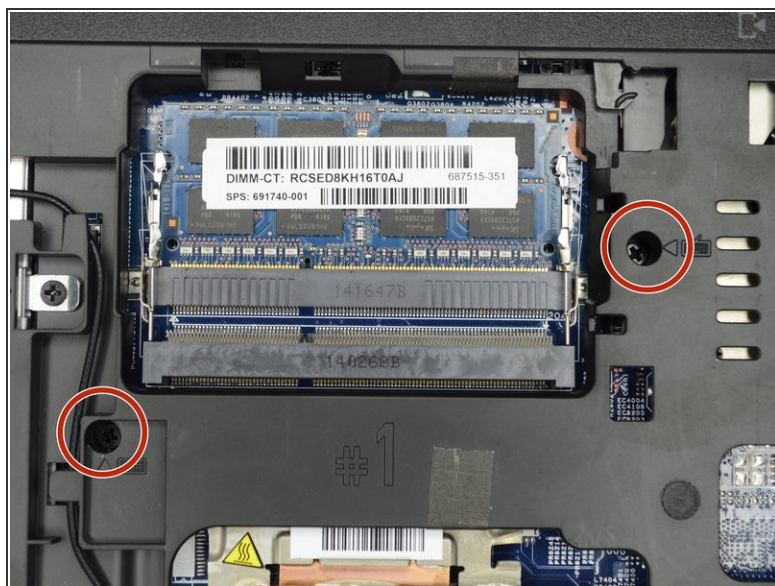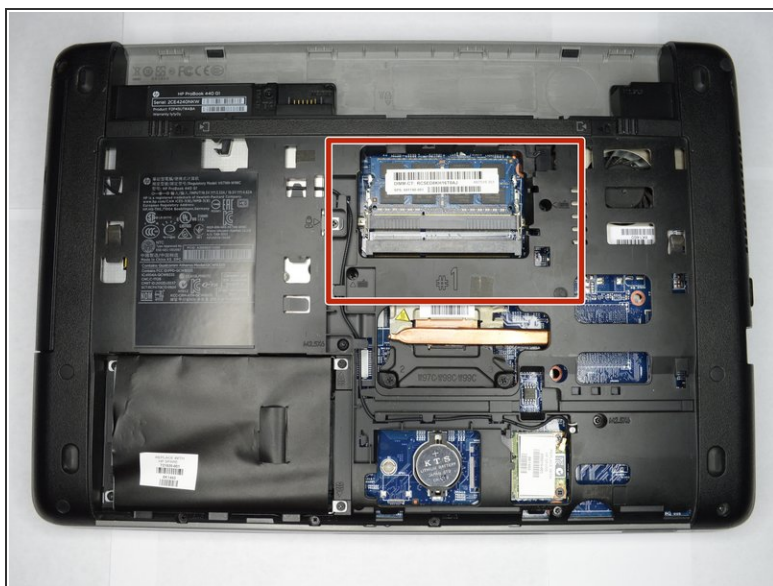


- Locate the two screws on the back of the laptop, holding the keyboard.
- Remove the two screws using a Phillips #00 screwdriver.

Step 6





- Flip the computer over so as to see the keyboard.

Step 7

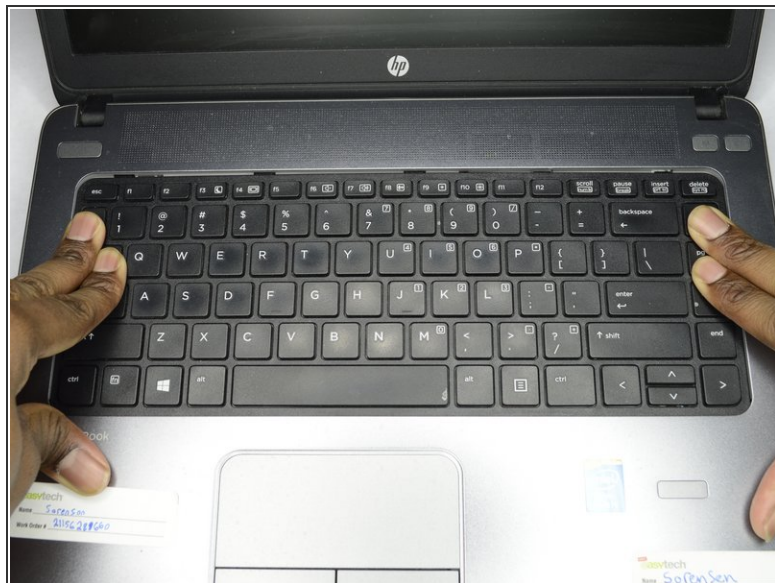


- Place both hands on the keyboard and slide it back.
- ❗ The keyboard will only slide back a small amount.

Step 8

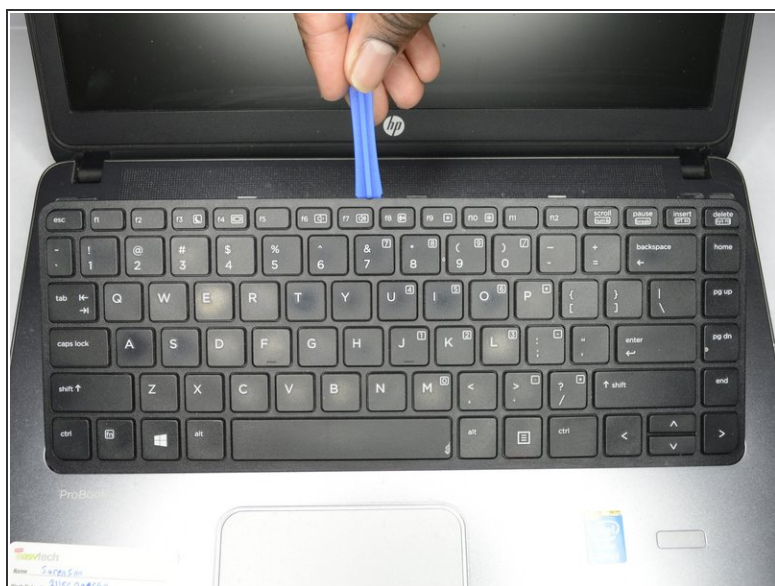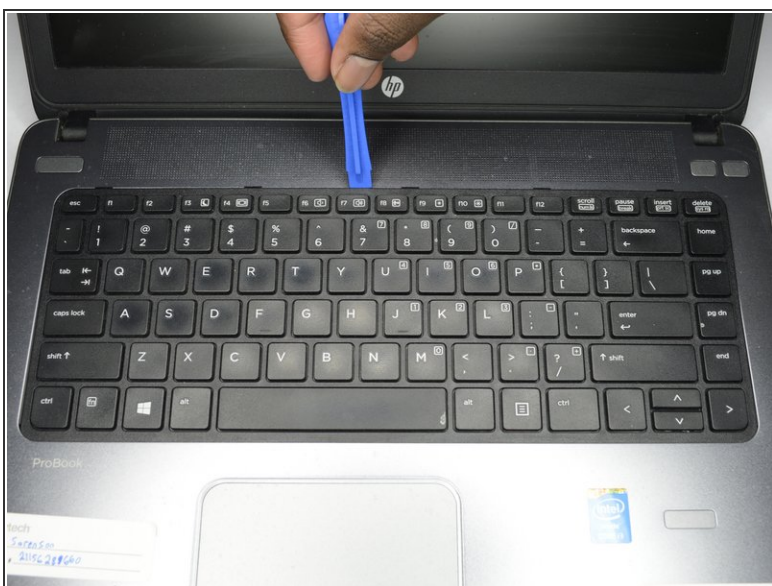

- Using a plastic opening tool, pull the keyboard up.

Step 9

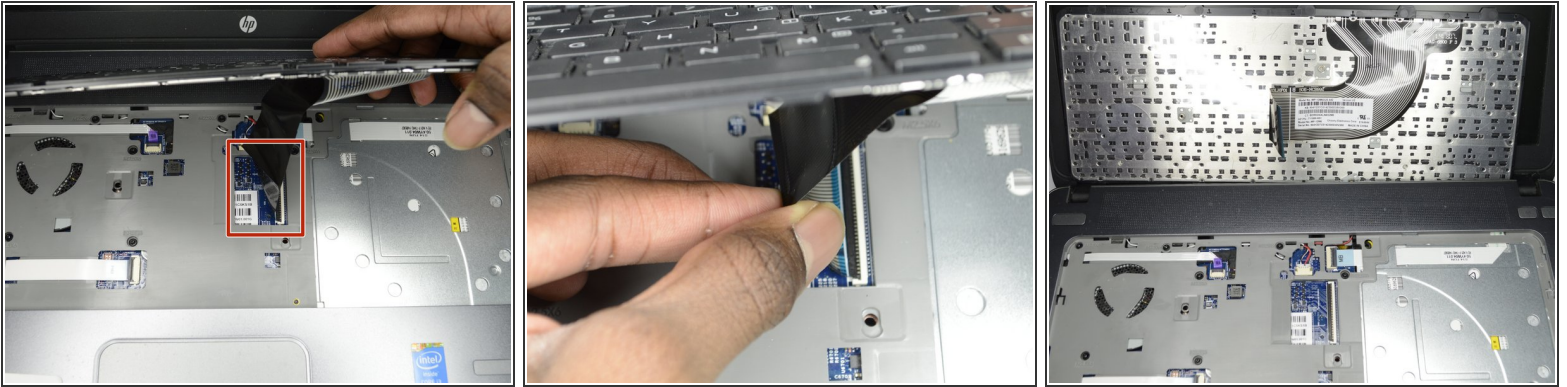

- Locate the connector strip between the keyboard and the laptop.
- Pull the strip away from the connector until it unplugs.
- ⓘ It may take some force to make the strip disconnect.

To reassemble your device, follow these instructions in reverse order.