

Hyundai HB-20 Brake light Replacement

This guide shows how to replace faulty bulbs for the top brake light.

Written By: Jose Gustavo Abreu Murta





Step 1 — Brake light



- Remove three nuts.
- Use 10 mm wrench

Step 2




After nuts removed, press gently the screws.

Step 3



• Gently remove the light assembly.

Step 4

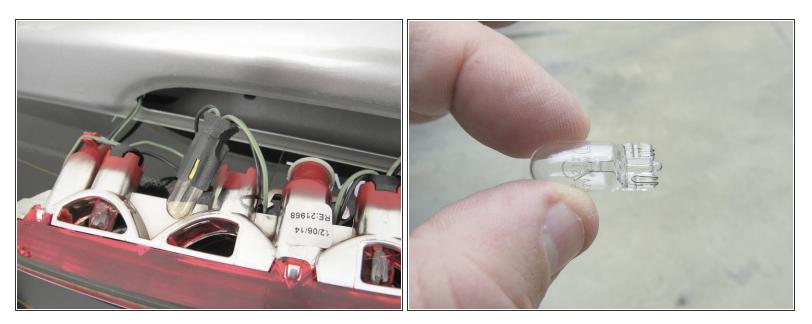

Remove the lamp socket and change the burned-out bulb (12V 5W).

To reassemble your device, follow these instructions in reverse order.