

Written By: Mohammed Younis



# INTRODUCTION

This guide shows how to remove and replace the battery found in the Lenovo IdeaPad 100S-141BR.



## TOOLS:


- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)






## PARTS:

- [Lenovo 110S-14IBR and 100S-14IBR Replacement Battery](#) (1)

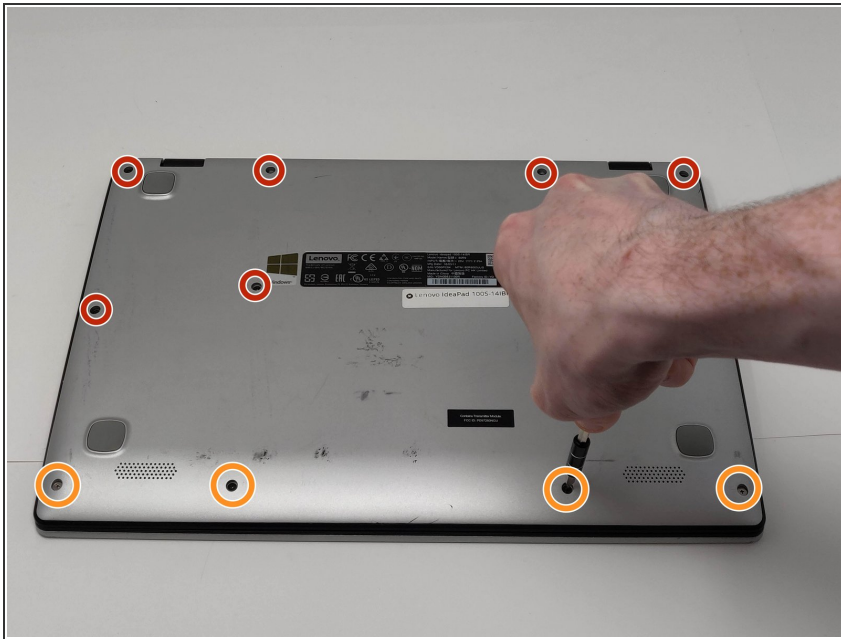
## Step 1 — Battery



-  Be sure to power off and unplug your device before you begin your repair.
-  Remove the eight 4mm PH00 screws.
-  Remove the four 2mm PH00 screws.



## Step 2



-  Use the nylon spudger to loosen the back cover from the back of the device.



 You may hear a bit of a snapping sound, but this is normal.

## Step 3

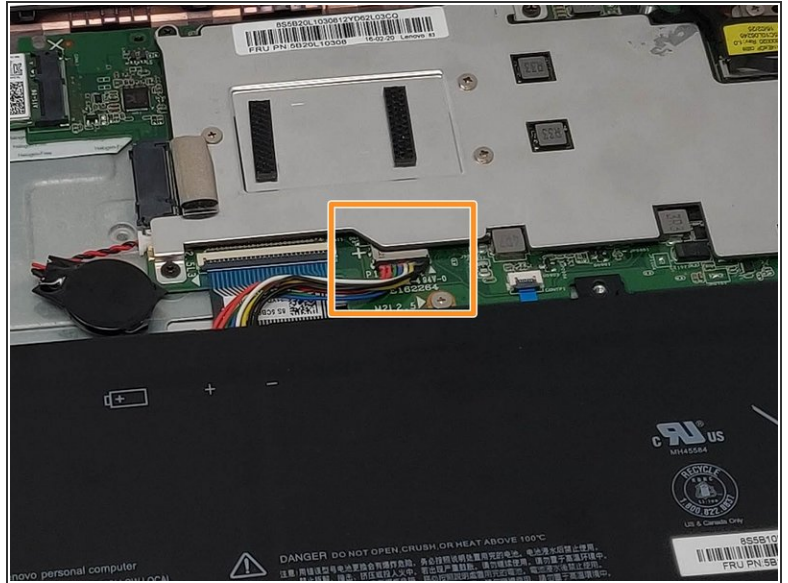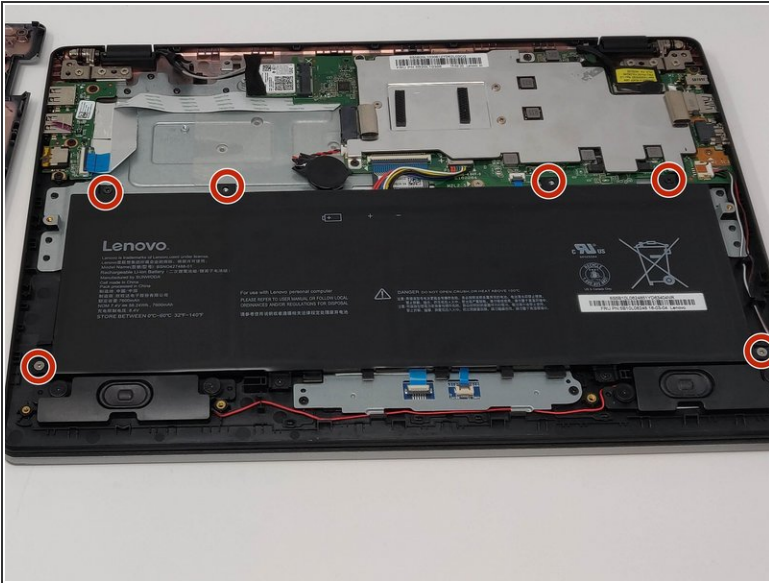

- Remove six 4mm Phillips #00 screws.
- Pull the battery connector parallel to the motherboard to disconnect the battery from the motherboard.

## Step 4

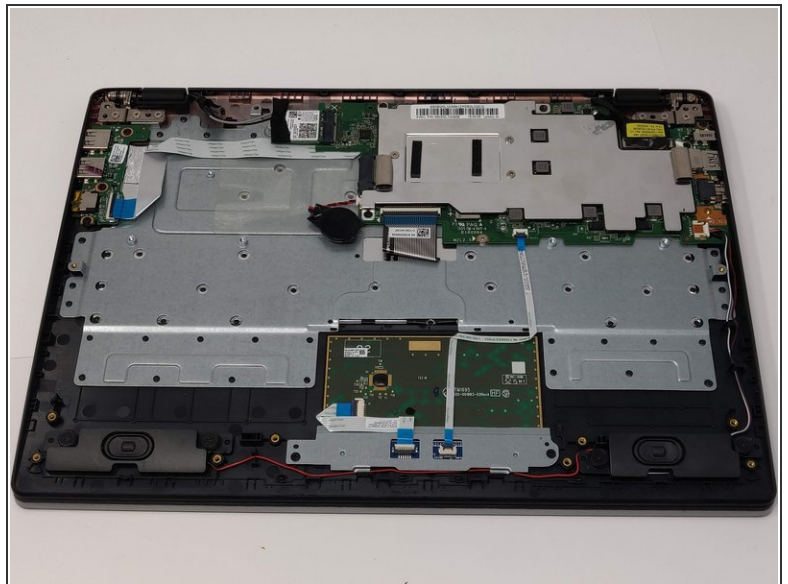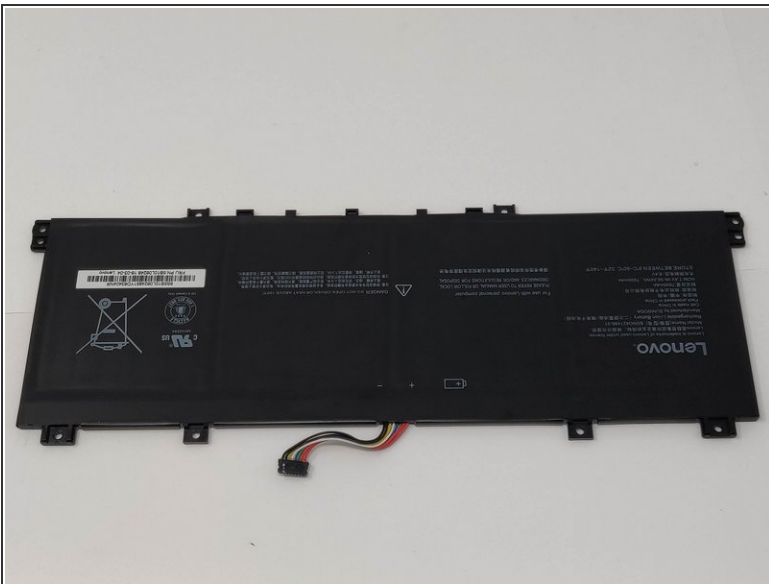

- Use a nylon spudger to pry the battery up and out of the device.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.