



Asus Chromebook C202 Keyboard Replacement

This guide will demonstrate how to remove and replace the keyboard on the Asus Chromebook C202 Laptop.

Written By: Noah Helms



INTRODUCTION

The keyboard is an important part of the Asus C202 Chromebook. The keyboard is easy to replace requiring no special skill set. The keyboard will need to be replaced if keys are missing, if keys have progressively stopped working, or if the entire keyboard does not respond to user input. Replacing the keyboard is a delicate process—if you are not careful you could damage the motherboard. Before you replace the keyboards make certain to power off the device. Keep your work space clean as to not damage the exposed circuitry.



TOOLS:

- [Phillips Head Screwdriver: Size PH1](#) (1)
- [Spudger](#) (1)



PARTS:


- [Asus 11 C202SA Chromebook Palmrest Assembly w/ Keyboard only](#) (1)

Step 1 — Palm Rest




- Turn the device over so the bottom is facing up.
- Remove the ten Phillips #1 8.0 mm screws.

Step 2

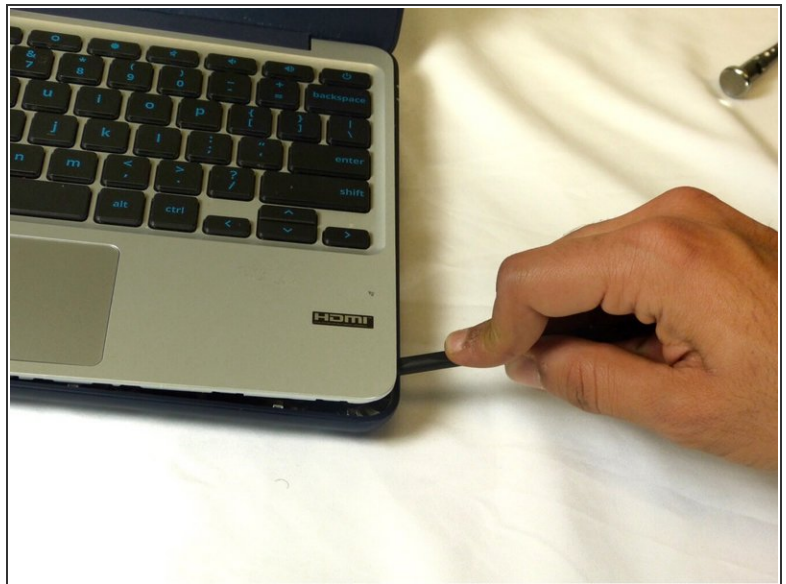

- Carefully use the plastic opening tool to pry the palm rest apart from the bottom cover. Start from one spot and systematically work your way around until the whole palm rest is detached.

Step 3

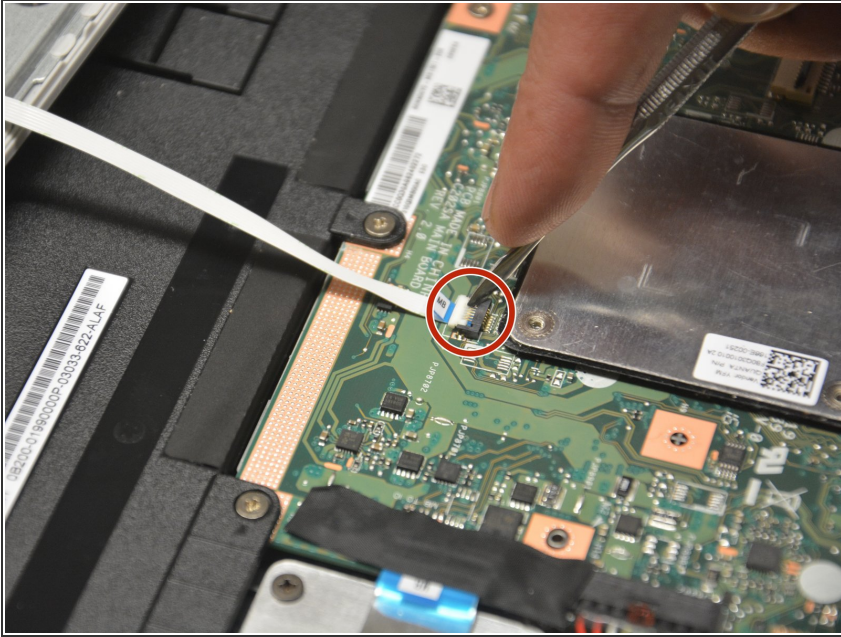

- Disconnect the two cables that run from the keyboard to the motherboard and from the touch pad to the motherboard.
- ⓘ You may have to use a spudger to lift open the respective latches.

Step 4 — Keyboard



- Once the cables are disconnected, remove the keyboard from the back panel.
- Now that the keyboard is disconnected, you can replace it with a new one.

To reassemble your device, follow these instructions in reverse order.