




# Nikon Coolpix S6500 Case Replacement

This guide shows step by step process of removing the case of a Nikon Coolpix S6500.

Written By: Qingyu Wu

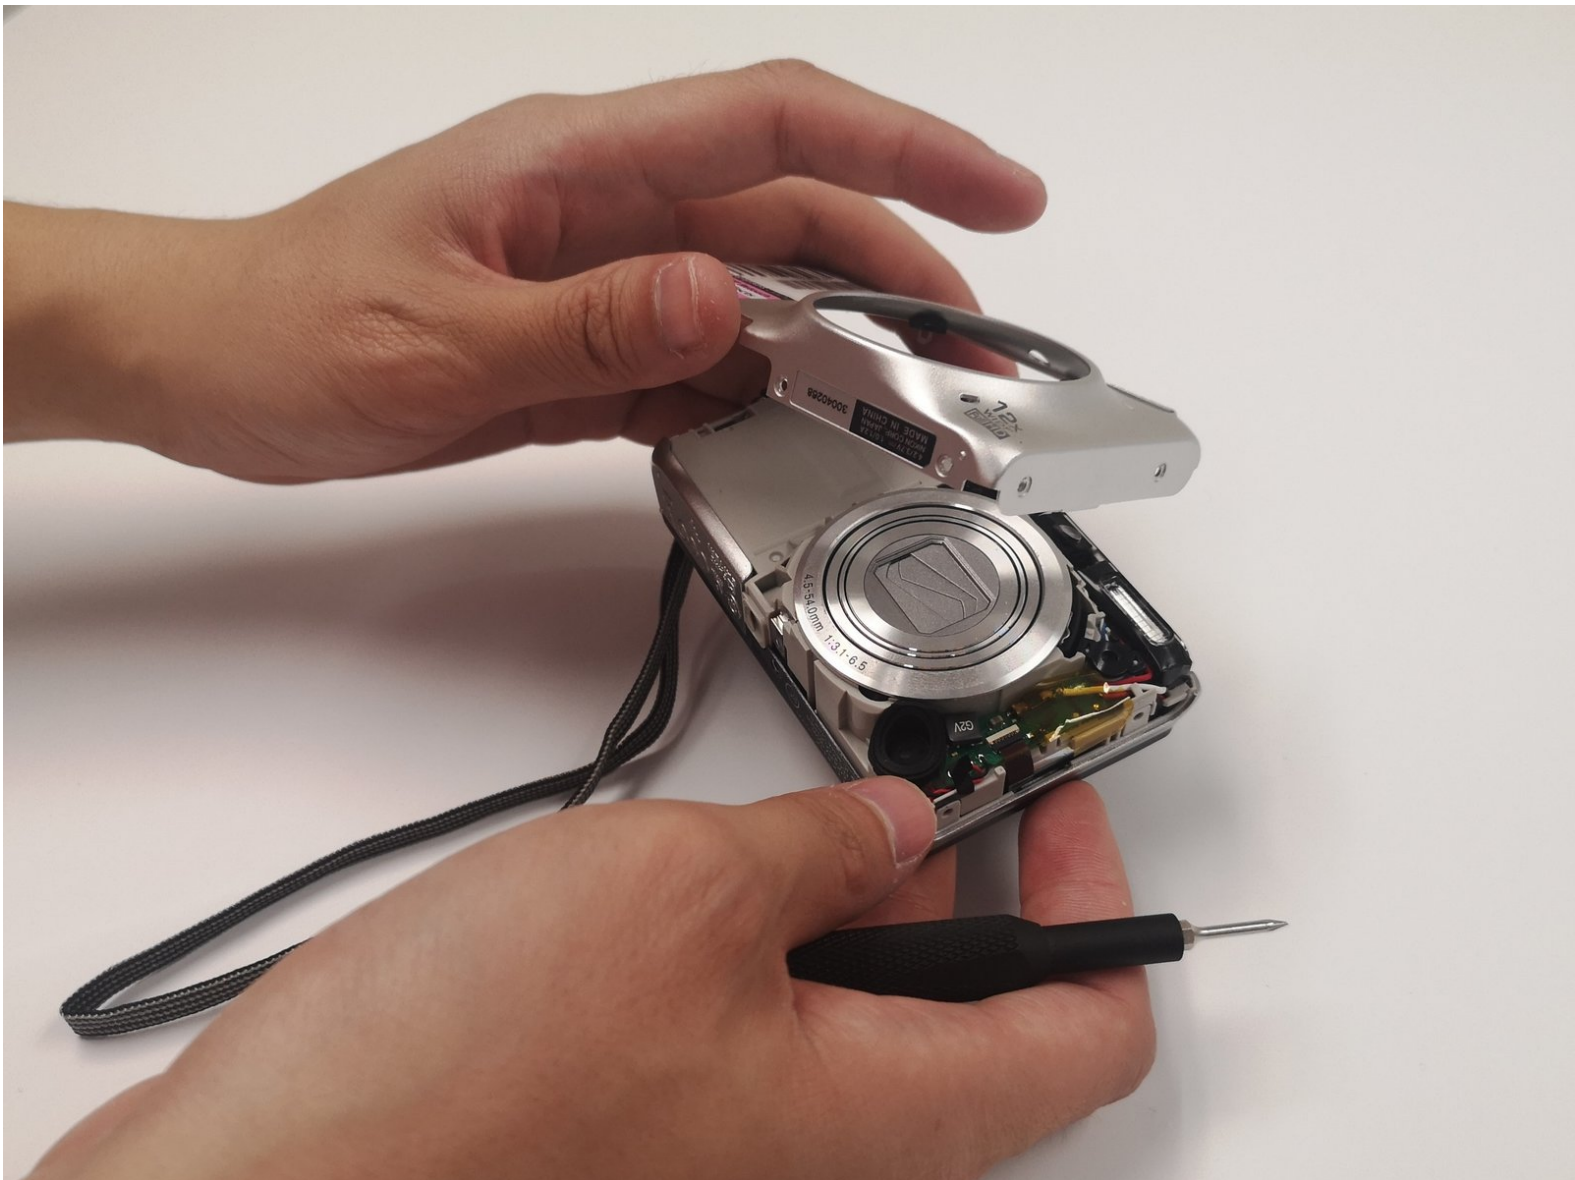

## INTRODUCTION

If you need to replace a damaged case with a new case of the Nikon Coolpix S6500 you can do it with the help of this guide. For this guide, you will need a Phillips PH000 Screwdriver to remove the screws. Store the screws safely. Open the case carefully. Before beginning, make sure to power off the camera completely and disconnect it from any external power source.



### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Case



- Remove all seven 3mm screws by using the Phillips #1 screwdriver.

## Step 2

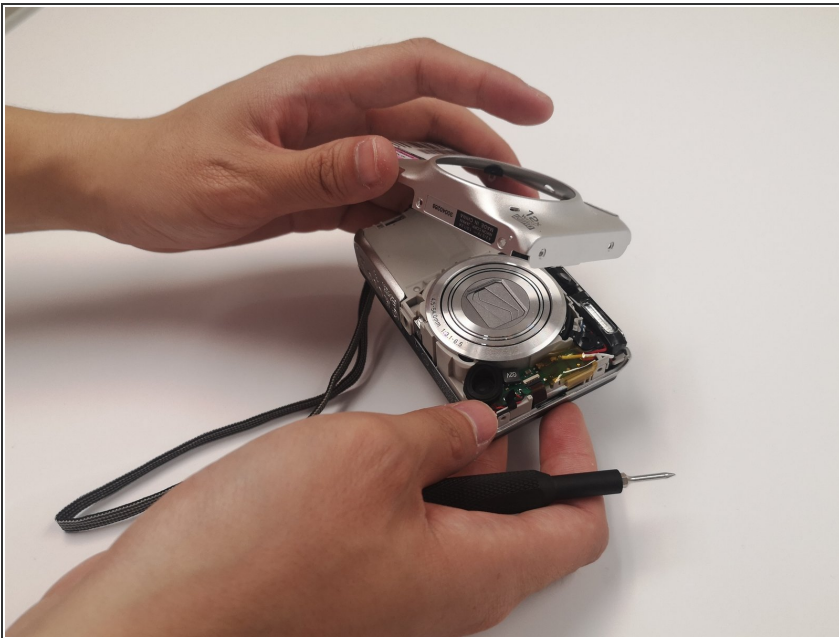

- Remove the case from the camera.

To reassemble your device, follow these instructions in reverse order.