






# Unlock an iPod Touch 4th Gen with a damaged screen.

(No passcode only) Have an iPod Touch that works but some parts of the screen are wonky and have no way of unlocking it? This should show you how.

Written By: Cody Breunsbach

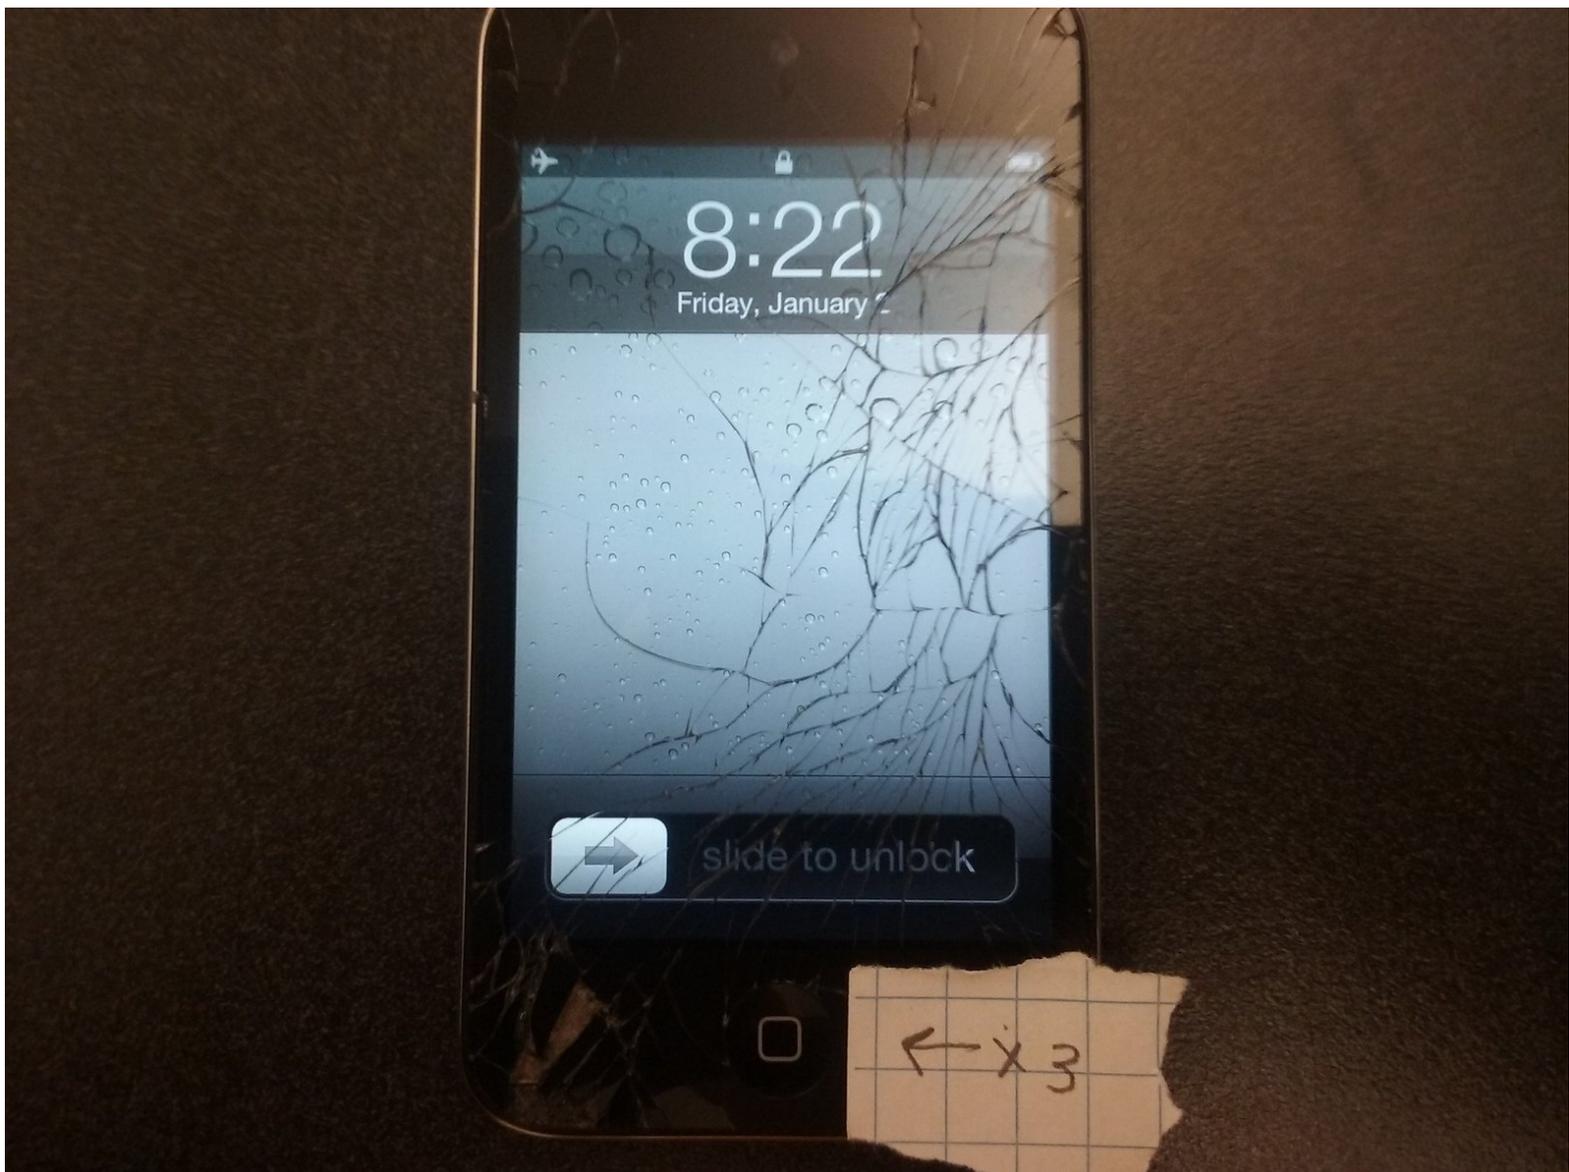


## Step 1 — Enabling VoiceOver

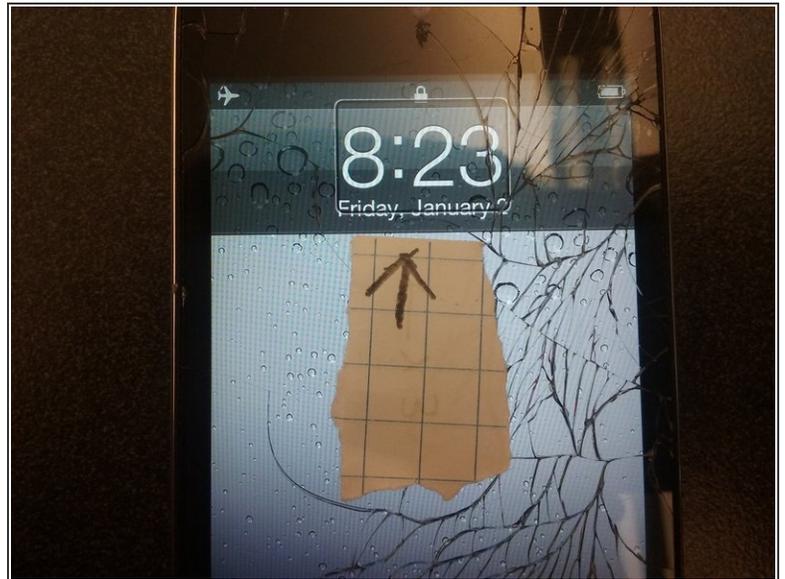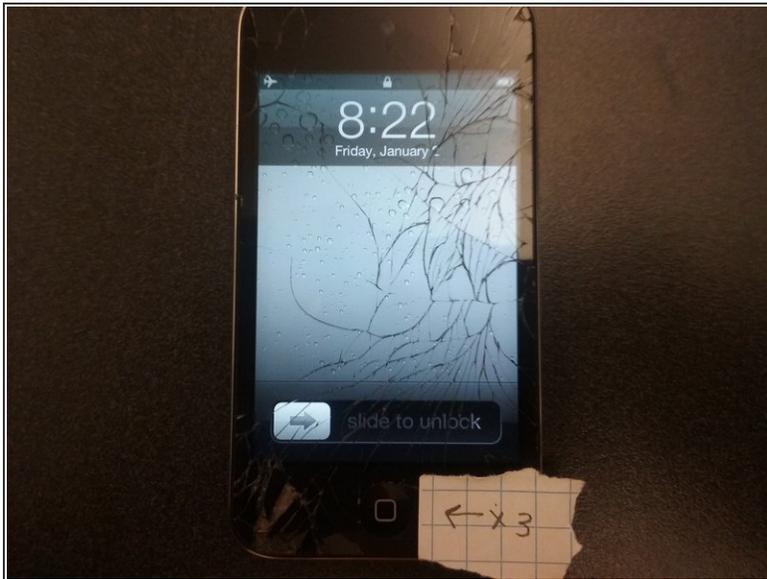

- Start off by waking the device up and clicking the home button 3 times.
- You will know if you succeeded if you hear voiceover speaking and/or a rectangle around the time.

## Step 2 — Unlocking the iPod

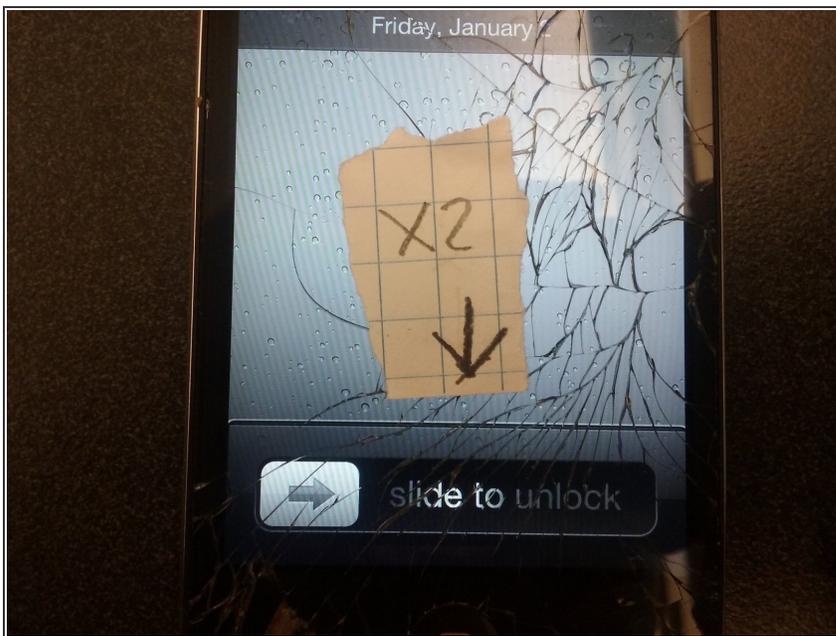


- After enabling Voiceover, tap "Slide to unlock" Two times.
- ⓘ Its best to do this where the screen still inputs touch.

### Step 3 — Your done!



- You are now finished and are ready to use your iPod again!
- ⓘ If you want to disable Voiceover, press the home button three times again until it says "Voiceover Off" and the rectangle disappears.

### Step 4 — Extra Tip

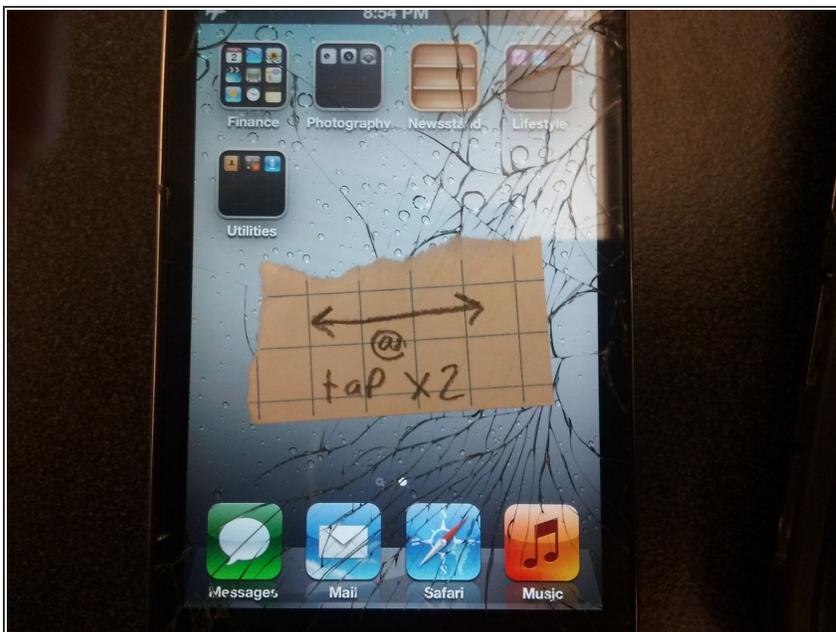

- If your device is really broken, You can try swiping left and right on the screen to move the box and double tap the area quickly can unlock the device.
- ⚠ Be careful not to cut yourself! If the cracks are too severe, its best to repair the screen to prevent any cuts to your fingers.**

Enjoy using your iPod Touch again!