


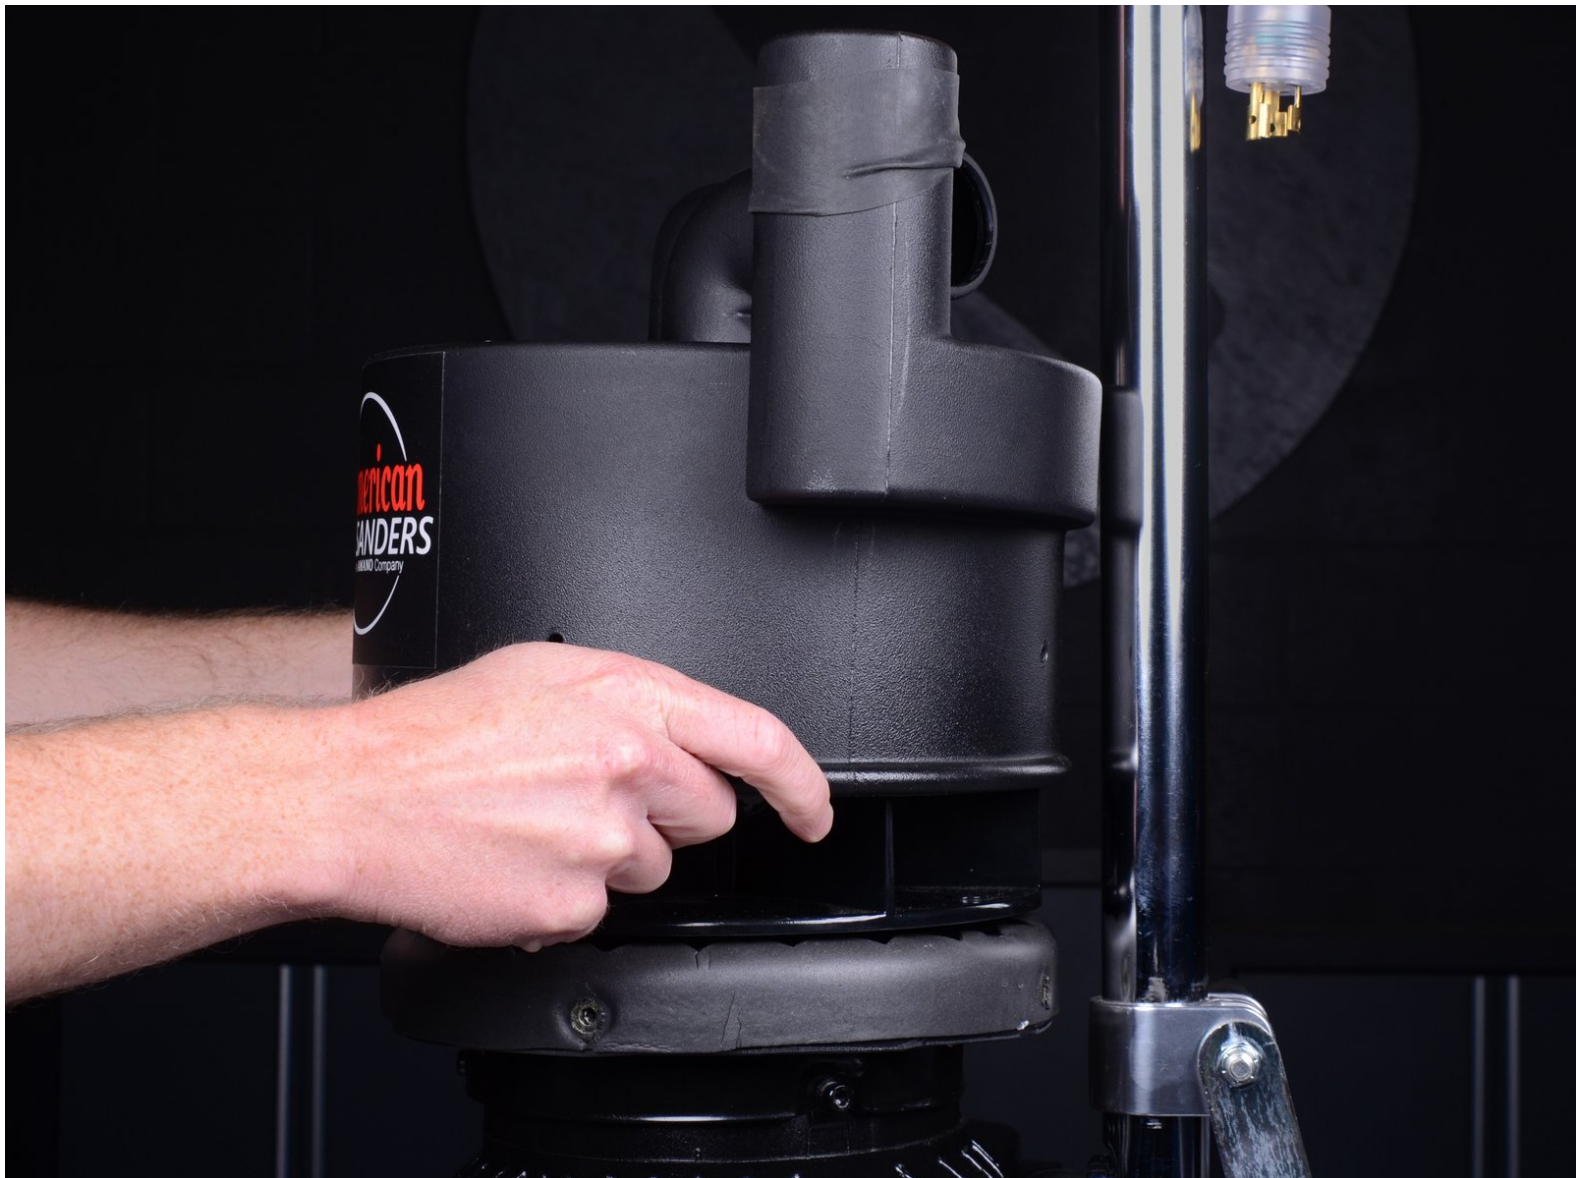

Clarke Floor Sander 07014A 2012 Blower Housing Replacement

Remove and replace the blower housing for a Clarke Floor Sander 07014A.

Written By: Arthur Shi



INTRODUCTION

This guide shows how to remove and replace the blower housing for a Clarke Floor Sander 07014A.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)



PARTS:

- [Nilfisk Housing, Blower 35242A](#) (1)

Step 1 — Dust Bag



- ❗ Before you begin, be sure that the sander is unplugged and powered off.
- Twist and pull the dust bag collar to disconnect it from the elbow pipe.
- Remove the dust bag.

Step 2 — Blower Housing



- Peel the rubber sleeve down from the elbow pipe to reveal the pipe socket.

Step 3



- Grasp the elbow pipe with your hands and pull up while twisting to disconnect it from the blower housing.
- Remove the elbow pipe.

Step 4




- Twist and pull to disconnect both suction hoses from the blower housing.

Step 5



- Remove the four 22mm long Phillips screws around the side of the blower housing.

Step 6

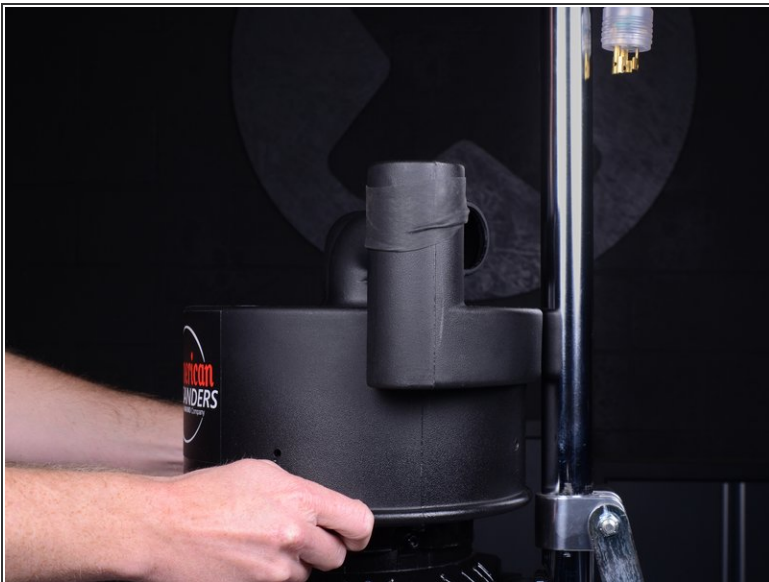

- Lift the blower housing upwards and slide it off of the blower assembly.
- Remove the blower housing.

To reassemble your device, follow these instructions in reverse order.