



HP Mini 311 Memory Shield Replacement

This installation guide will provide information necessary for the removal of an HP Mini 311's memory shield.

Written By: Christian Santoyo



INTRODUCTION

If there is a need to operate any internal repairs on your HP Mini 311 then the removal of the memory shield is mandatory.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Memory Shield



- With the device still in a bottom side up position, proceed to unscrew the two 4.8mm Phillips 00 screws from the memory shield.
- ⓘ The screws will remain in the shield.

Step 2

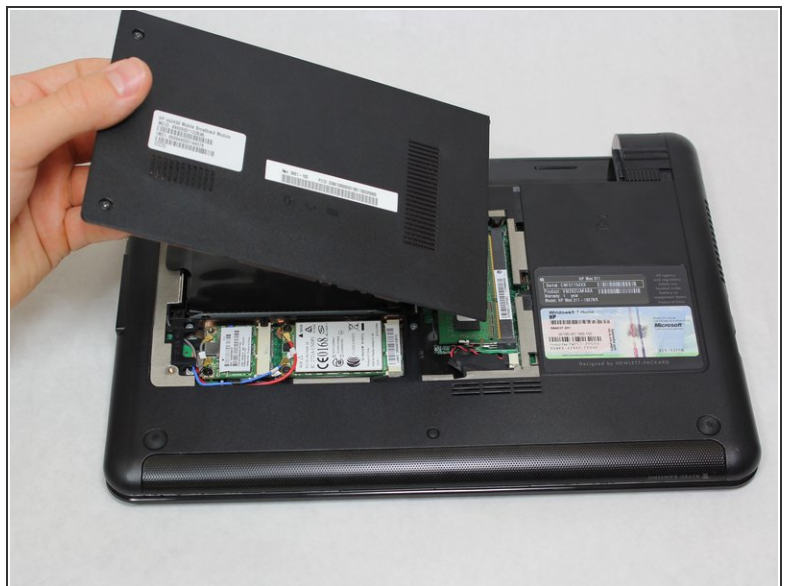

- Lift the memory shield up and remove from the laptop.

To reassemble your device, follow these instructions in reverse order.