




iMac 27" 2017 Lower Support Bracket Replacement

Prerequisite-only guide to remove the lower support bracket in an iMac 27" 2017.

Written By: Adam O'Camb

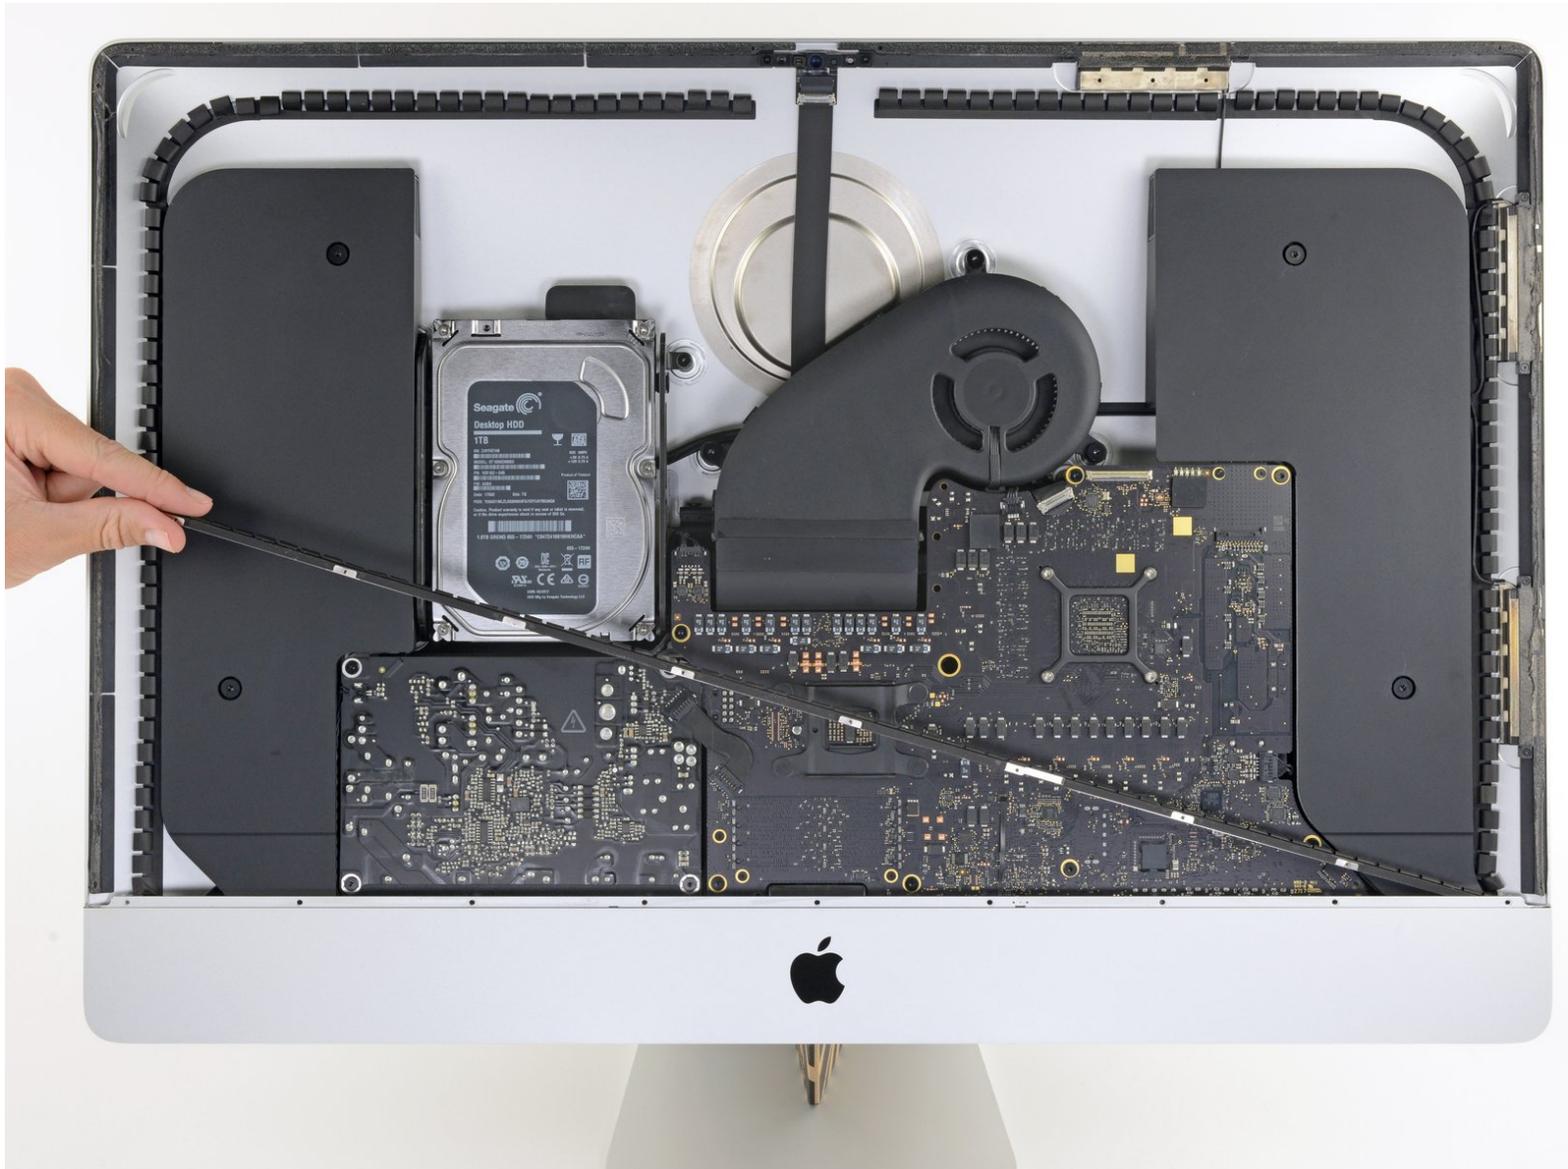



INTRODUCTION

Prerequisite-only guide to remove the lower support bracket in an iMac 27" 2017.

TOOLS:


- [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Remove the support bracket

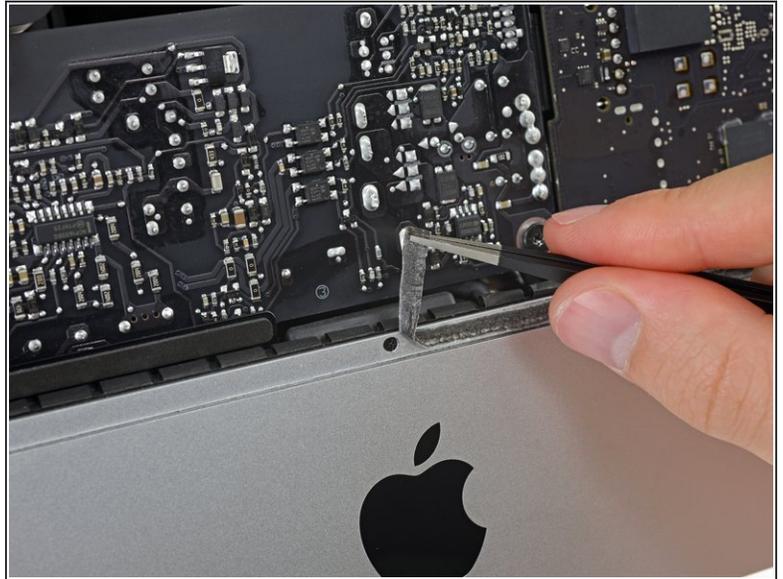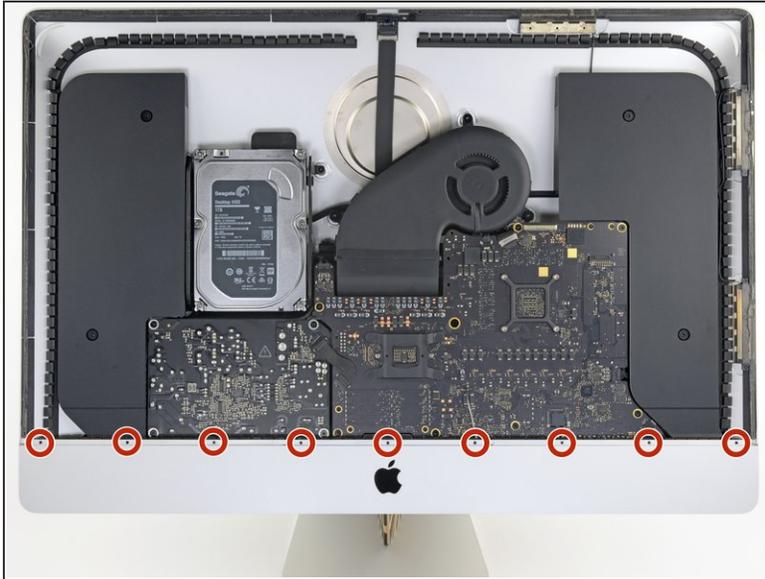

- Use a Phillips screwdriver to remove the nine 3.2 mm screws securing the support bracket.
- You may need to peel up the display adhesive lining the bottom edge of the iMac enclosure to access the screws.

Step 2

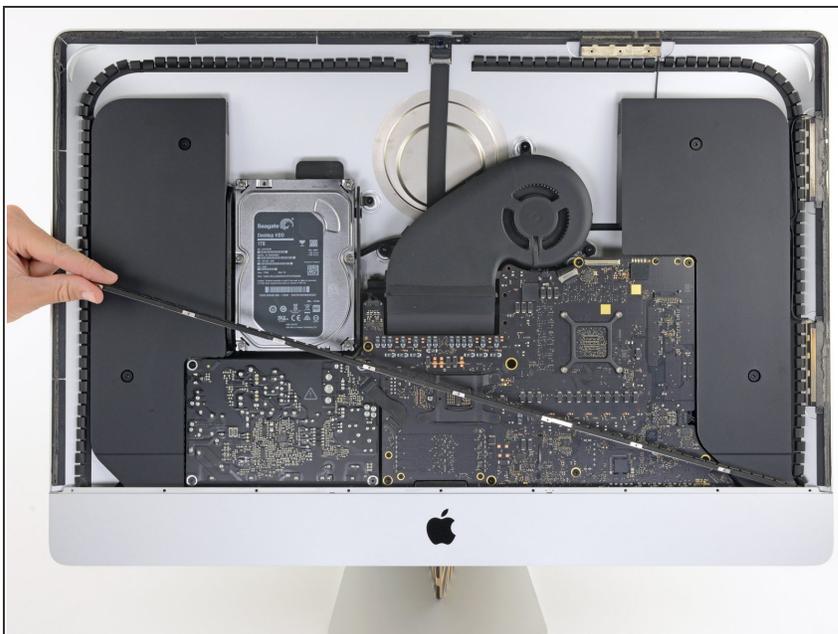

- Remove the lower support bracket (a.k.a. "chin strap") from the iMac enclosure.

To reassemble your device, follow these instructions in reverse order.