



# Lenovo Yoga C930-13IKB Display Replacement

Written By: Josiah Grayson Sawyer



---

 **TOOLS:**


Suction Handle (1)  
iFixit Opening Picks (Set of 6) (1)  
Phillips #0 Screwdriver (1)  
Phillips #00 Screwdriver (1)  
Halberd Spudger (1)

 **PARTS:**

5D10S73319 - Lenovo Laptop LCD (1)  
5D10S73320 - Lenovo Laptop LCD (1)


---

## Step 1 — Display

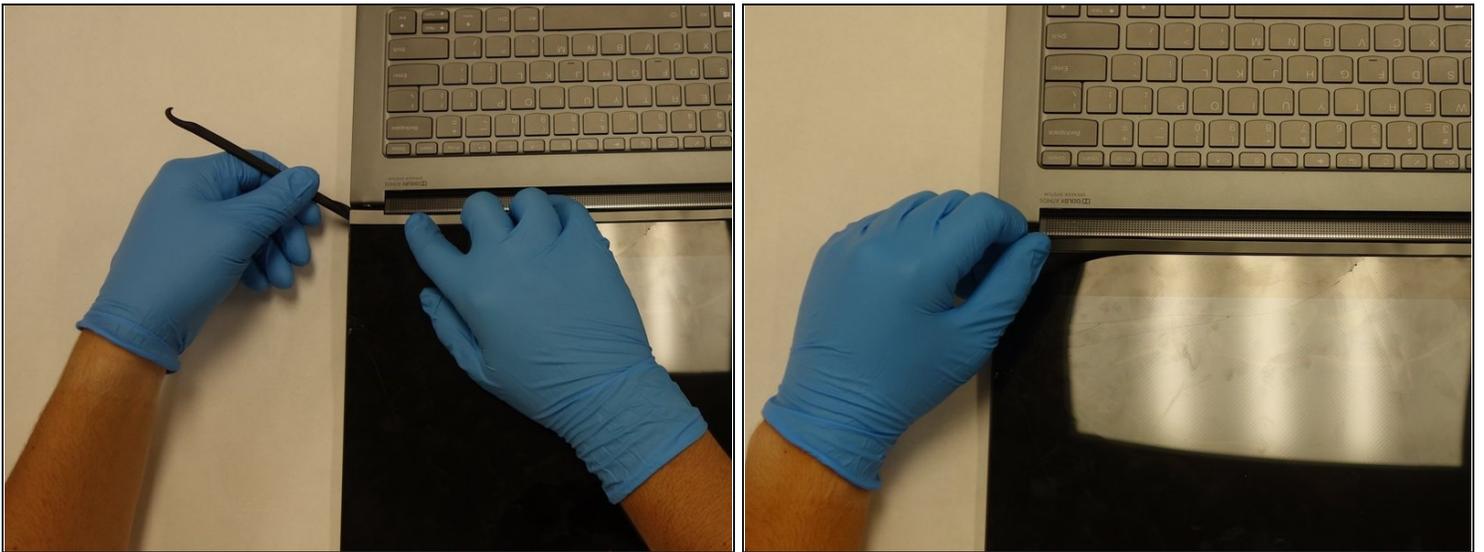


- Using a halberd spudger, gently lift up the metal bezel that lines the lower edge of the display.

## Step 2

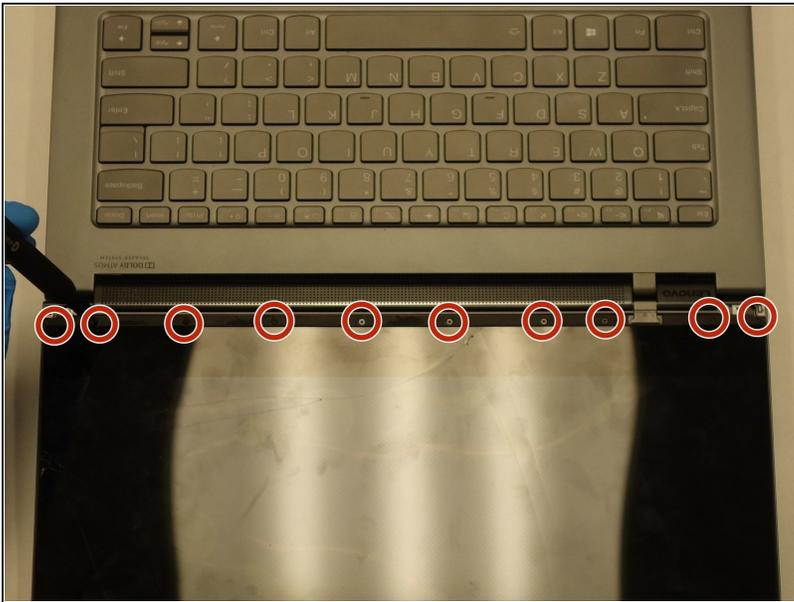

- Remove the ten 3 mm screws along the bottom edge of the display with a Phillips #00 screwdriver.

## Step 3


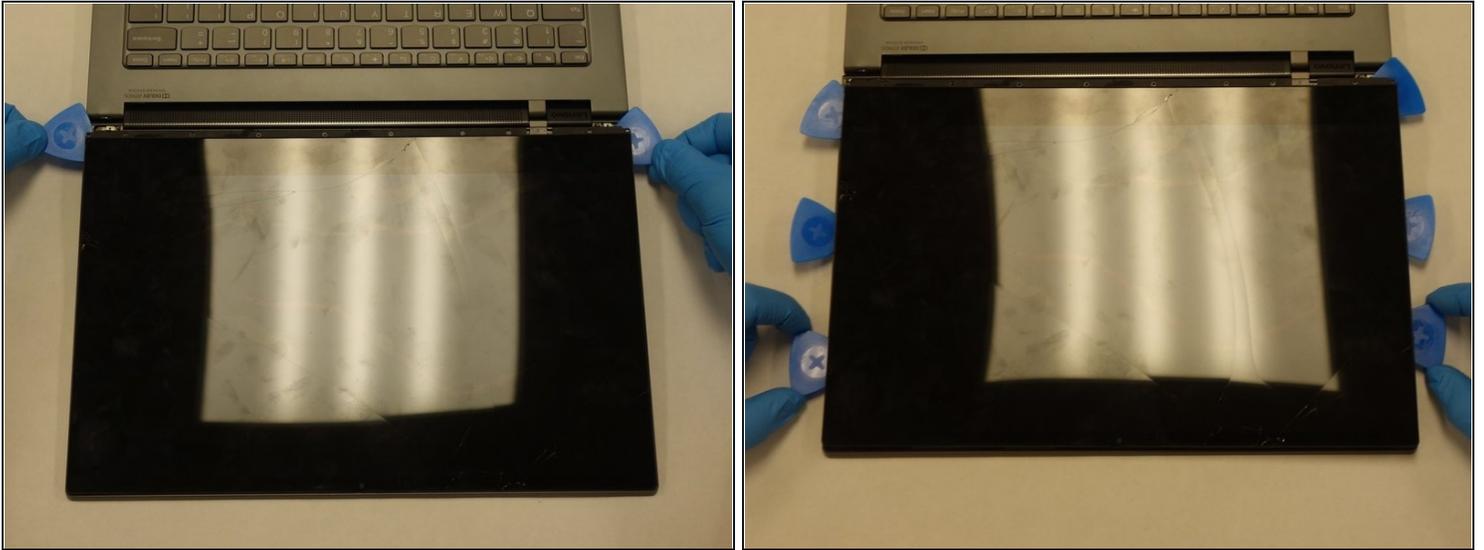


- Gently wedge two opening picks underneath the display.
- Slowly work the opening picks around the display.
- Add opening picks as needed to keep display separated from the frame.

**⚠ Use caution if dealing with broken glass.**



- ① The iFixit suction cup tool can be used to add some extra leverage to the mix when removing the display.

## Step 4

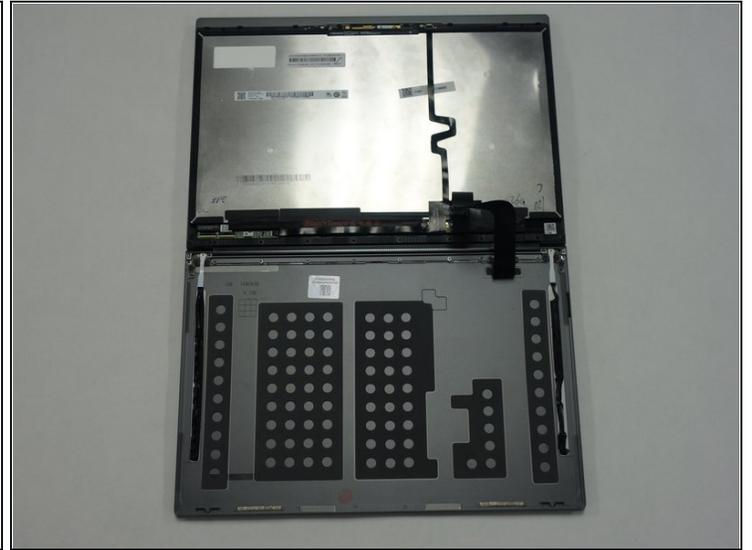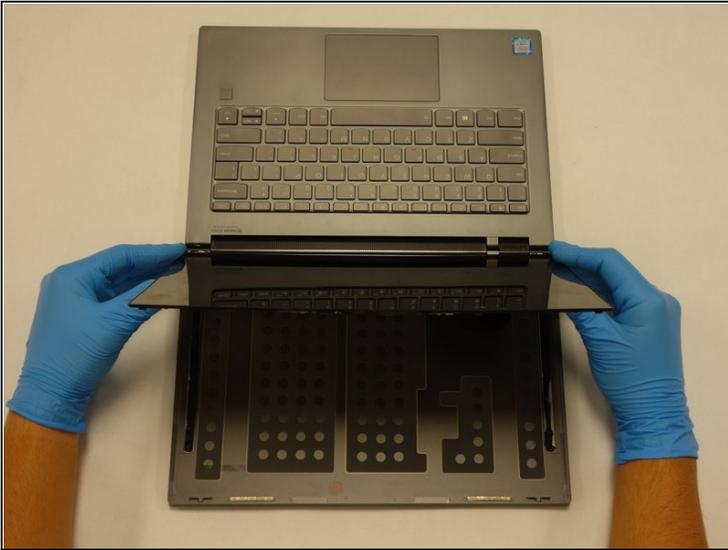


- Gently flip the display assembly to rest on top of the keyboard.

## Step 5

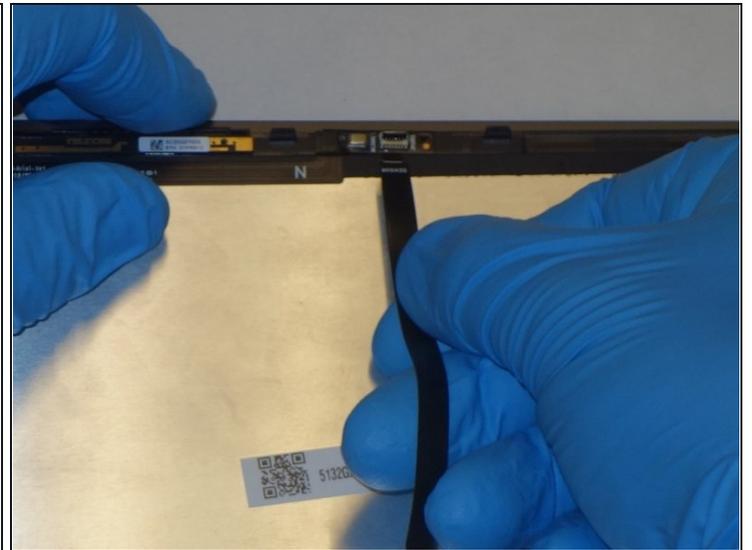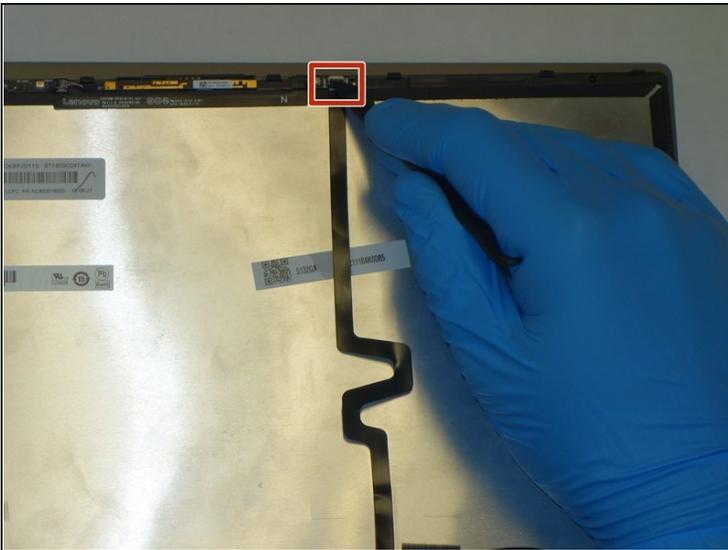


- Use the halberd spudger to lift the locking tab of the ZIF connector holding the black ribbon cable that runs vertically across the display.
- Pull out the black ribbon cable from the connector.

## Step 6

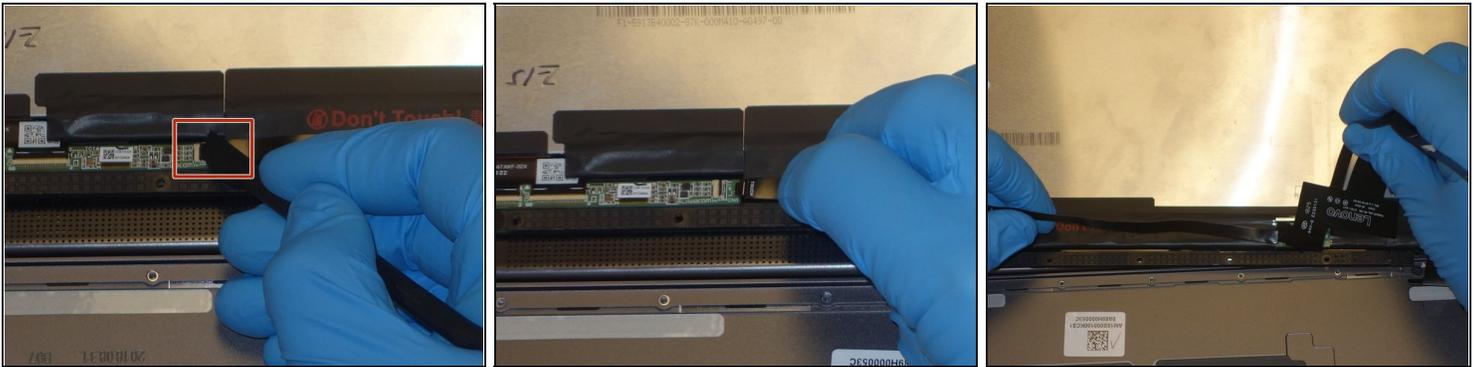

- Use the halberd spudger to lift the latch on the ZIF connector of the horizontal black ribbon cable.
- Pull out the horizontal black ribbon cable from the connector.
- Gently pull the rest of the horizontal black ribbon cable from the back of the display.

## Step 7

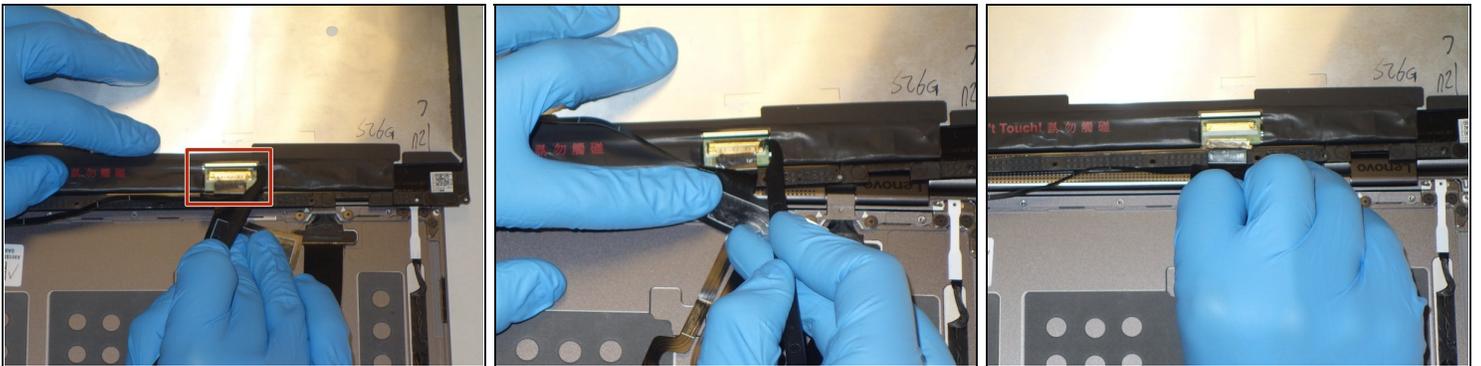

- Use the halberd spudger to flip the metal latch of the display cable up.
- Using the halberd spudger, gently pull the connector out of the display.

## Step 8



- Gently lift the display away from the laptop frame.

---

To reassemble your device, follow these instructions in reverse order.