




PlayStation 4 Hard Drive Replacement

Replacement of the PS4 hard drive

Written By: Robert Harvey

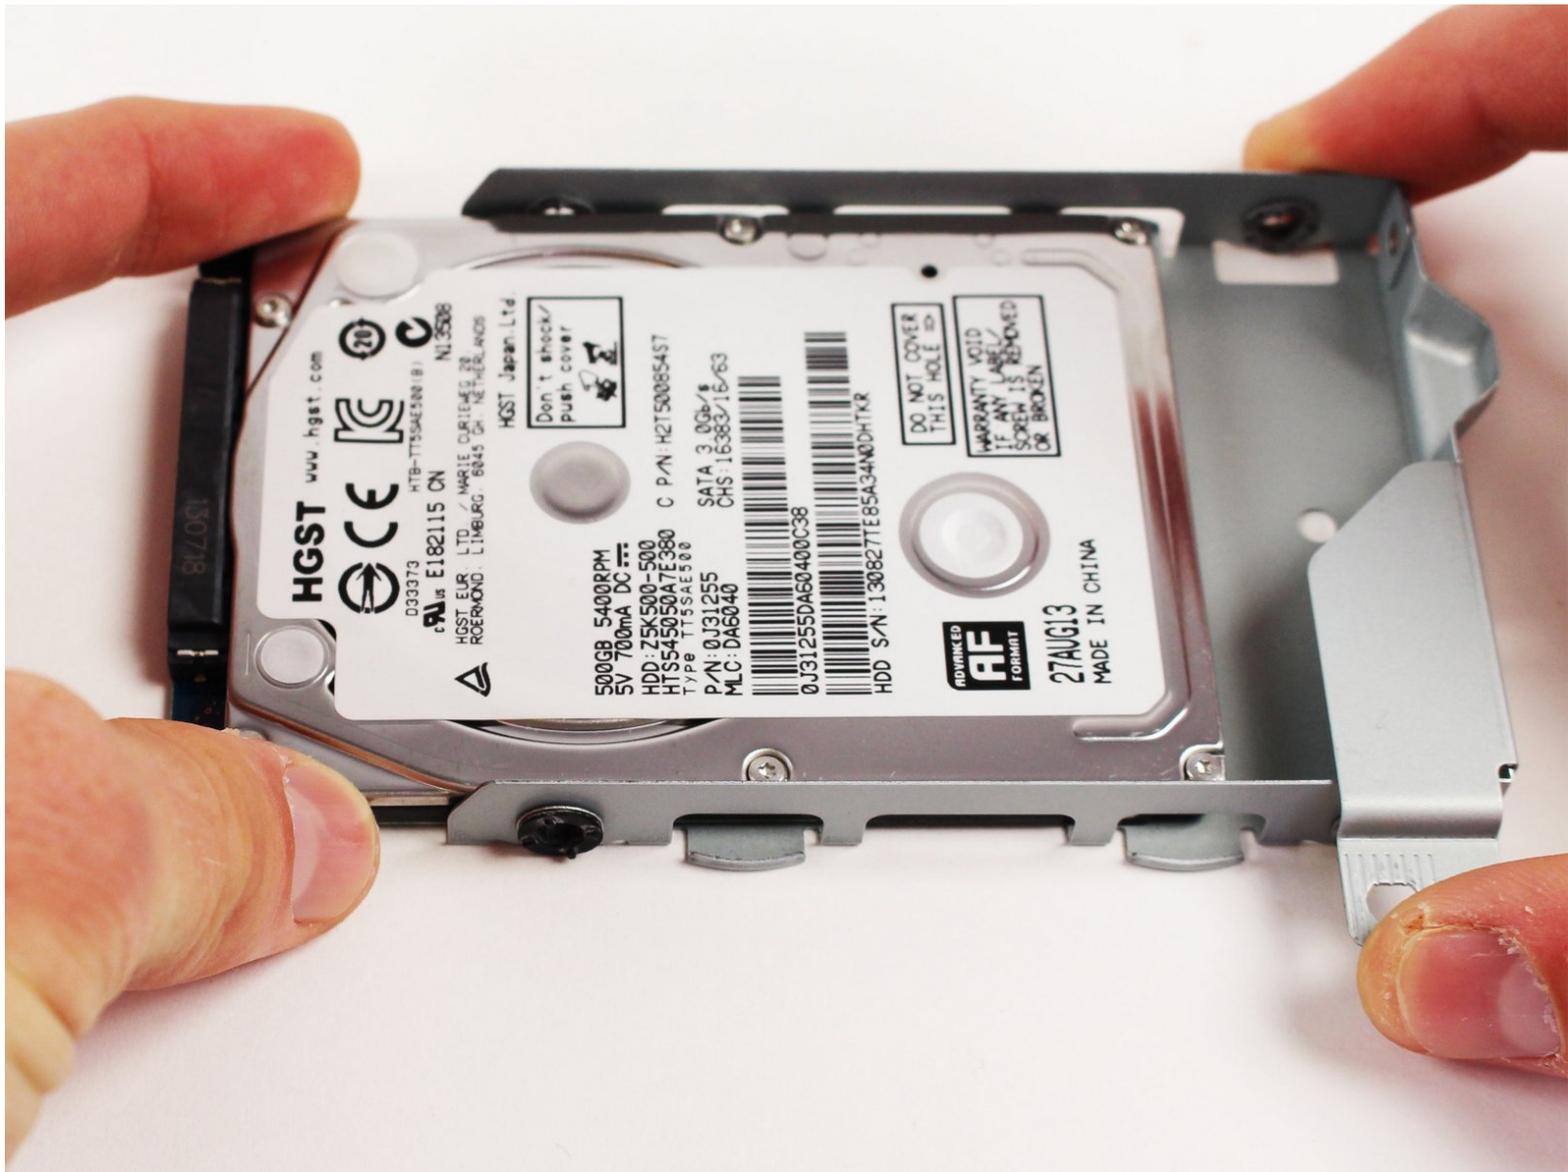

INTRODUCTION

The official guide has been updated and can be found [here](#). This guide is archived for historical purposes.

Provides step-by-step instructions on how to get to and remove hard drive, allowing user to replace hard drive.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [PlayStation 4 Hard Drive and Bracket](#) (1)
- [Playstation 4 SAA-001 Hard Drive Bracket](#) (1)

Step 1 — Hard Drive



- Start by turning off your PS4 and unplugging the AC power cord. Slide the HDD bay cover (the top left portion of the console) to the left.

Step 2



- Remove the Hard Drive by unscrewing the single 5mm Phillips head #1 screw on the front left side of the PS4.

Step 3




- Slide the hard drive forward to remove it.

Step 4



- Remove the four screws from the sides of the hard drive case. There are two identical screws on the opposite side.

Step 5

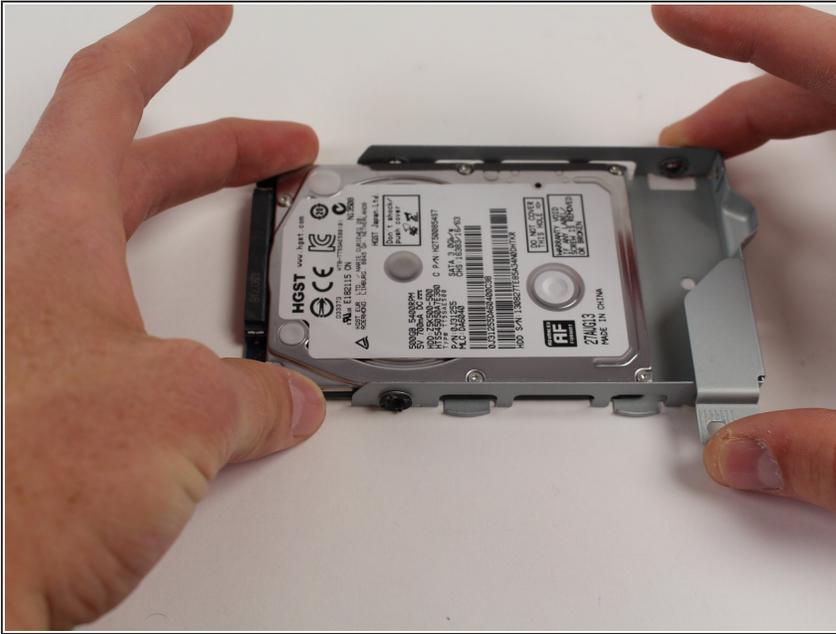

- Remove the hard drive from the sleeve.

To reassemble your device, follow these instructions in reverse order.