

# PlayStation 2 Slimline SCPH-7500x Metal Chassis Replacement

This guide will walk you through step-by-step...

Written By: Jared Hirata




#### **INTRODUCTION**

This guide will walk you through step-by-step on how to properly remove and install the metal chassis in the PlayStation 2 Slimline.




Spudger (1)
Phillips #1 Screwdriver (1)
Tweezers (1)

#### Step 1 — Removing Playstation 2 Slimline SCPH-7500x Outer Shell

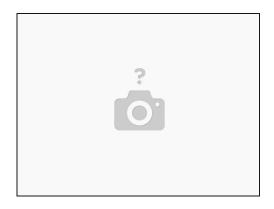

• Turn off the PlayStation 2 and carefully unplug it from the power source. Also, it is important to eject the CD from the console before flipping the it upside down.

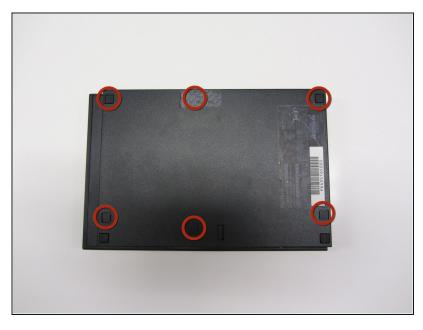


- Locate the six feet on the bottom of the PS2.
- i Five of these feet are in plain sight while the last foot is located under the black void sticker on the back of the device.
- i Some versions of the console, such as the PAL Version, may not have this sticker. In this case, the foot or the screw should be in plain sight.

## Step 3



• Remove the five visible feet from the bottom of the device using a spudger.

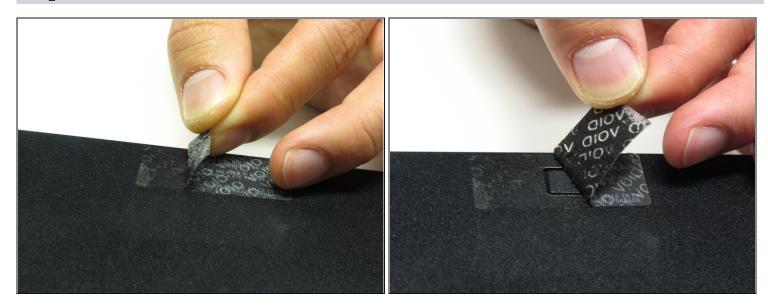


• Remove the sticker and then remove the 6th foot.

# Step 5



• After all of the feet have been removed, Use a Phillips #1 screwdriver to remove the six 4.0mm screws from the base of the PS2.



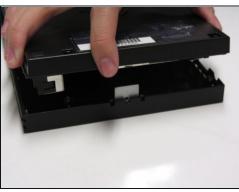



• Once all of the screws have been removed, pry apart the plastic covers. Start by lifting the side containing the power cable and Ethernet port. Then, lift the opposite side to fully separate the two sides.

⚠ You may need to apply some gentle force to detach the covers. Be careful not to break the plastic screw pins.

## Step 7




 If done correctly, you should have a fully detached plastic backing, revealing the electronic components of the PlayStation 2.

#### Step 8 — IR Sensor





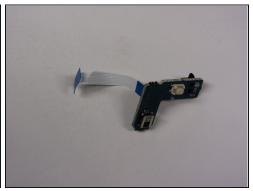

• Locate the IR sensor on the motherboard. Then, use <u>tweezers</u> to gently detach the blue/white ribbon that attaches the IR sensor to the motherboard.

#### Step 9 — Clock Battery







• Identify the clock battery, then use <u>tweezers</u> to disconnect the connector from the motherboard.






• Gently lift the battery up from the battery compartment using a spudger.


# Step 11 — Fan





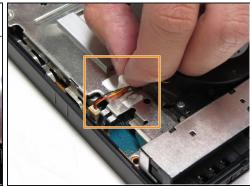


- Locate the fan component of the motherboard of the PS2.
- With your fingers or <u>tweezers</u>, peel off the sticker that holds down the fan's wiring.

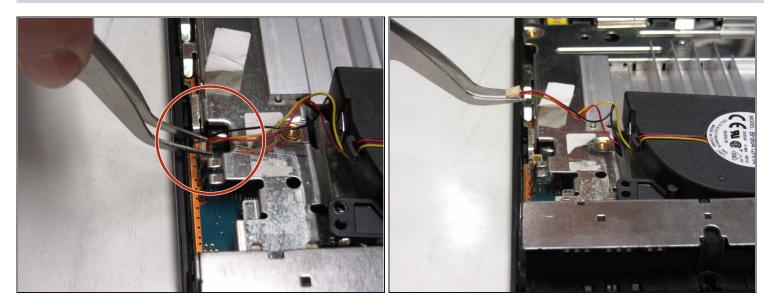


• Detach the terminal (white covering) to the red and yellow cords from the motherboard to the fan with the use of tweezers.

## Step 13

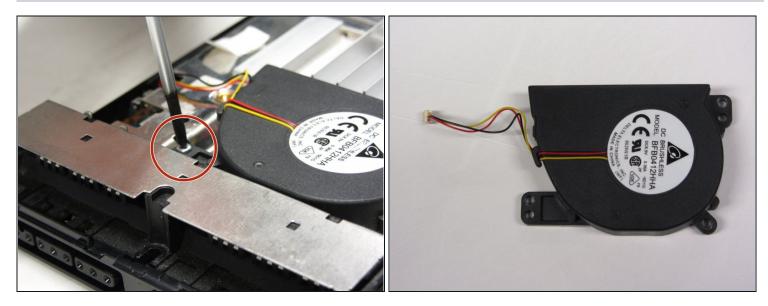

- Locate and unscrew the three 1.6mm screws located next to the base of the fan.
- *i* They are located off the curved edge of the fan.
- Once you have removed the three screws, you are able to remove the fan from the PS2.

# Step 14 — Optical Drive

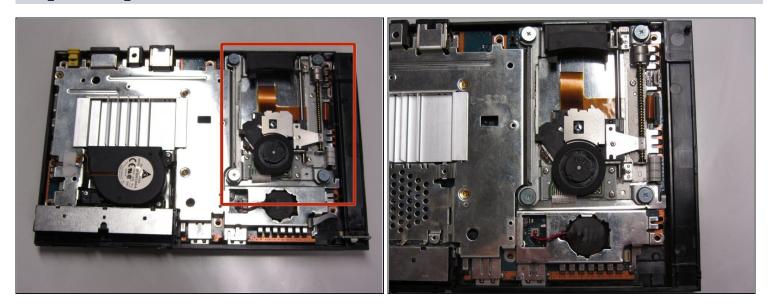

• Locate the optical drive on the motherboard.

# Step 15




• Unscrew the four 4.0mm screws that mount the optical drive to the motherboard.




- Locate the three ribbons that are attached to the motherboard.
- i Note: These ribbons are different sizes: one large, one medium and one small sized ribbon.

#### **Step 17**

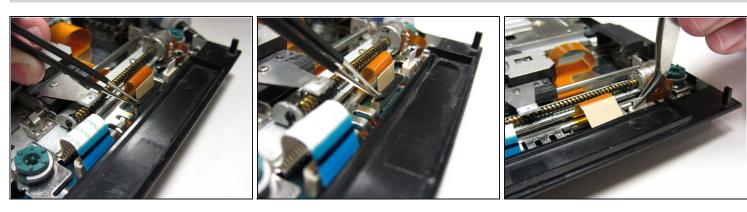


• Using <u>tweezers</u>, gently detach all three ribbons from the motherboard terminal. Unlock the middle orange ribbon to lift the black tab up on either side.

⚠ IMPORTANT: The orange ribbon is glued to the metal chassis. Gently pull the ribbon upward to make sure that you don't rip it.

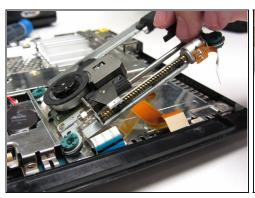



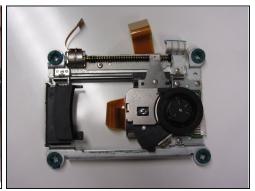



• Gently lift the optical drive away from the motherboard.


# Step 19 — Metal Chassis



 Locate the metal plate that is attached to the back of the motherboard.

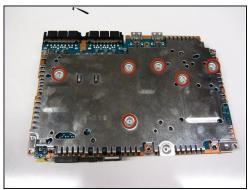

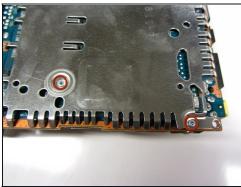

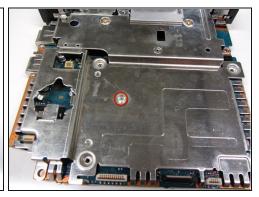


• Locate the six 1.6mm screws that mount the metal plate to the motherboard.

# Step 21






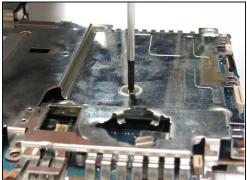

• Unscrew all six 1.6mm screws that mount the metal plate to the motherboard.

# Step 22

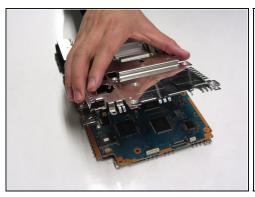





• Gently lift the metal plates from both the top and bottom of the motherboard.

