




Anker SoundCore 2 Charging Port Replacement

This guide will walk you through the replacement of the charging port on the Anker SoundCore 2.

Written By: Tripp Lersch

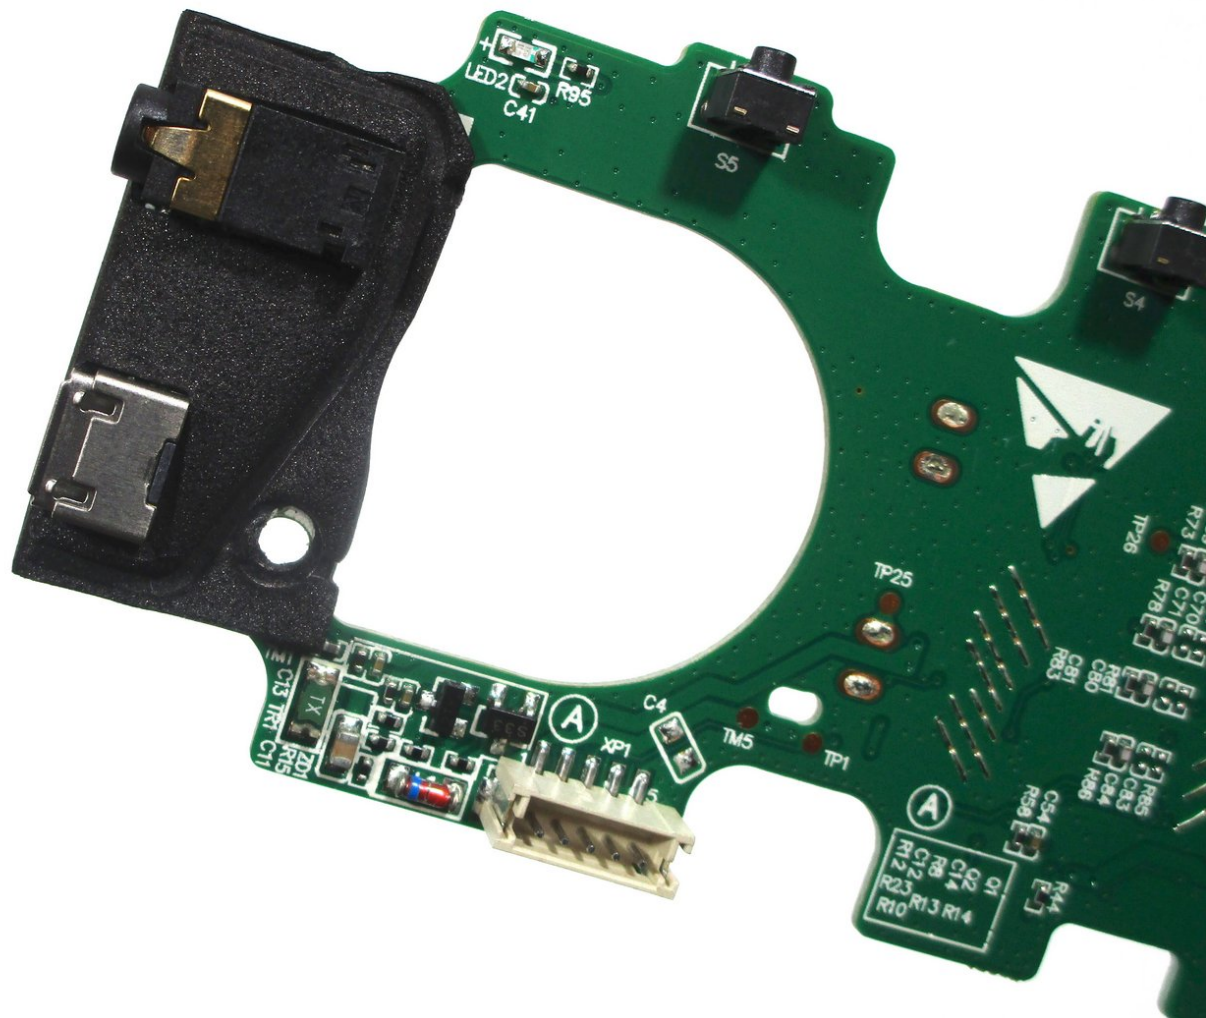

INTRODUCTION

This is a step by step guide on how to replace the charging port in the Anker SoundCore 2 bluetooth speaker. There are a few reasons on why you may need to replace the charging port, including if your speaker will no longer charge or no longer achieve a full charge. Take a look at the [troubleshooting page](#) to see if you need to replace the charging port or not. For this guide, you will need a screwdriver and a soldering tool.



TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Front Panel



- Insert a spudger between the front panel and the body of the speaker.
- Pry around the edges of the front panel with the spudger to pry it away from the speaker body.

Step 2 — Motherboard




- Remove eight 10 mm screws from the speaker mount using a Phillips #0 screwdriver.
- Insert a spudger in the gap between the speaker mount and speaker body to remove the speaker mount.
- Use your hand to remove the speakers.


Step 3



- Remove the 10 mm screw that is holding the motherboard in place using a Phillips #0 screwdriver.
- Flip up the motherboard and disconnect the cord that connects the motherboard and the battery.

Step 4 — Charging Port

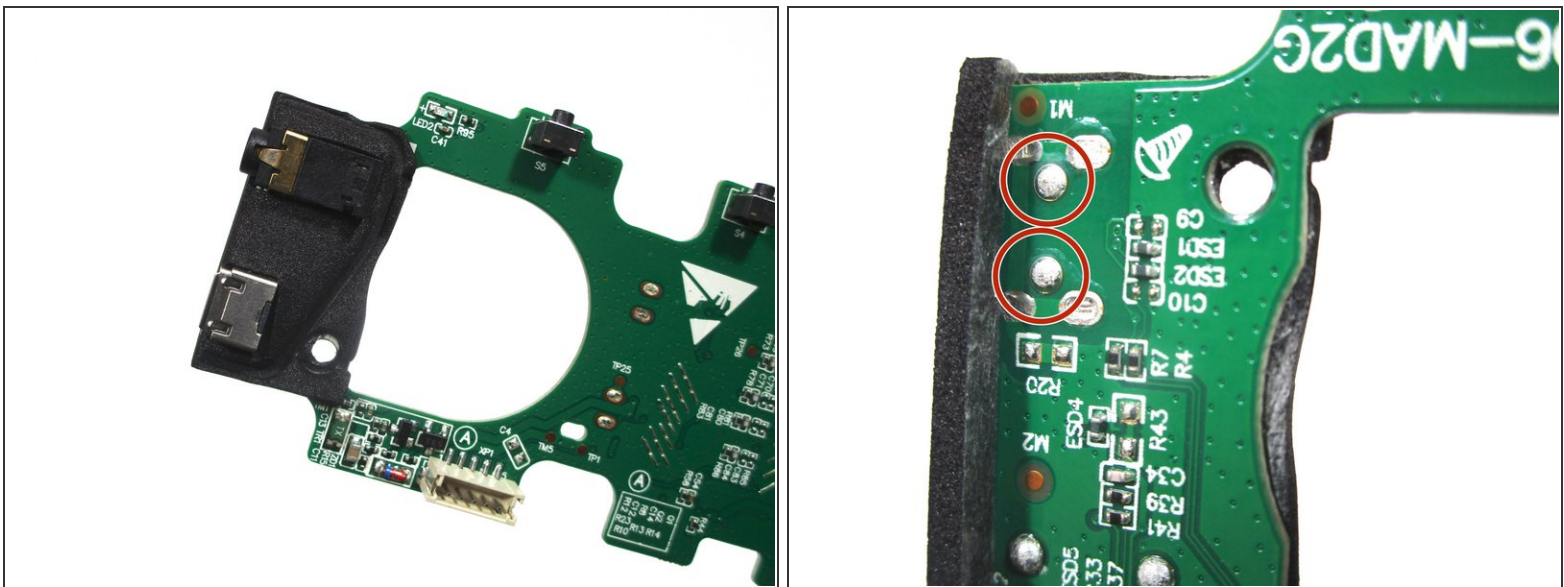

- Desolder the charging port from the motherboard and solder a new one on.
-  For help with soldering and desoldering, follow [this guide](#).

To reassemble your device, follow these instructions in reverse order.