



IBM Thinkpad T61 Disc Drive Replacement

How to remove the disc drive of the IBM Thinkpad T61

Written By: Kyle



INTRODUCTION


If your computer has trouble reading discs and/or the disc drive is not working, it might need to be replaced. This guide will show you step by step how to replace the disc drive.

Step 1 — Disc Drive



- Place the computer on its side so that the disc drive is facing up.
- Push in the release lever shown.

Step 2

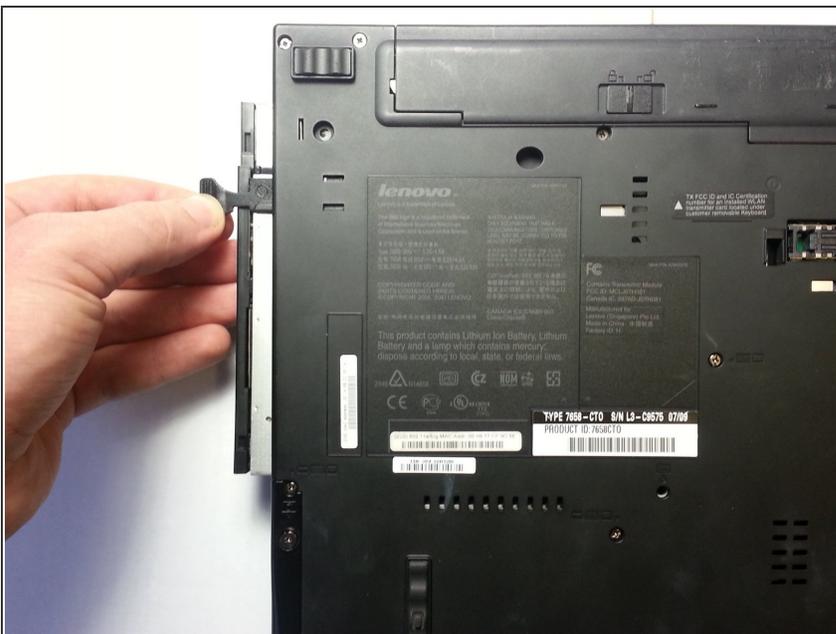


- Once the tab pops out, pull it away from the computer to release the disc drive.

Step 3




- Pull the disc drive away from the laptop to fully remove it.

Step 4

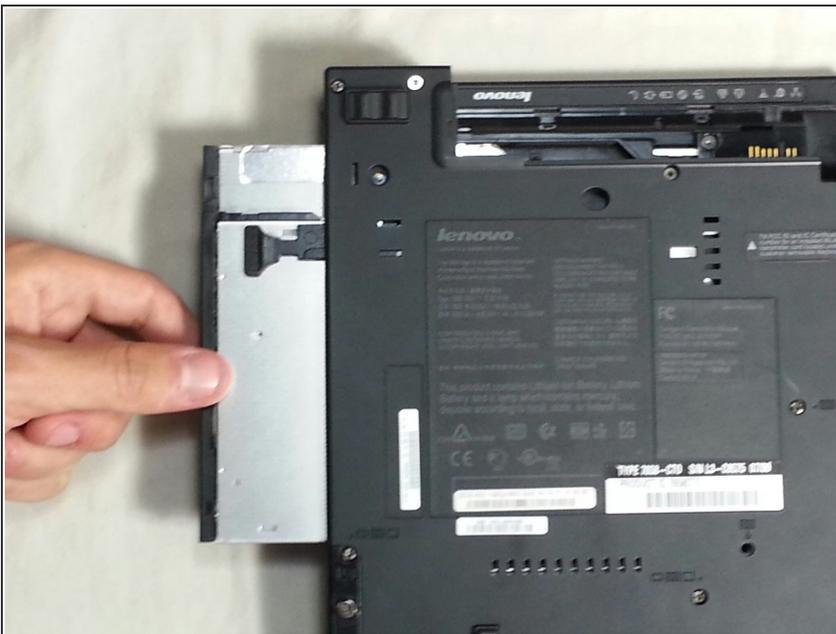

- Insert new disk drive back into laptop

Step 5

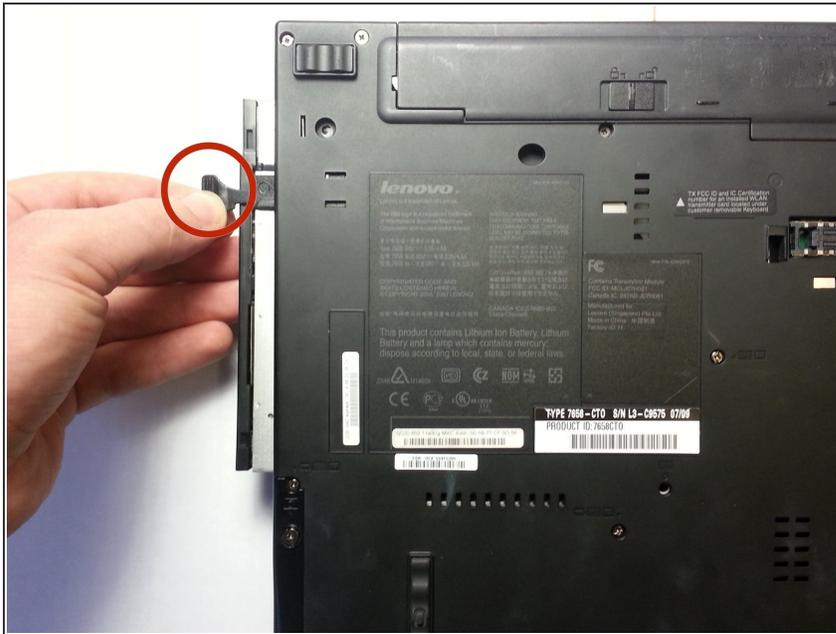

- Be sure to push the pull tab in as shown in the picture.

To reassemble your device, follow these instructions in reverse order.