



Asus Eee PC 1008ha Screen Replacement

Replace a cracked or malfunctioning screen on your Asus Eee PC 1008ha.

Written By: Michael Dooley



INTRODUCTION

This guide will take you through the steps of replacing the screen.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery




- Using the plastic opening tool, carefully pry the top panel from the base.

Step 2

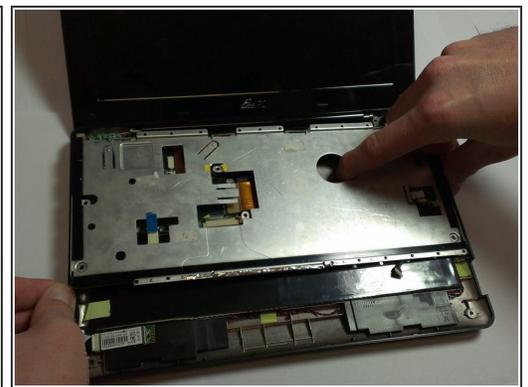



- Lift the side of the keyboard.
- Disconnect the attached ribbon located underneath the keyboard.
- Place your index finger in the hole on the right side of the keyboard tray and lift the tray.

Step 3

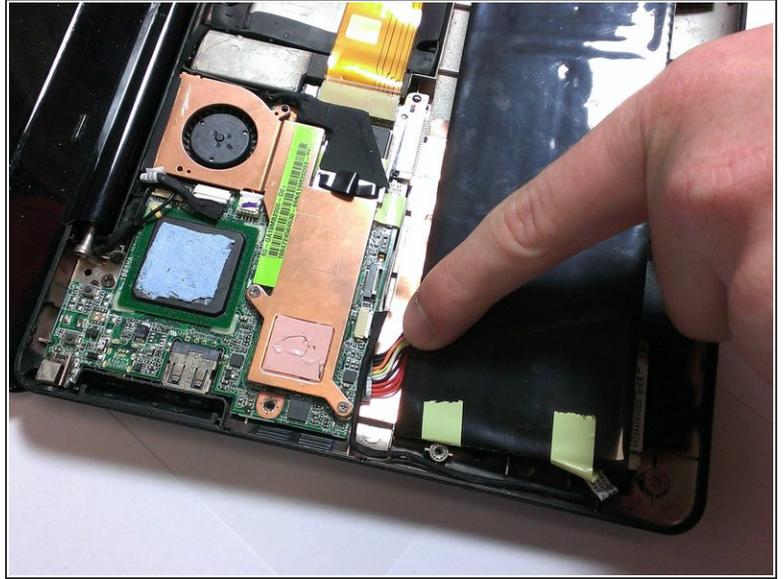

- Use your fingers to lift the battery and gently disconnect the wires from the base.

Step 4 — LCD Screen

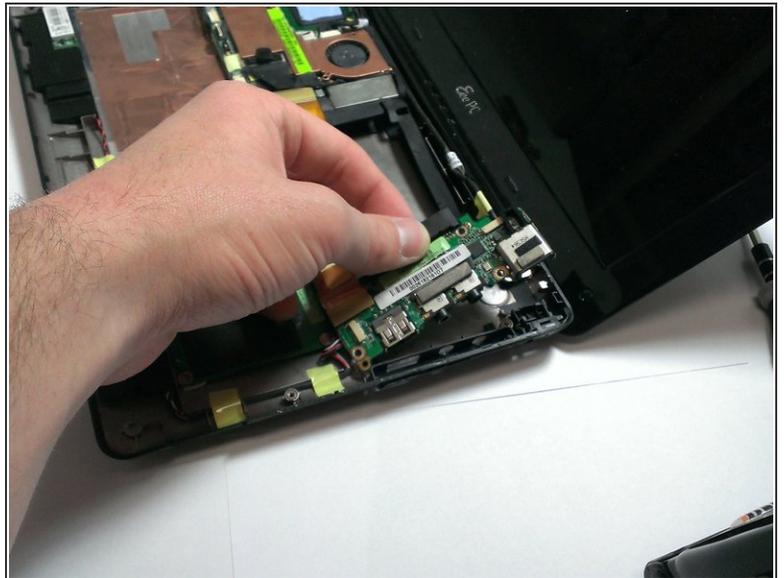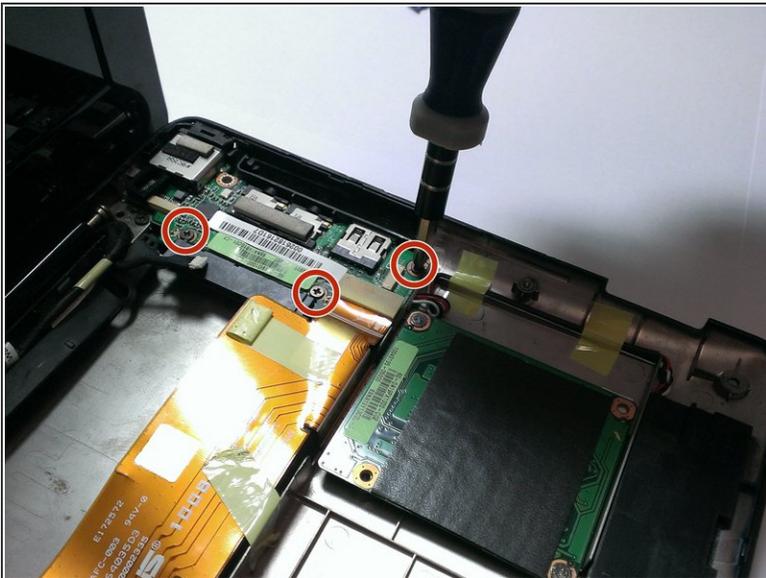


- Using the Phillips #00 screwdriver, unscrew the 4mm screws from the rightmost circuit board.
- Carefully pull the circuit board away from side of device base.

Step 5




- Using the Phillips #00 screwdriver, unscrew the 4mm screws attaching screen to base from both sides.
- Gently lift the screen portion from the base.

Step 6

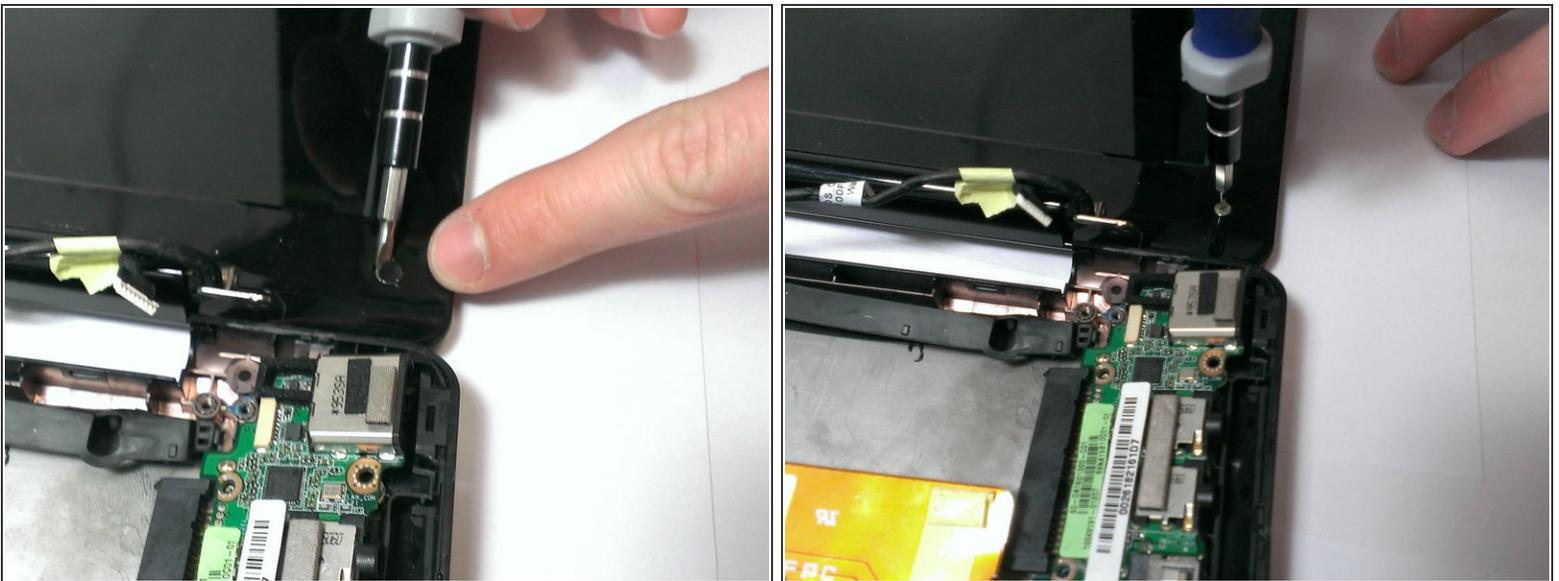


- Using the Plastic Opening Tool, pry the six small chits from the face of the screen portion.
- Using the Phillips #00 screwdriver, unscrew the two 2mm and four 4mm screws from underneath the chits.

Step 7

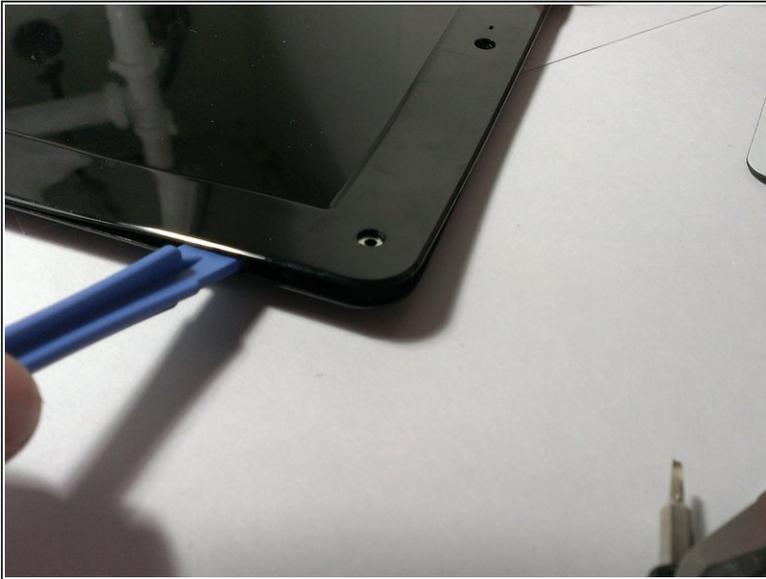

- Slide the Plastic Opening Tool under the edge of the screen bezel to release the front panel of the screen.

Step 8

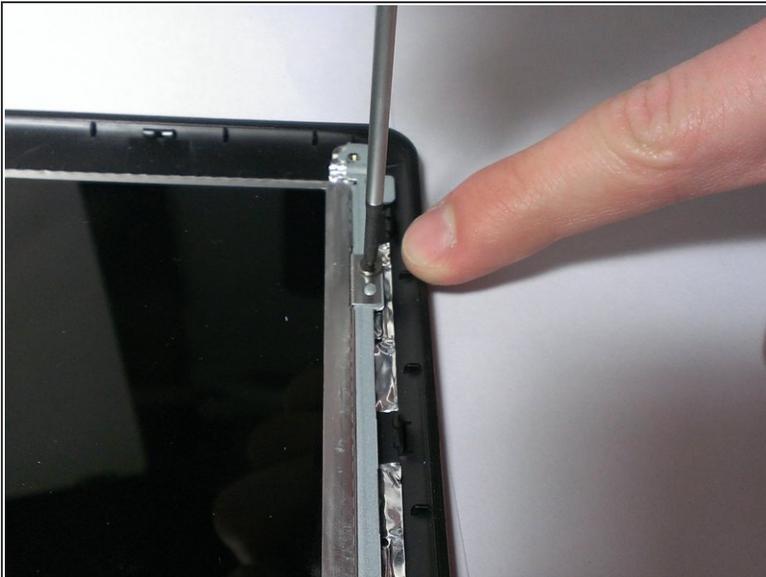

- Using the Phillips #00 screwdriver, unscrew the 2mm screws from the perimeter of the screen.
- Use your fingers to hold the screen and carefully lift it from the base.

Step 9



- Use your fingers to peel back the adhesive tape located on the back of the screen.
- Disconnect the wire from the screen.

To reassemble your device, follow these instructions in reverse order.